
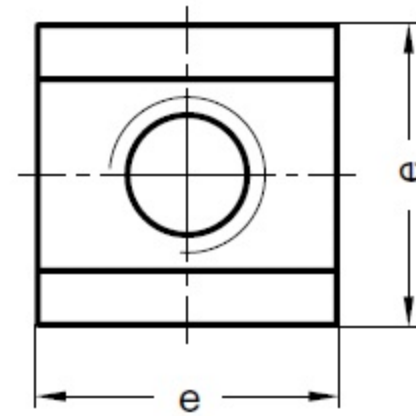


DIN 508 T-Nutensteine

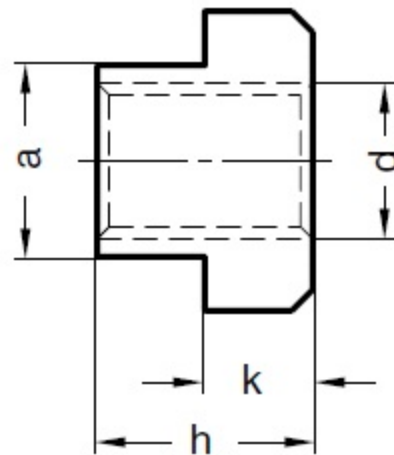


$a \begin{smallmatrix} -0,3 \\ -0,5 \end{smallmatrix}$	d		e	h	k	für T-Nuten DIN 650
5	M 4	—	$9 \begin{smallmatrix} -0,5 \end{smallmatrix}$	6,5	$3 \begin{smallmatrix} -0,3 \end{smallmatrix}$	5
6	M 5	—	10	8	$4 \begin{smallmatrix} -0,5 \end{smallmatrix}$	6
8	M 6	—	13	10	6	8
10	M 6	M 8	15	12	6	10
12	M 10	—	18	14	7	12
14	M 12	—	22	16	8	14
16	M 12	M 14	25	18	9	16
18	M 16	—	28	20	10	18
20	M 16	M 18	32	24	12	20
22	M 20	—	35	28	14	22
24	M 22	—	40	32	16	24
28	M 24	—	$44 \begin{smallmatrix} -1 \end{smallmatrix}$	36	$18 \begin{smallmatrix} -1 \end{smallmatrix}$	28

DIN	00508.100	RAZ 210
-----	-----------	---------

508

10

T-Nutensteine



T-Nutenschrauben
→ DIN 787

Innengew. M x Nutbreite a x e