









MONTAGEANLEITUNG

-  MONTAGEANLEITUNG
-  ASSEMBLY INSTRUCTION
-  DE INSTRUCTIE VAN DE ASSEMBLAGE
-  ISTRUZIONE DELL'ASSEMBLEA
-  INSTRUCCIÓN DE ASAMBLEA
-  INSTRUCTION DE MONTAGE
-  NÁVOD K MONTÁŽI
-  MONTERINGSANVISNING

-  MONTAJ TALIMATI
-  ASENNUSOHJE
-  BRUGSANVISNING
-  BRUKSANVISNING
-  UPUTE ZA MONTAŽU
-  NAVODILA ZA MONTAŽO
-  SZERELÉSI ÚTMUTATÓ
-  INSTRUCIUNI DE MONTAJ



Modell-Nr.

70310

ART.-NR. FRONT KORPUS

70311  Silber

70312  Silber

70314  Silber

70317  Silber

70316  

Friedrich Küpper GmbH
Friedrich-Küpper-Weg
54570 Berlingen
Deutschland

Telefon +49 (0) 65 91 - 95 42 0
Telefax +49 (0) 65 91 - 95 42 17
E-Mail info@friedrich-kuepper-gmbh.de
Internet www.friedrich-kuepper-gmbh.de

EINZELTEILE / PIECES

A

2x



400 mm x 200 mm

E

1x



600 mm x 200 mm

F

1x



600 mm x 200 mm

K

1x



595 mm x 400 mm

M

1x



560 mm x 375 mm

P

6x



130 mm x 100 mm x 50 mm

R

12x




130 mm x 130 mm x 70 mm

BEUTELINHALT / BAG CONTENT



BENÖTIGTES WERKZEUG / NEEDED TOOLS

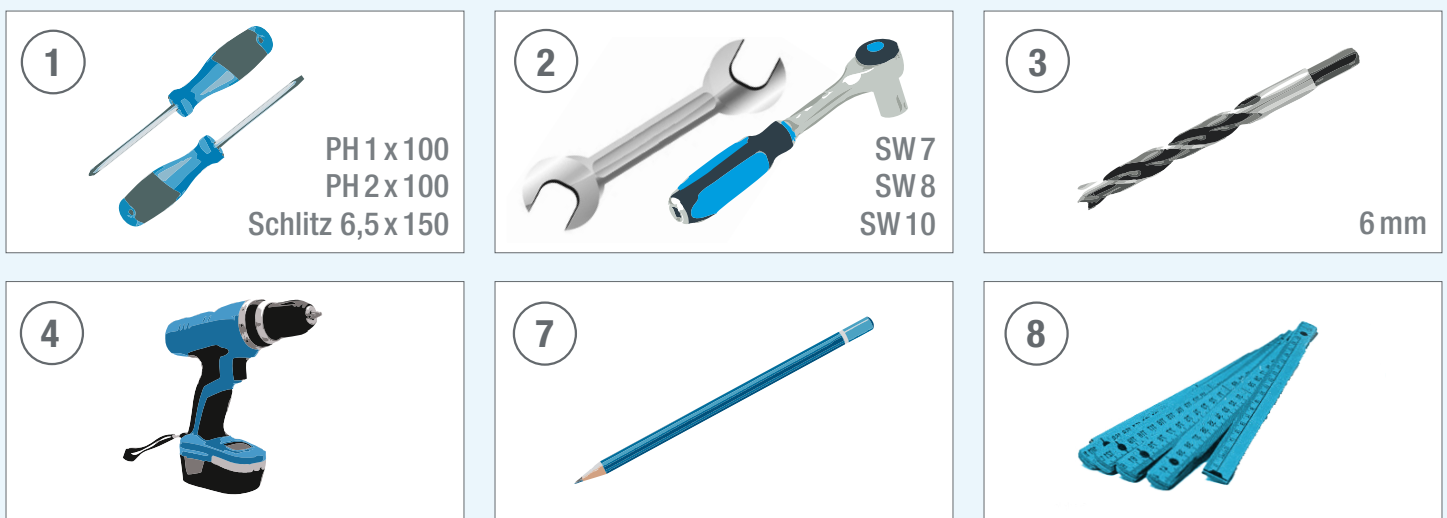


1.



2.  2x M5  2x M5 x 10  2x 5,3MM

 2 SW 8  1 PH 2X 100

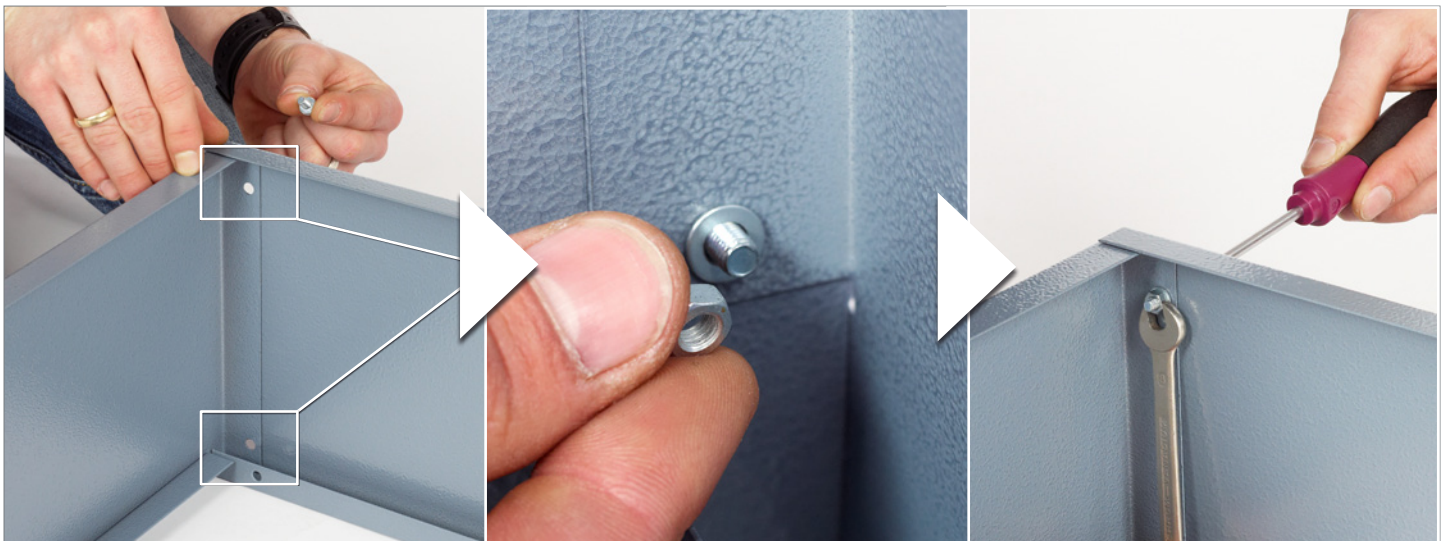

3.




4.

2x M5 2x M5 x 10 2x 5,3 MM


② SW 8 ① PH 2 X 100



5.

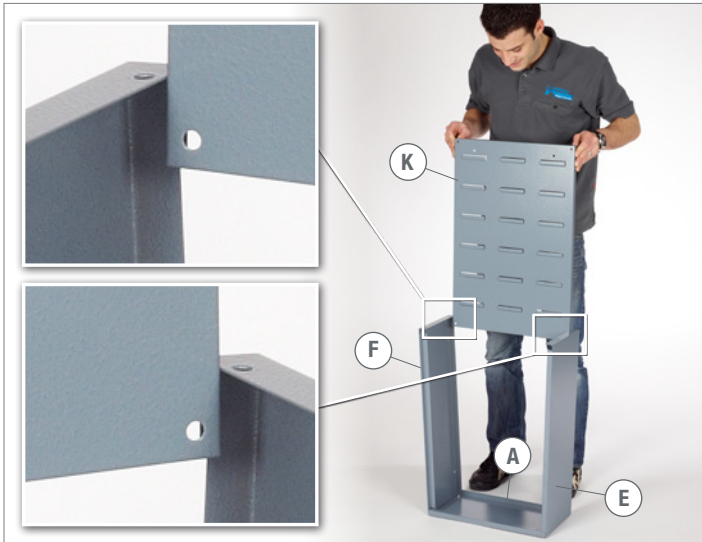

6.

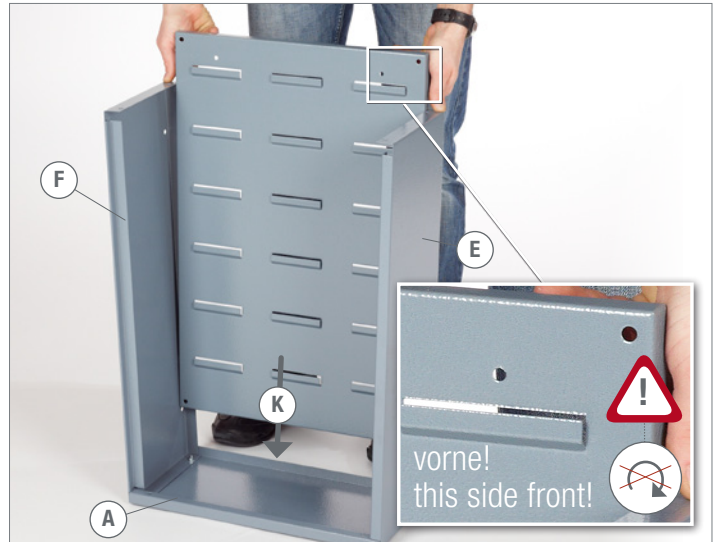

7.

4x M5 4x M5 x 10 4x 5,3 MM ② SW 8 ① PH 2 x 100



8.



9.


4x M5

4x M5x10

4x 5,3MM

②  SW 8

①  PH 2x100

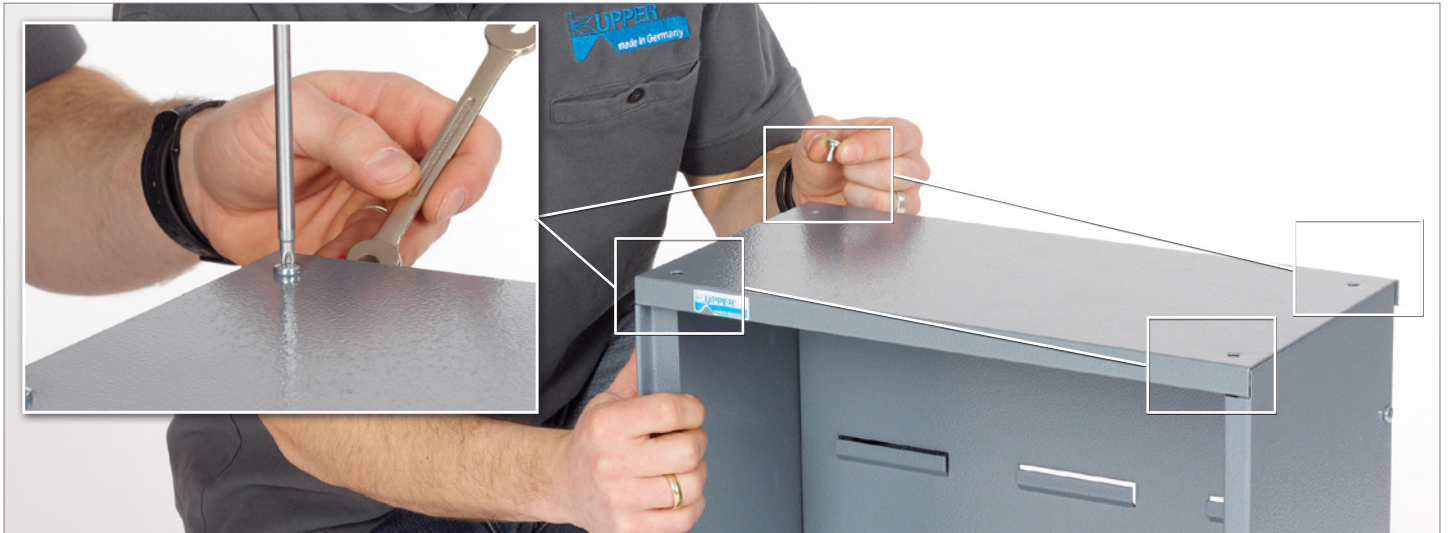

10. WICHTIG / IMPORTANT

vorne! / front!




11.




12.  1x  1x 6x12


 ① Schlitz 6,5 x 150

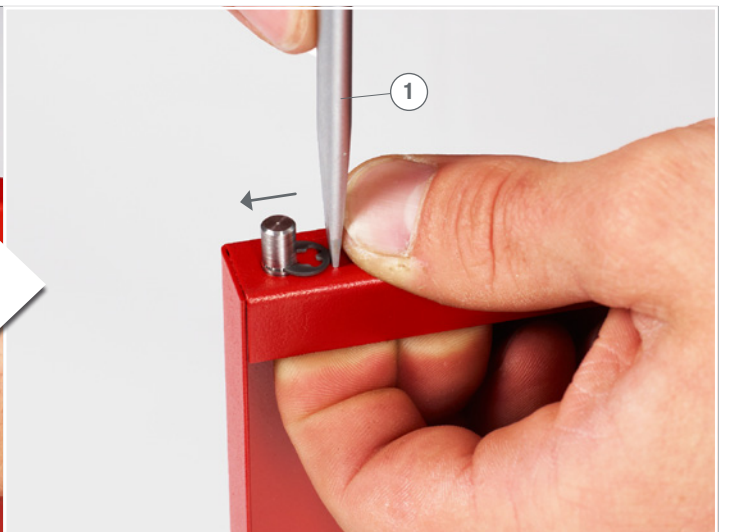

13.  1x 6,4 mm

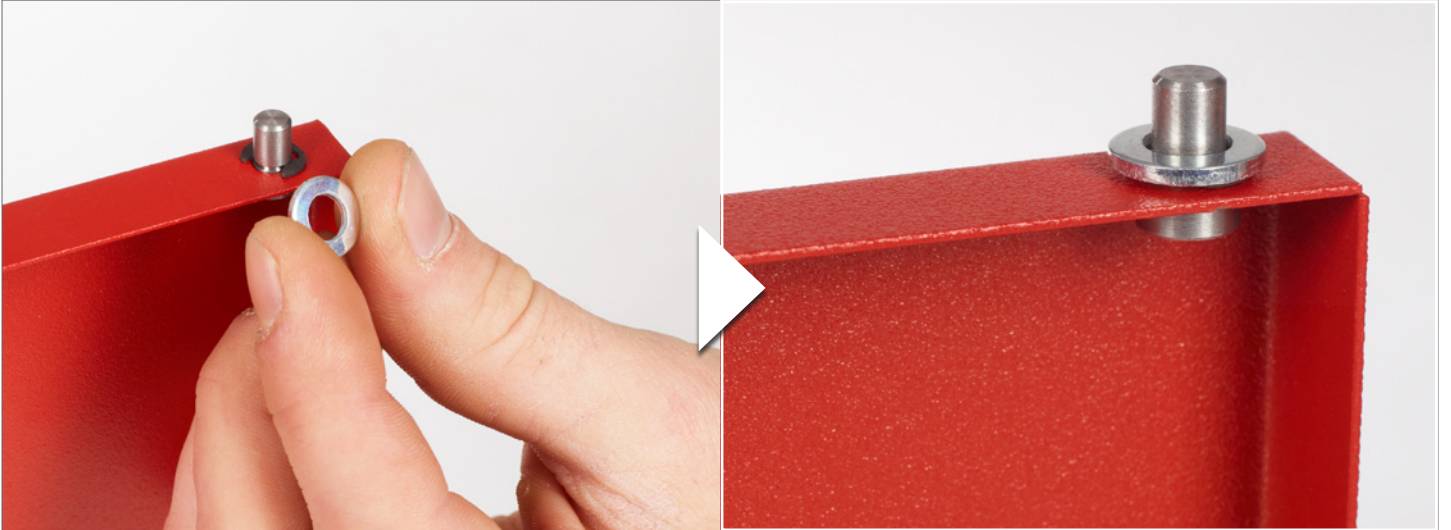


14.  1x  6x12

 ① Schlitz 6,5 x 150




15.  1x 6,4 mm

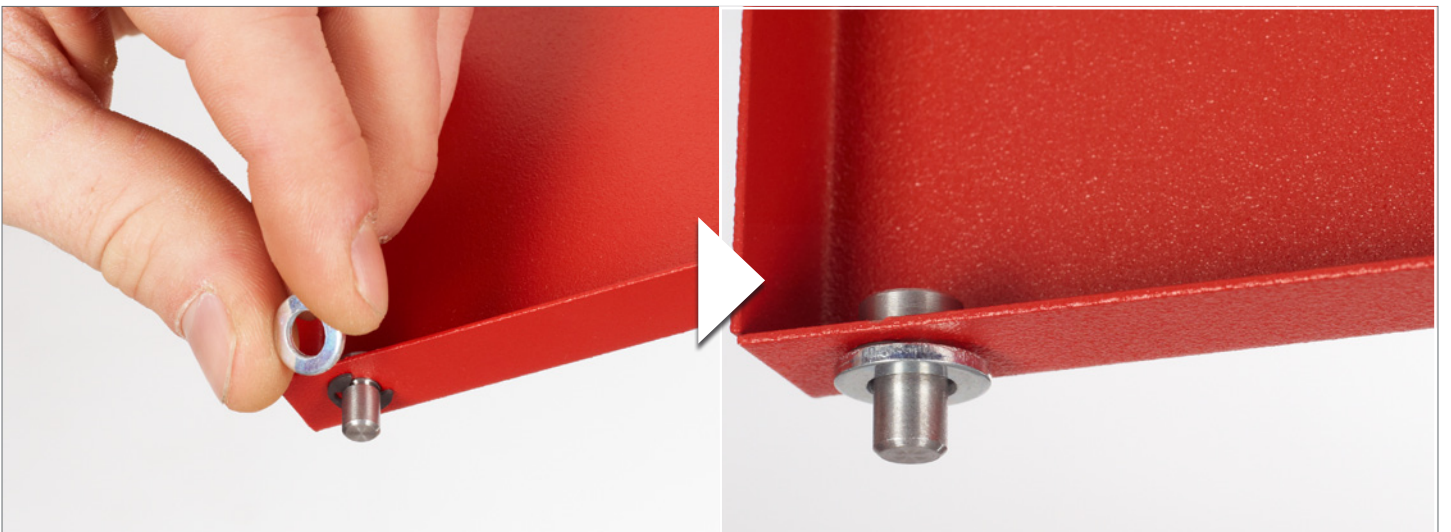

16.




17.

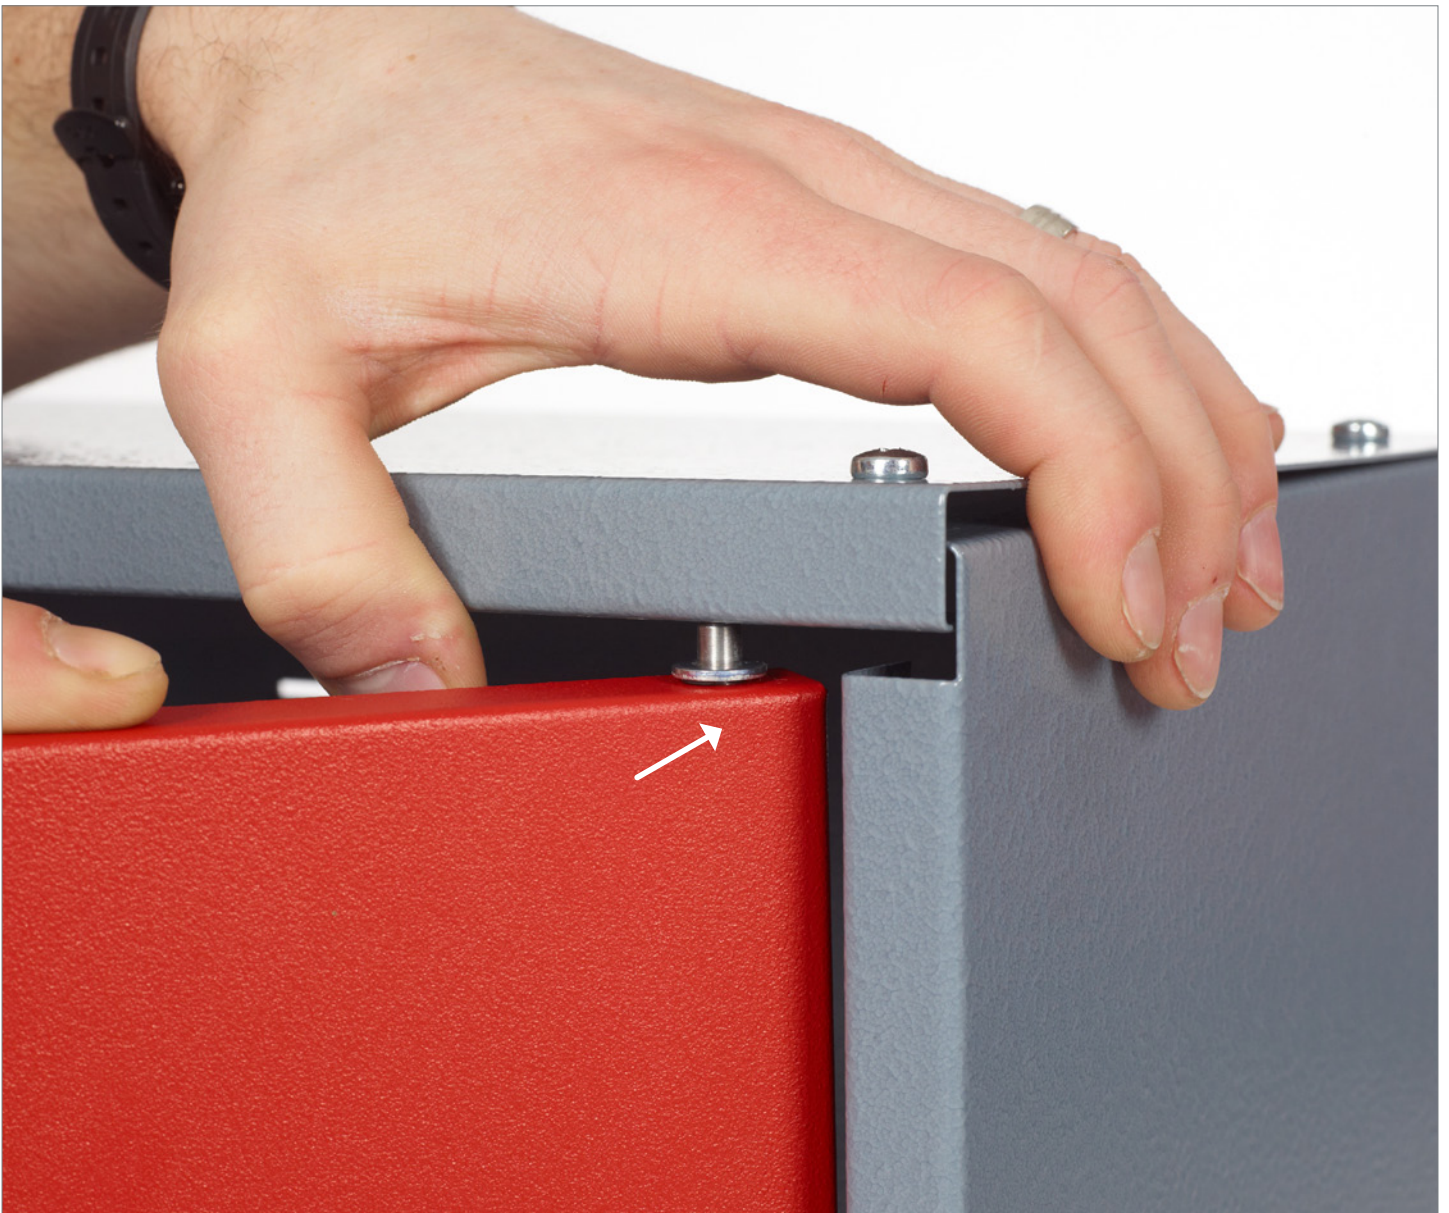


ZU SCHRITT 10. / IN ADDITION TO STEP 10 .

②  SW 8 ①  PH 2x100

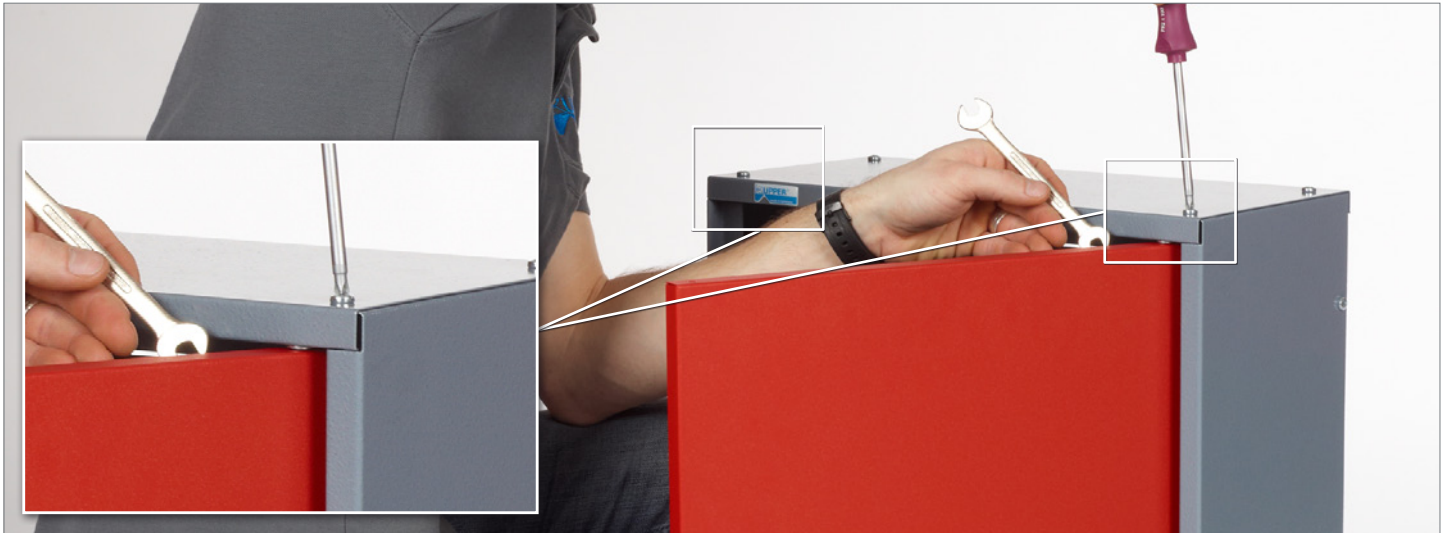

18.

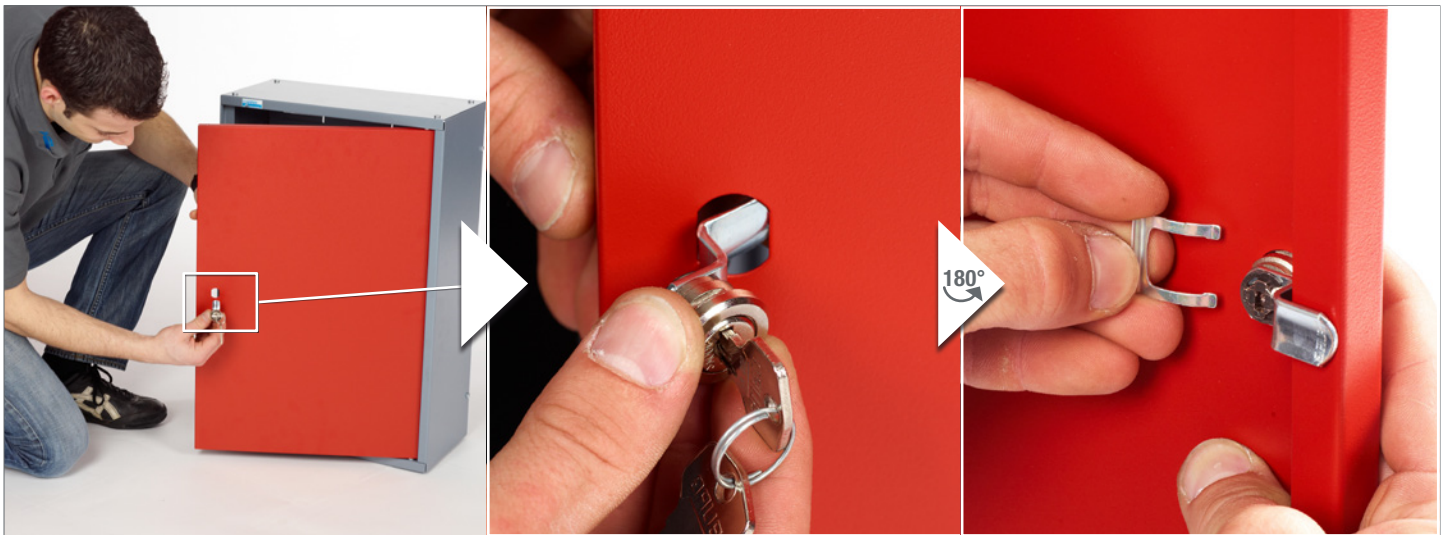


19.



20.




A.  

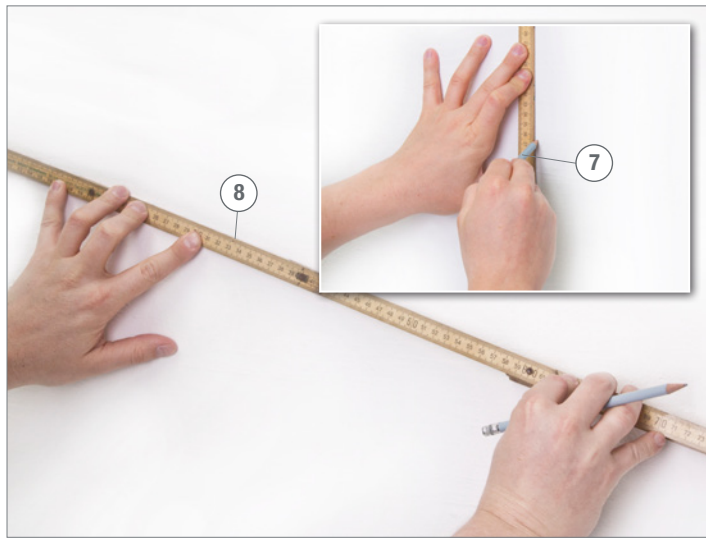

B.  
4x 6 mm 6 mm



C. 
2x 4,5x60

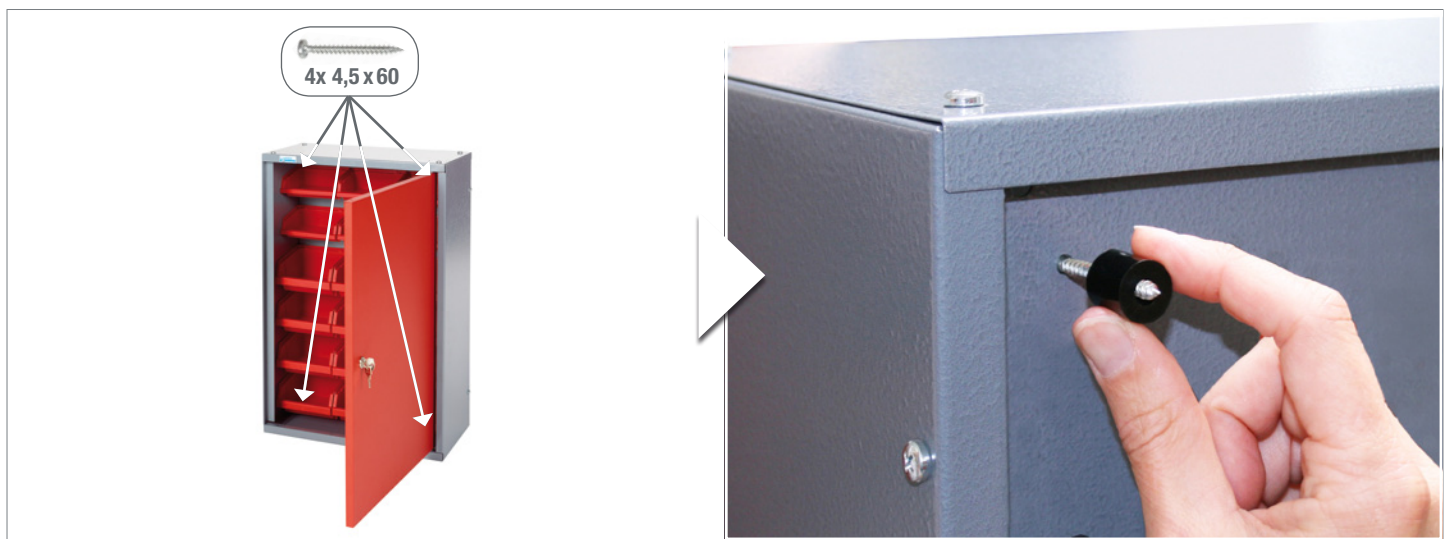

Modell-Nr.

70310