


ASSEMBLY INSTRUCTION


TINY xlr | Cable Connector - RT*FC-B & RT*FC-B-W

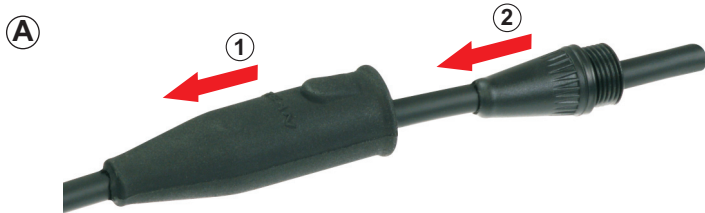


(A) Slide the rubber sealing (1) (RT*FC-B-W only) and the boot (2) onto the cable.



(B) Prepare cable as shown.

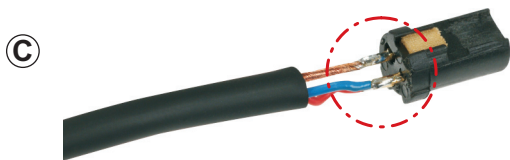


(C) Insert wires into the terminals and solder them.

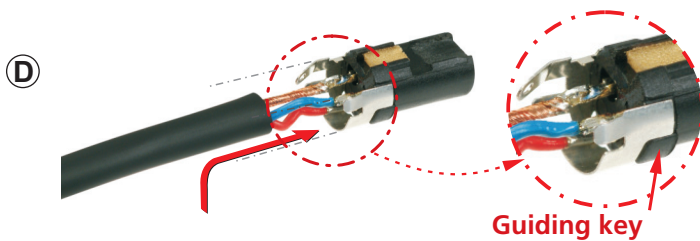

(D) Apply the grounding to the cable and position it on the insert.
Attention: Pay attention to the key.


(E) Grounding Option: Ground with housing, solder #1 to the solder lug of the grounding.

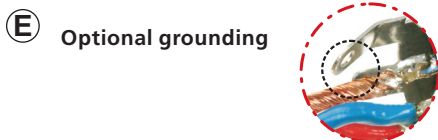


(F) Put chuck onto the cable.
Attention: Pay attention to the guiding key.



(G) Slide insert and chuck together into the housing.

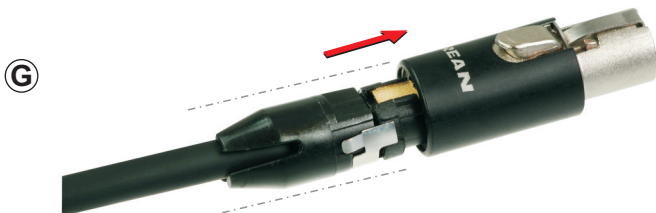

(H) Screw the bushing onto the connector. The RT*FC-B type is ready.

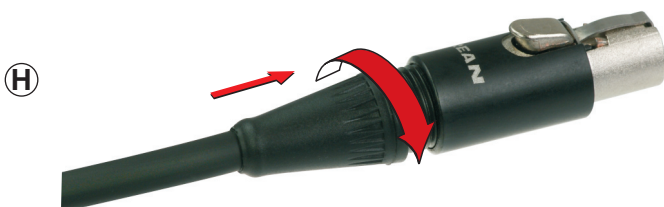

Rubber sealing assembly on page 2.

SINGLE BAG PACKAGING:

The rubber sealing can be easily applied by hand.




Attention: Pay attention to the position of the latch (see the picture).

► Finish



BULK PACKAGING:

For large quantity assemblies an assembly hose is supplied with bulk packaging (-D).

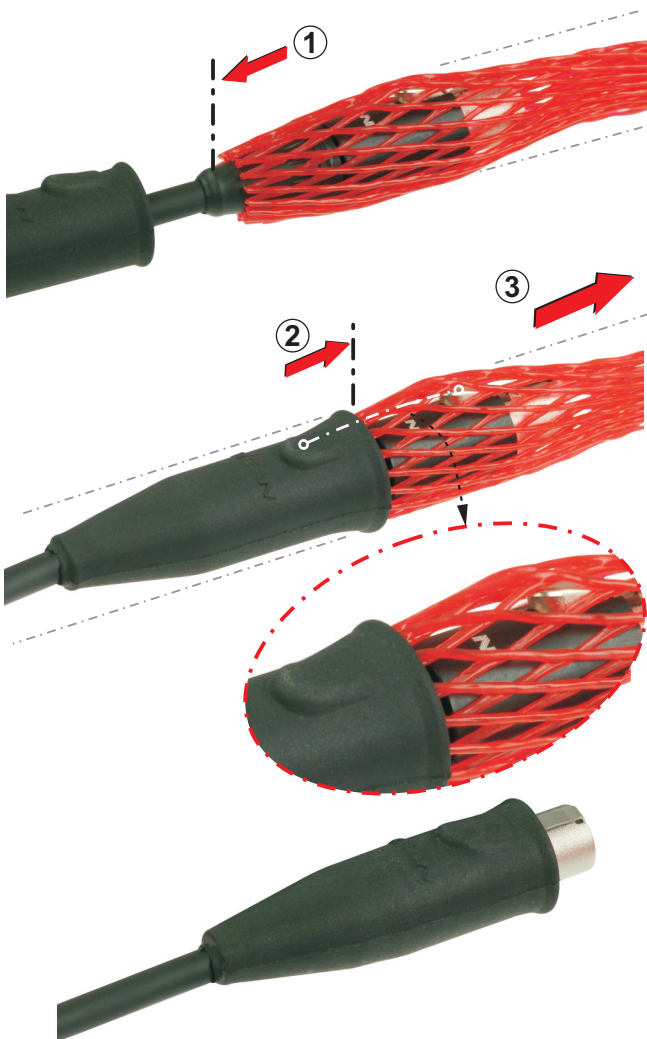

① Put the assembly hose onto the connector over the end of the boot (as shown in picture).

② Push the rubber sealing onto the assembly aid.

Attention: Pay attention to the position of the latch (see the picture).

③ Hold the cable and pull the assembly tool jerkily off the connector (the sealing jacket is pulled in position).

► Finish

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
 NEUTRIK USA Inc. USA T: +1 732 / 901 9488 F: +1 732 / 901 9608
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052