


METAL EARTH®

BLACK PEARL INSTRUCTIONS

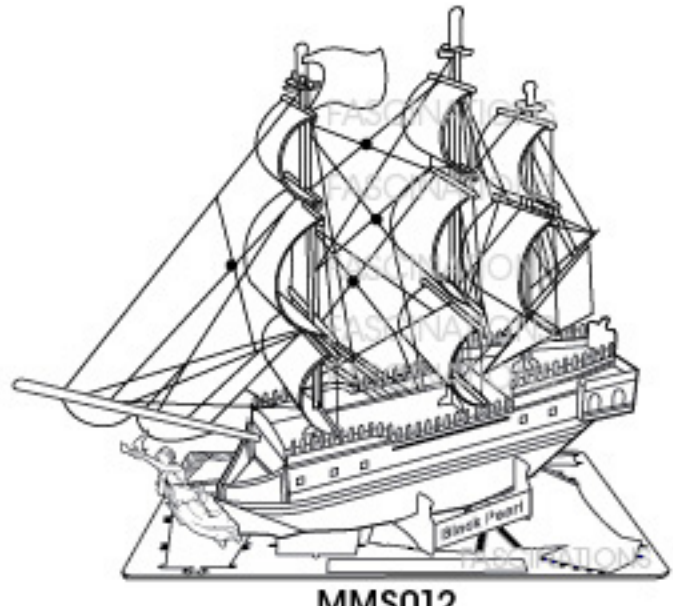

360°
view



It is highly recommended that you visit www.fascinations.com/metalearth360/mms012 too see the completed model before assembling your own.

Insertion tabs are inserted and then folded

Fold lines can be seen as shown here


Insertion holes

To create the best connections

- Insert tab and bend 90 degrees for most visible areas
- ▲ Insert tab and twist 90 degrees is best in some areas to ensure a tight connection

Needle nose pliers are helpful for assembly

Metal sheet

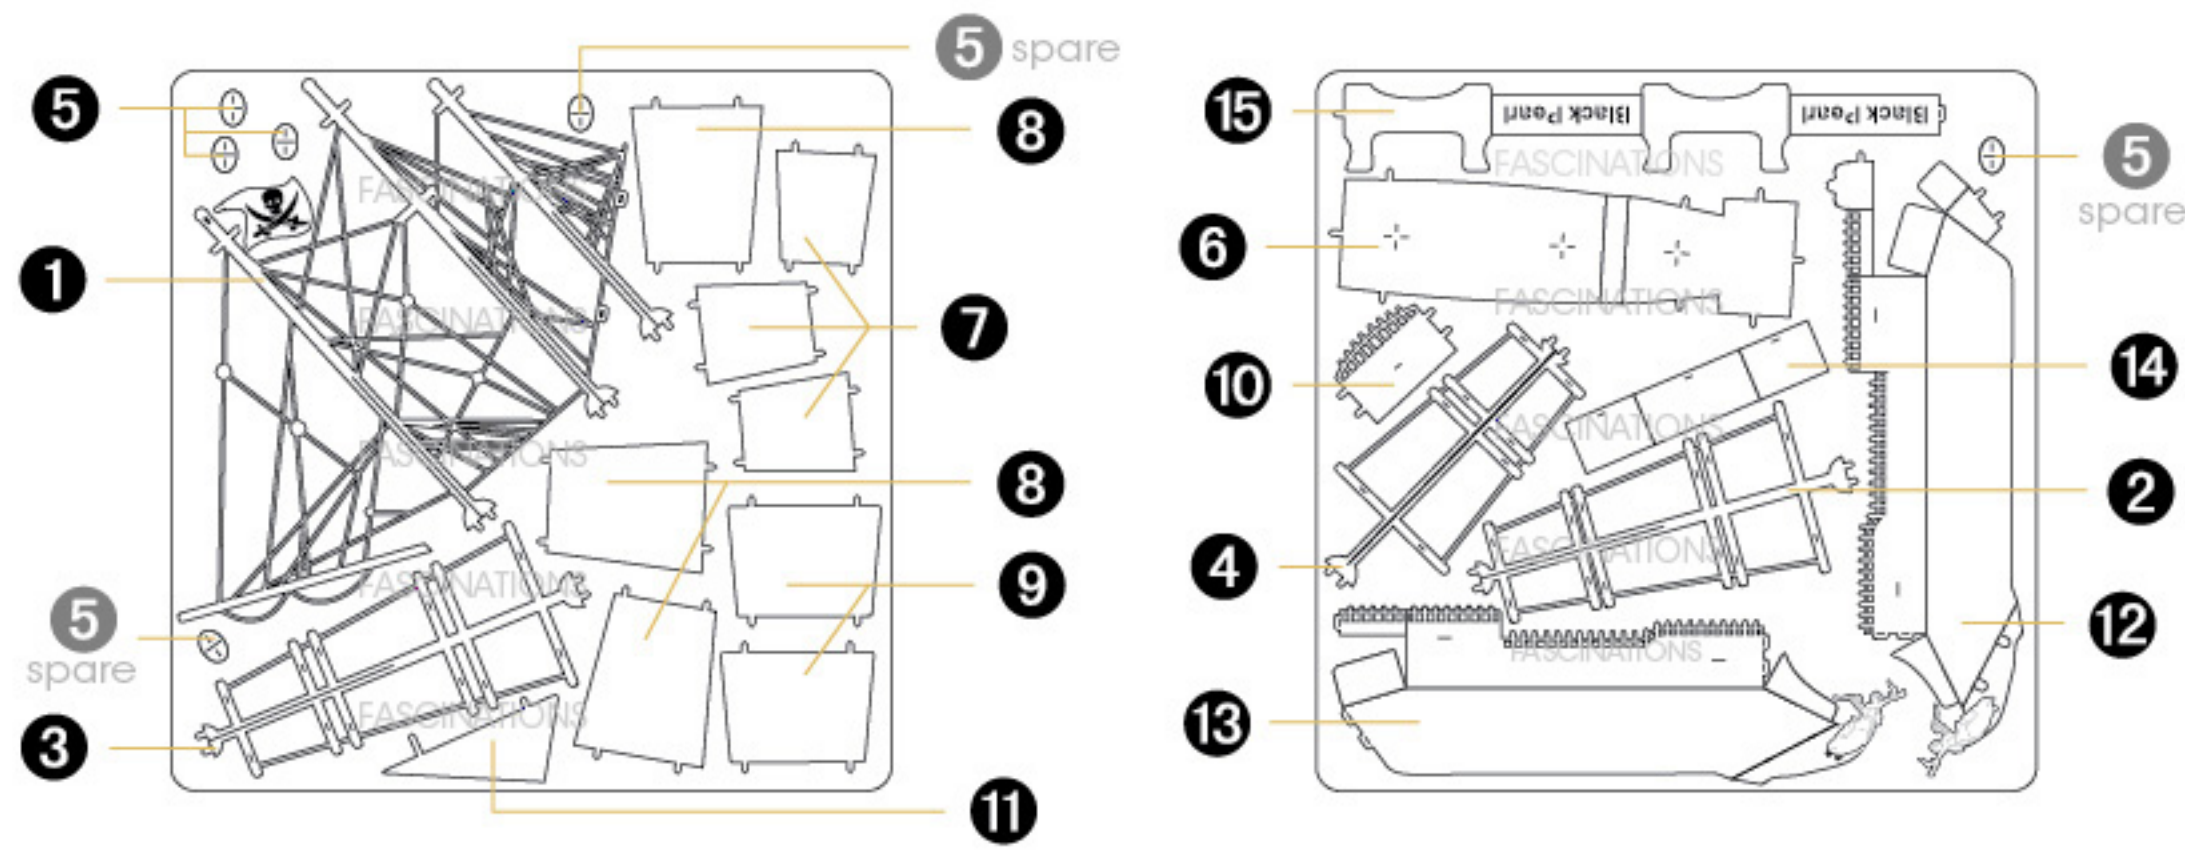

7 x 3

7, 8, 9 Use a pen or battery to bend the part.

8 x 3

9 x 2

12 13 As seen from the side to be horizontal bottom bow and stern to round up. Decreasing the width of the bottom so that it does not adjust to a circle to narrow and the last stand on a stand stability as well as a bad idea.

Notes:

In order to avoid possible injury from sharp edges, please carefully discard the metal sheet after parts have been removed.

Vestibulum imperdiet imperdiet erat vestibulum malesuada. In lectus est, viverra eget feugiat in, tincidunt vel metus. Phasellus vel quam a lorem ultricies sodales.

Donec eleifend justo vitae massa dapibus congue. Phasellus lorem libero, consectetur sit amet pellentesque viverra, tempor sed enim.

Mauris neque felis, lobortis eget volutpat a, ultrices ac mi.

Quisque volutpat ipsum sollicitudin sapien ultricies ut dictum mi blandit. Quisque erat turpis, venenatis eget semper ac, feugiat eu massa.

Assembly Flow Chart

Remove the parts necessary in numerical order, then assemble the parts.

