



Assembly Instruction Manual

Step 1




Strip the PVC Jacket in 30mm

Step 2

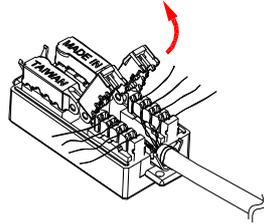


Open up tooless caps and arrange the conductors into IDC according to the color code label. Fold screen and ground around the cable and touches cable holder.

Step 3

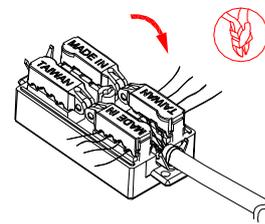


Press the caps down after conductors are in position. Cut off the remaining conductors.

Step 4

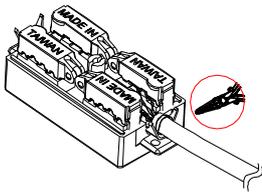


Crimp the cable holder, cut the remaining screen and ground.

Step 5

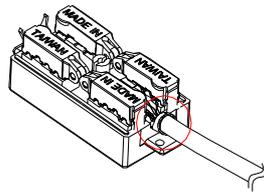


Cable covered with cable holder

Step 6

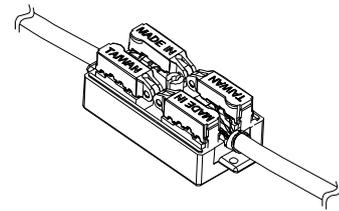


Do the same for another side.

Step 7

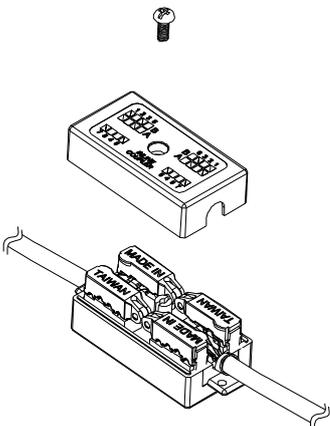

Cover up with Inline Coupler Tooless Cap and screw them together.

Step 8

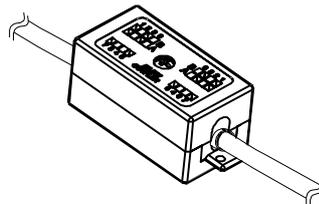

Done