



# CAT.6 Plug Assembly Instruction




Tools :  
Stripper, Cutter , Pliers, and Crimping Tool

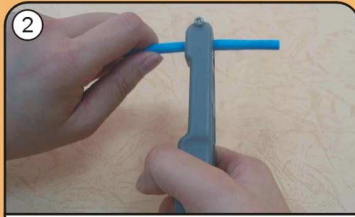


To strip the PVC Jacket in 3cm

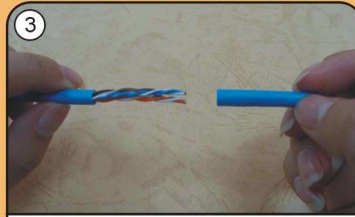


To remove the jacket

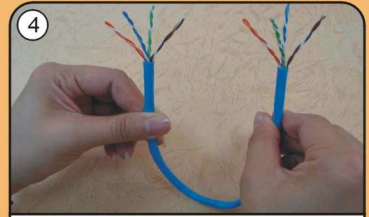


To check the cable

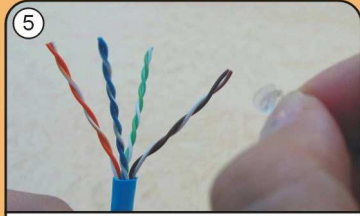

To Get H\_Divider

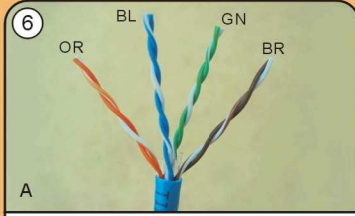

To put H\_divider into the conductors .(blue pair and green pair are in opposite direction)

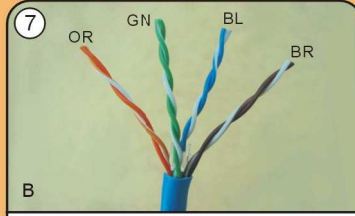


B




To Straighten the conductors




To cut off conductors neatly

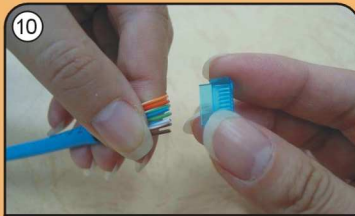


To arrange manage tool  
The blue arrange manage tool is optional

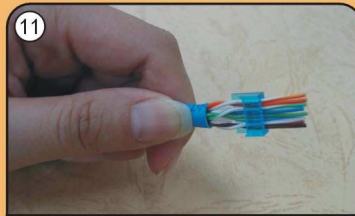

To put manage tool into straighten conductors

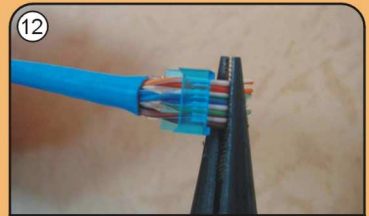


To pull the conductors lean gently against the fulcrum by pliers until the manage tool flush with H Divider

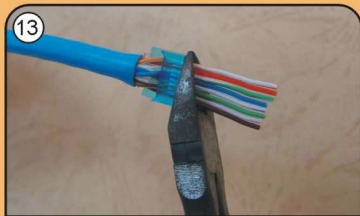


To cut the conductors neatly.




To see after cutting the conductors

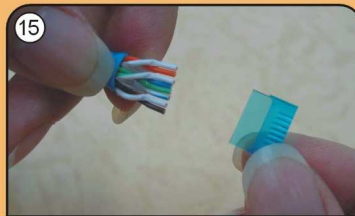


To take off the manage tool

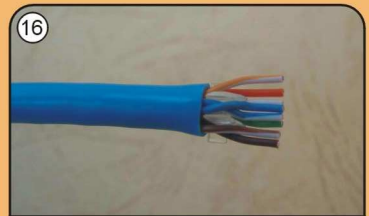

To see after taking off the manage tool

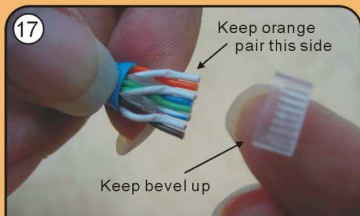

To arrange the insert

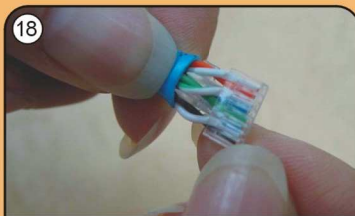


To put the insert into the conductors neatly.



To arrange the plug body




To put the plug body into the insert/cable

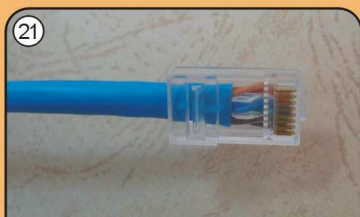

To use the crimping tool to crimp the plug body.



Assembly Boot (Optional)  
We also available this boot

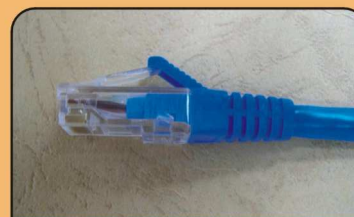

Finished