


① Product accessories

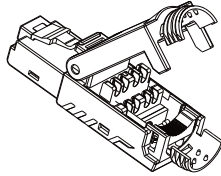


Part 1: 5.5-8.5 mm




Copper foil paper

JACK PIN DESIGNATIONS		TIA/EIA T568A	TIA/EIA T568B
	1	White/Green Green	White/Orange Orange
	2	White/Orange Blue	White/Green Blue
	3	White/Blue Orange	White/Blue Green
	4	White/Brown Brown	White/Brown Brown
	5		
	6		
	7		


② 2.1 Insert the network cable into the nut from the end

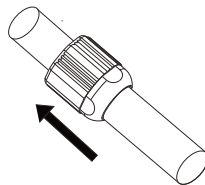

2.2 Peel off the cover of the 1.2-inch network cable

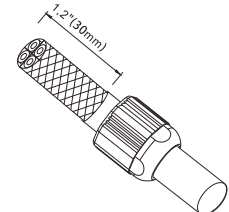


2.3 Fold back braid and drain wire

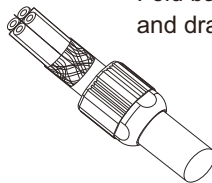

2.4




Wrap a layer of copper foil

Copper foil paper

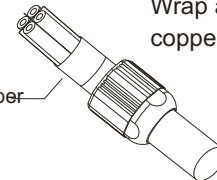


③ Fan out all four twisted pairs, following the color coding label and allocate each conductor into proper slots on wiring cap. Trim the ends of conductors.


Wiring label

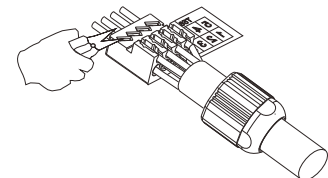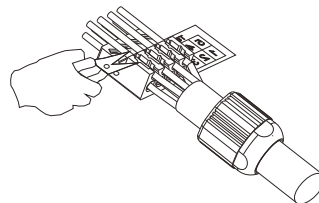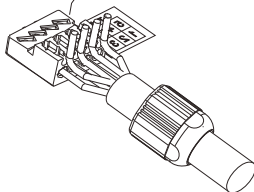


④ Tear off excess stickers along the dotted line

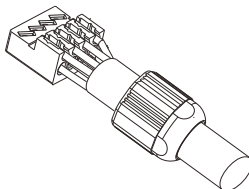

⑤ Place wiring cap on plug

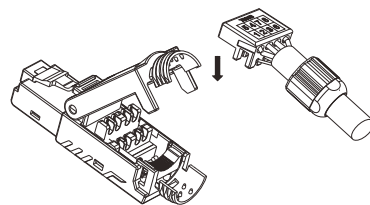

⑥ Place the wiring cap onto plug, use plier to clamp wiring cap until it completely snaps-in to effect the connection

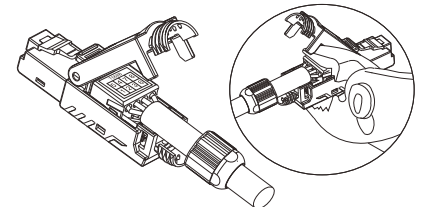

⑦ Close the plug cover, make sure the power cord makes proper contact with the ground clip on the plug, and tighten the nut

