Barkan EV
Level up your EV charging™

Assembly Instructions



59” / 150cm Protective EV Charging Cable Wall Arm for Level 3 DC Fast

OVER 35 YEARS OF INNOVATION

PREMIUM


If you are satisfied with the product, please give us a **5-star** rating on the website where you bought it. If you are not happy, please contact us at **www.barkanmounts.com/support**, and we will solve the problem for you.

For more information: **www.barkanmounts.com**



Safety instructions

and installation warnings (provided separately) must be read in full, before assembly.

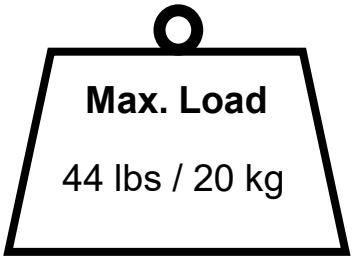




Download assembly instructions with text

Barkan Product Lines

Innovative mounting solutions for EV charging, TVs, computers & tablets, and furniture

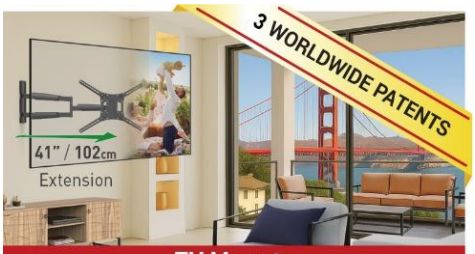

TV Mounts
Including Giant, Extra-Long, & Antenna Mounts



Protective EV Charging Cable Wall Arms



EV Charger Stands



TV Stands & Carts



Furniture



Computer Monitor Mounts



Tablet Mounts & Stands




Additional Mounts & Shelves



Indoor Antennas


Included Parts not to scale

A1 Arm

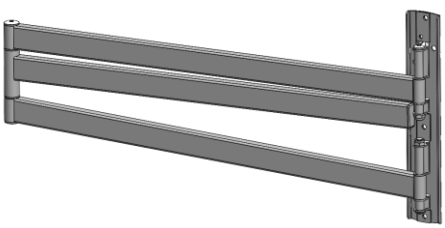


x1

B1 Cable holder

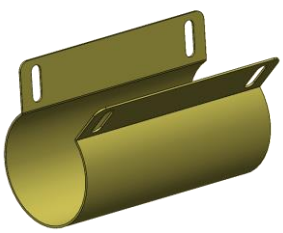

x2

Arm Plate Covers

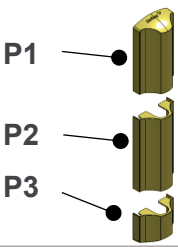

x1

Z1-Y1

M6 x 35 mm




x4

Z2-Y2




x8

Z3-Y3

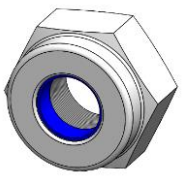

x4


Z4-Y4

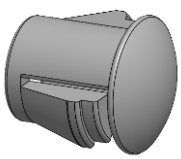

x8



Required Tools

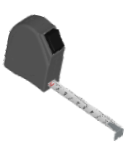



No.
2+3








13/32" \ 10 mm

1

Connecting to Barkan's Heavy-Duty Outdoor Column


Required Parts not to scale

Assemble the Barkan's Heavy-Duty Outdoor Column according to the assembly instructions.

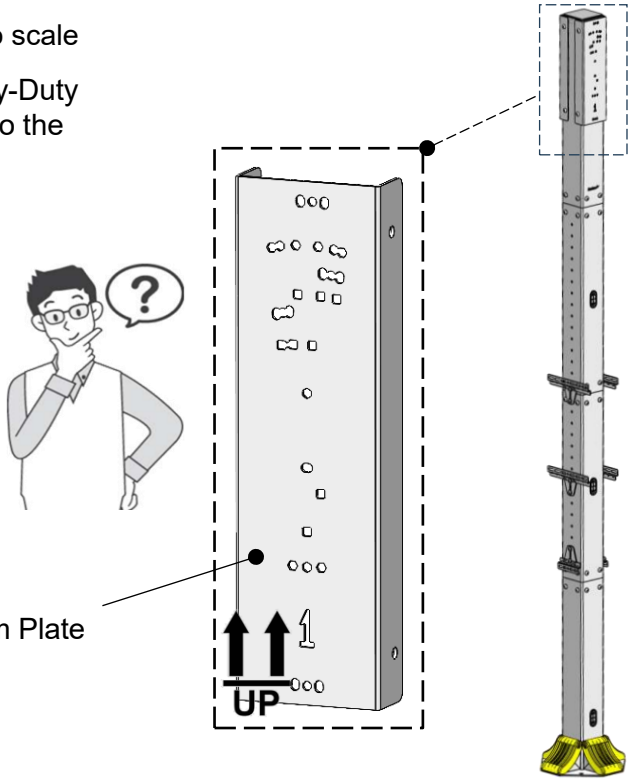

2

Connect the Arm Plate G1 to the A**rm A1** using the appropriate Barkan's Column kit**.** Connect the Arm Plate **G1** to Barkan's Column according to its assembly instructions.

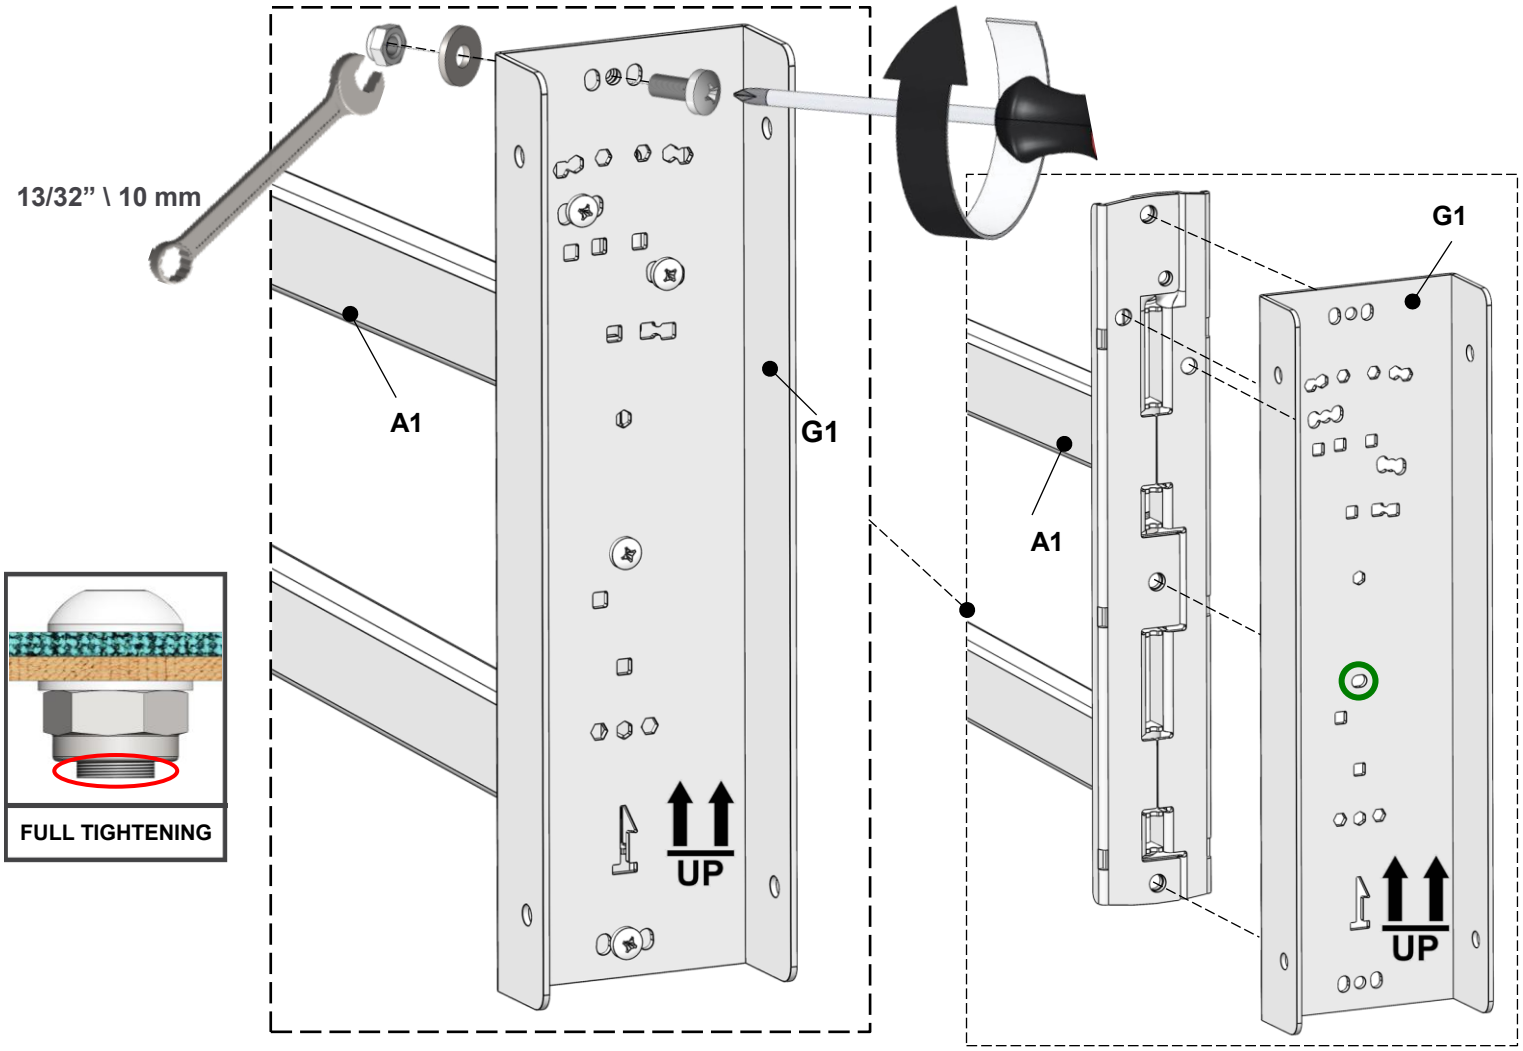



3


Weight test:

Apply force downwards on the Arm A1.
Ensure that the Arm A1, Arm Plate G1, and other connections are securely in place.



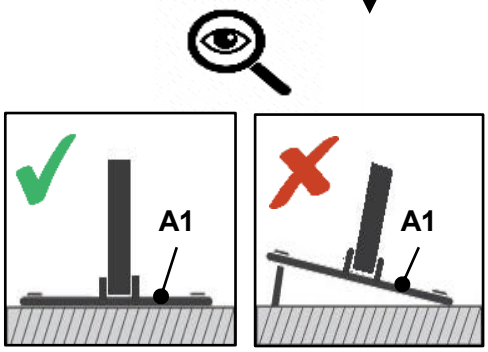

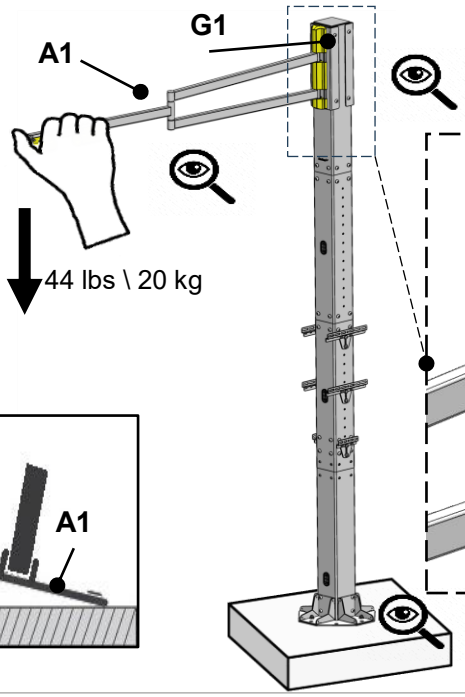


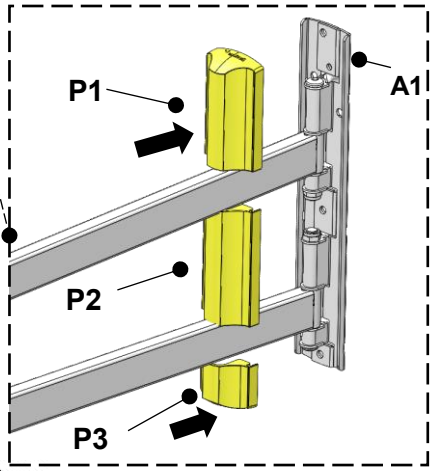



Attach the Arm **plate covers P1-P3** to the Arm A1.

4

Select the appropriate holes for the cable diameter and attach the cable holder B1 to the Arm A1 on one side. Bend it and secure it on the other side with a hexagonal nut.
Make sure the charging handle is above the ground level before tightening; close any unused holes with plugs.

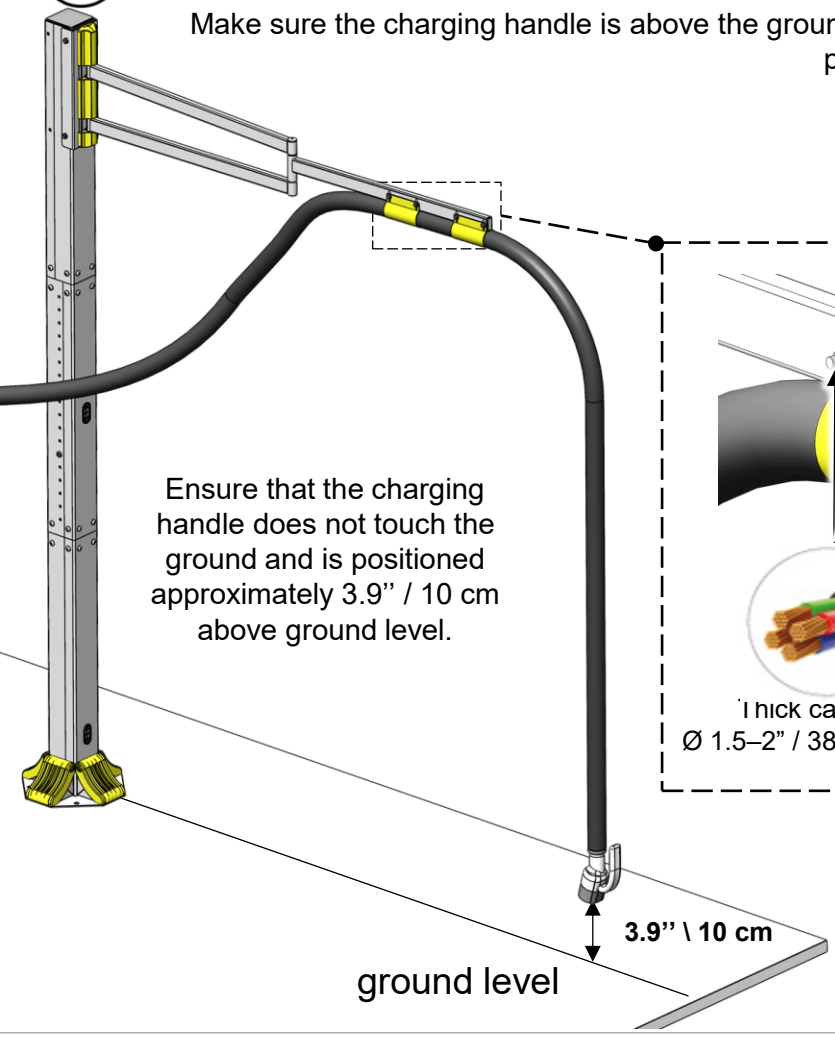

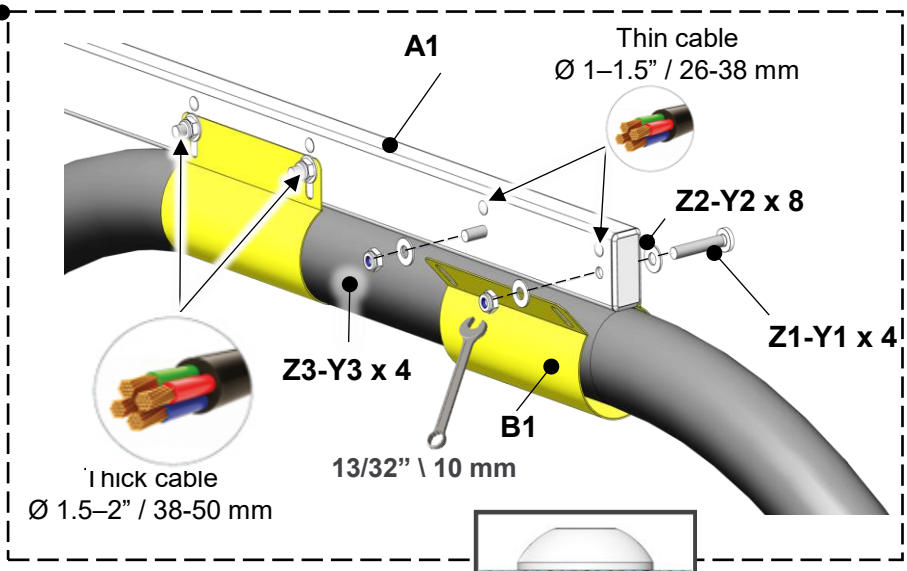


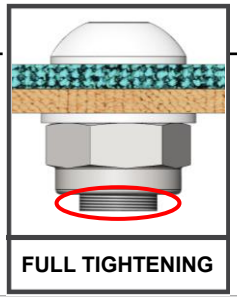




Biannual safety inspection

Secured to the column

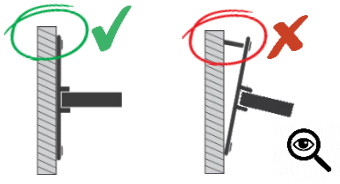

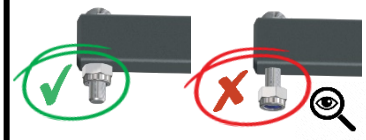

Tightened bolts

Lubricated hinges

