


Maße für Scheiben und Ringe


Stellringe

DIN 705

Stellringe

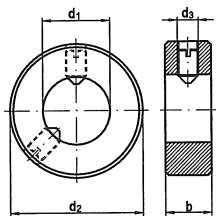

Form A = mit Gewindestiften

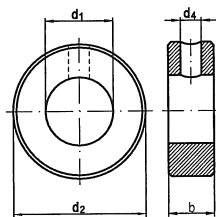

Form B = mit Bohrung für
Kerb- oder Kegelstift

Maße	4	5	6	8	9	10	12	13	14
b	5	6	8	8	10	10	12	12	12
d ₂	8	10	12	16	18	20	22	22	25
d ₃	M2,5	M3	M4	M4	M4	M5	M6	M6	M6
d ₄	1	1,5	1,5	2	2	3	4	4	4
A mit Stiften ¹	M2,5x4	M3x4	M4x5	M4x6	M4x6	M5x8	M6x8	M6x8	M6x8
B für Stifte ²	1x8	1,5x10	1,5x12	2x16	2x16	3x20	4x22	4x22	4x24

Maße	15	16	17	18	20	22	24	25	26
b	12	12	12	14	14	14	16	16	16
d ₂	25	28	28	32	32	36	40	40	40
d ₃	M6	M6	M6	M6	M6	M6	M8	M8	M8
d ₄	4	4	4	5	5	5	6	6	6
A mit Stiften ¹	M6x8	M6x8	M6x8	M6x8	M6x8	M6x10	M8x12	M8x10	M8x10
B für Stifte ²	4x24	4x28	4x28	5x32	5x32	5x36	6x40	6x40	6x40

Maße	28	30	32	34	35	36	38	40	42
b	16	16	16	16	16	16	16	18	18
d ₂	45	45	50	50	56	56	56	63	63
d ₃	M8	M8	M8	M8	M8	M8	M8	M10	M10
d ₄	6	6	8	8	8	8	8	8	8
A mit Stiften ¹	M8x12	M8x10	M8x12	M8x12	M8x12	M8x12	M8x12	M10x16	M10x16
B für Stifte ²	6x45	6x45	8x50	8x50	8x55	8x55	8x55	8x60	8x60

Maße	45	50	55	60	65	70	75	80	85
b	18	18	18	20	20	20	22	22	22
d ₂	70	80	80	90	100	100	110	110	125
d ₃	M10	M10	M10	M10	M10	M10	M12	M12	M12
d ₄	8	10	10	10	10	10	10	10	12
A mit Stiften ¹	M10x16	M10x16	M10x16	M10x16	M10x20	M10x20	M12x20	M12x20	M12x25
B für Stifte ²	8x70	10x80	10x80	10x90	10x100	10x100	10x100	10x110	12x120

Maße	90	100	110	120	125	130	140		
b	22	25	25	25	28	28	28		
d ₂	125	140	160	160	180	180	200		
d ₃	M12	M12	M12	M12	M16	M16	M16		
d ₄	12	12	12	12	16	16	16		
A mit Stiften ¹	M12x20	M12x25	M12x30	M12x25	M16x35	M16x35	M16x35		
B für Stifte ²	12x120	12x140	12x160	12x160	16x180	16x180	16x200		

¹ d₁ ≤ 70 ein Gewindestift mit Schlitz

¹ d₂ ≥ 75 ein Gewindestift mit Innensechskant

Verfügbare Abmessungen auf den folgenden Seiten:

Stahl/Stahl mit Oberfläche: 106 | Edelstahl: 448