



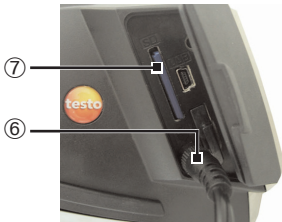

testo 875 · Thermal imager

Brief instructions


en

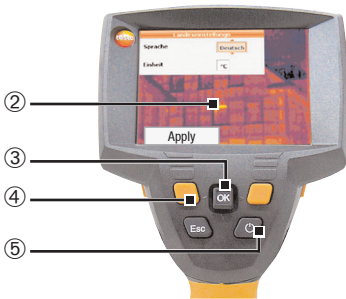

Commissioning

- 1 Push the **rechargeable battery** ① all the way into the rechargeable battery slot until this is flush with the bottom of the handle.
 - The thermal imager starts automatically.
- 2 Remove protective film from the **display** ②.
 - Instrument language (**Language**) and temperature unit (**Unit**) can be set:
- 3 Move **Joystick** ③ up / down to select the desired option.
- 4 Press **[OK]** ④.
- 5 Move **Joystick** up / down to change the setting.
- 6 Press **[OK]**.
- 7 Press **[Apply]** ④ function key to apply the settings.
- 8 Press **[Power]** ⑤ to switch off the thermal imager.
- 9 Connect **mains unit** (☎) ⑥.
- 10 Completely charge battery (3 hours).
- 11 Insert **Memory card** in the card slot (**SD**) ⑦.
 - The camera is now ready for operation.

Switching on / off

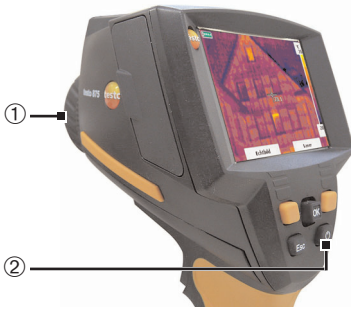

- Remove **protection cap** ① from the lens.
- Switch on: Press [**Power**] ②.
 - The measurement view is opened after the warm-up period.
 - The thermal imager performs an automatic zeroing approx. every 60 sec. This can be recognized by a “click”. The image is frozen briefly when this occurs.
- Switch off: Press [**Power**] again.



Focusing the picture


- Turn **lens** ① by hand.



Recording the image


- 1 Freeze image: Press trigger button ② once.
- 2 Save image: Press trigger button again.
or
Discard image: Press [**Esc**] ①.

Getting to know the menu

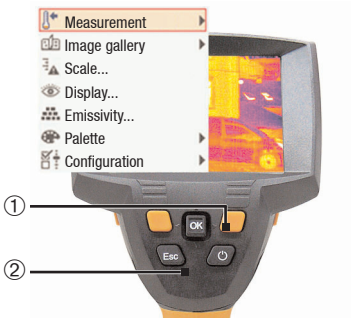

- 1 Open menu: Press [**OK**] ①.
- 2 Navigate: Move **Joystick** ① up / down.
- 3 Open submenu (only for menu points marked with ►): Move joystick to the right.
- 4 Call up a function: Press [**OK**].
or
Exit menu: Press [**Esc**] ②.


Getting to know the quick select buttons

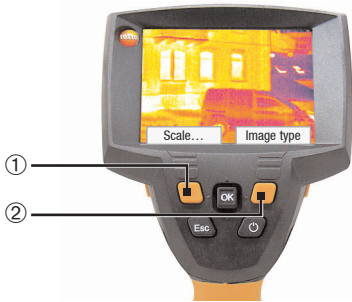

Using the quick select buttons, the set functions are called up directly. Factory settings:

- Left quick select button ①: Adjust scaling.
- Right quick select button ②:
testo 875?1: Change colour palette.
testo 875?2: Select image type.

Changing assignment of the quick select buttons

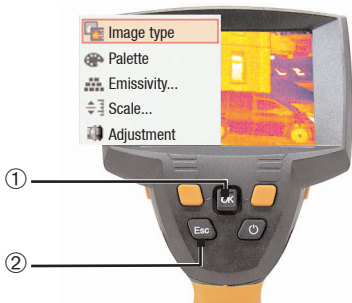

Change the left or right quick select button:

- 1 Call up: Move **Joystick** ① to the left or right.
- 2 Navigate: Move **Joystick** up / down.
- 3 Confirm: Press **[OK]** ①.
or
Cancel: Press **[Esc]** ②.

