
User Manual

POWERBANK A5200

About this manual

Read this manual carefully and observe, read and follow all instructions mentioned in this to ensure the long life and reliable use of the device. Please keep this manual handy for future reference and pass it on to other users of the device.

Intended use

This Powerbank is meant solely for the purpose of power supply to devices with an operating voltage of 5V DC (mobile phones, MP3 player etc.). Any other use is considered as unintended use and may lead to damages and injuries. Claims of any type resulting from unintended use are ruled out. To avoid dysfunctions do not connect the USB starting compound of the device with the USB connections of computers or other devices. They are only designed to charge devices.

Do not disassemble the device into its single parts and do not try to repair it. It does not contain user serviceable parts and in this case the warranty becomes void.

Do not enter objects which are not designed for use into the openings of the product. There is a danger of short circuit.

Do not handle this device with wet hands.

Do not use water or chemical solutions to clean the device. Only use a dry cloth.

It is normal that the device produces heat while used. Do not cover the product while used.

Do not use the device if there is visible damage or in case it is wet.

Safety Instructions:



Operating conditions:

Operate the device at 0 to 40 degree Celsius at max. 90% relative humidity. If you do not use Powerbank for long periods of time, store the device at a temperature range of -10 to 45 degree Celsius at max. 90% relative humidity (for short period) and charge the device every three months to maintain the total performance of the device.



Do not use the device in extremely cold, hot, humid or dusty areas; also do not expose to direct sunlight. Avoid contact with open flame. Risk of Explosion!



Shock, drop:

Please protect the device against shock and drops in all operating modes.



Electrostatic discharge:

This device is sensitive to electrostatic discharge. Please protect the device against any possible electrostatic discharge.



Disposal of old batteries

The devices marked with this symbol are subject to the European Directive 2006/66/EG. All the old batteries must be disposed separated from household garbage through the government agencies designated for that purpose.

By disposing the batteries in this prescribed manner, you can avoid environmental damages.



Disposal of Used Electronic Equipment

Equipment marked with this symbol is subject to the European Directive 2012/19/EG.

All electrical devices and used electrical equipment must be disposed of separately from household waste over the appropriate government agencies.

Proper disposal of old electronic equipment helps avoid environmental damage.


Scope of delivery

- Intenso Powerbank A5200
- Micro USB - Charging cable
- Operating instructions

Technical data

Dimensions:	85 x 40 x 21 mm
Max power consumption (Input):	5 V 1 A
Max charging current output (Output):	5 V 1 A
Internal Battery:	5.200 mAh / 3.7 V lithium-ion battery
Status display:	4 LED lights
Built-in overcharge/discharge protection	Yes
Standby time:	Up to 3 months

Device Overview

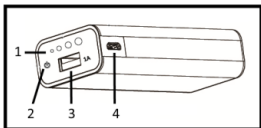

- 1 Status LEDs**
- 2 Function key**
- 3 USB OUT**
- 4 Micro USB IN**

Operation

1. Function keys

- By briefly pressing, the LED lights will indicate the current battery status and the Powerbank is activated.
- If no device is connected to the Powerbank, or the connected device is fully charged, the Powerbank automatically switches to standby mode after a time interval of 5 seconds.

2. Status display LED

The individual LEDs indicate the remaining energy of the Powerbank:

LED light % - Energy	LED 1	LED 2	LED 3	LED 4
1 % - 25 %	●	○	○	○
26 % - 50 %	●	●	○	○
51 % - 75 %	●	●	●	○
76 % - 100%	●	●	●	●

3. Starting-Up / Powerbank Charge / Charging Connected Devices

a) Charging the Powerbank

Please connect the included Micro USB cable to the micro USB port of the Powerbank, and connect the other end of the USB cable to a standard USB port of a computer or USB power adapter. The charging process and current charging status is indicated by the LED status lights. If the Powerbank is fully charged, the LED status lights remain illuminated. The required charging time of the Powerbank depends on the selected charging source and the output power (max. 5 V / 1 A).

b) Charging devices through the Powerbank

- Please connect the included USB cable to the USB A port on the Powerbank and the other end of the USB cable to the micro USB port of the device to be charged. Press the function button to start the charging process.
- Of course, you can also use your own USB charging cable to connect the Powerbank with your device. Please note, however, that devices can be charged only through the USB A port of the Powerbank.
- If a device is charged with the Powerbank and the Powerbank has almost reached its capacity limits, this is signalled by flashing of the last status LED. Please charge the Powerbank again.
- Please note that, when charging a device with a Powerbank nearly 30% of total capacity is consumed by the charging process alone. This is caused for example by the loss of power from circuit heat and voltage conversion.
- For optimal performance, the Powerbank must be used regularly. If this is not the case, fully charge the Powerbank at least every three months.

Limited warranty conditions

The warranty only covers the replacement of this Intenso product. The warranty is not applicable for normal wear & tear resulting from erroneous, improper use of the device, negligence, accident or incompatibility.

There are no warranty claims if the Intenso user manual is not followed and if the device is damaged through improper use or defects caused by other devices.

We are not liable for damage or data loss (of the device to be charged) caused by dysfunction, wrong handling, repairs or battery change made by you.

There are no warranty claims if the product is exposed to shocks, electrostatic discharges, heat or humidity effects beyond the product specifications.

Intenso is not liable for any collateral damages or consequential losses, for violation of warranty conditions or any other losses irrespective of the cause.

Important note:

Please note that any warranty claim shall expire if the housing of the Powerbank has been opened.

This product is not meant for a commercial use or for medical and special applications, where the failure of the product may cause injuries, death or significant material damages.

(Intenso)[®]

49377 Vechta
Germany
www.intenso.de



Intenso Warranty conditions

Dear Intenso customer,

Thank you for opting for a high-quality Intenso product. All Intenso products are subject to constant quality inspections and the legal warranty period applies, of course, from the date of purchase. Please be sure therefore to save the sales receipt as proof of purchase.

Warranty conditions

The warranty only covers material and production defects. Intenso GmbH is not liable for the loss of data in units sent to us. The free of charge warranty service covers the repair or replacement of defective parts. Please understand that we cannot render any warranty services, e.g. in case of:

- Misuse or improper handling, installation or use
- Damages, scratches or wear
- Modifications, manipulation or repairs by third parties
- Damages through force majeure or transport

Your Intenso GmbH

CLAIM PROCEDURE

In case of a claim, please proceed as follows:

1. Only returns accompanied with all accessories and sales receipt are accepted.
2. In addition, a RMA number is absolutely required for return shipments. You can request this RMA number via e-mail or through the service hotline.
3. Please package the product including all accessories and the sales receipt safe for transport. Please stamp the package.
4. Please affix the RMA number clearly visible on the outside of the package.

Please send to the following service address:

INTENSO GMBH

Service Center (your RMA-No.)

Kopernikusstraße 12-14

D-49377 Vechta

Service Hotline: +49 (0) 900 –
1 50 40 30

(0.39 € / min. from the
landline in Germany.

Usual costs apply.)

Email: support@intenso.de

Internet: www.intenso.de