Thru-beam sensor

OBE25M-R200-S2EP-IO-V1



Model Number

Thru-beam sensor

OBE25M-R200-S2EP-IO-V1

with 4-pin, M12 x 1 connector

Features

- Medium design with versatile • mounting options
- IO-link interface for service and ٠ process data
- Various frequencies for avoiding • mutual interference (cross-talk immunity)
- Extended temperature range ٠ -40°C ... 60°C
- High degree of protection IP69K

Product information


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design-from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application environment.




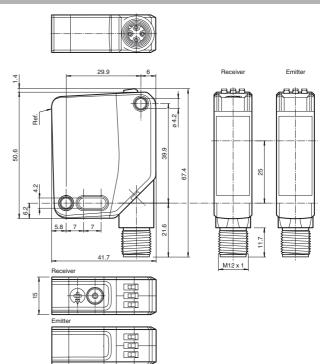

Electrical connection emitter



Electrical connection receiver

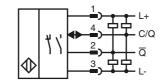

2 3 4

Pinout



Wire colors in accordance with EN 60947-5-2 BN WH BU BK (brown (white) (blue) (black)

eng.xml

301023_

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




Indicators/operating means

Emitter

	n
	빈
	Ц
	ัก

Receiver

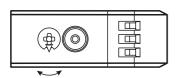

1	Sensitivity adjustment		
2	Light-on / dark-on changeover switch		
3	Operating indicator / dark on		
4	Signal indicator		
5	Operating indicator / light on		

Operating indicator

1

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

Other suitable accessories can be found at www.pepperl-fuchs.com

2



Technical data		
Technical data		
System components Emitter		OBE25M-R200-S-IO-V1
Receiver		OBE25M-R200-2EP-IO-V1
General specifications		
Effective detection range		0 25 m
Threshold detection range		33 m
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group LED red (in receiver lens)
Alignment aid		illuminated constantly: beam is interrupted, flashes: reaching switching point, off: sufficient stability control
Diameter of the light spot		approx. 850 mm at a distance of 25 m
Angle of divergence		approx. 2 °
Ambient light limit		EN 60947-5-2 : 40000 Lux
Functional safety related parame	eters	462 a
Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		60 %
Indicators/operating means		
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve
Control elements		Receiver: light/dark switch
Control elements		Receiver: sensitivity adjustment
Electrical specifications		
Operating voltage	UB	10 30 V DC
Ripple		max. 10 % Emitter: ≤ 15 mA
No-load supply current Protection class	Ι _Ο	Receiver: ≤ 15 mA at 24 V Operating voltage
Interface		11
Interface type		IO-Link (via C/Q = pin 4)
Device profile		Identification and diagnosis Smart Sensor: Receiver: type 2.4 Emitter: -
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		2.3 ms
Process data witdh		Emitter: Process data input: 0 bit Process data output: 1 bit Receiver: Process data input: 2 bit Process data output: 2 bit
SIO mode support		yes
Device ID		Emitter: 0x111401 (1119233) Receiver: 0x111301 (1118977)
Compatible master port type		A
Input		
Test input		emitter deactivation at +U _B
Output		The suitable tree of the second suitable to the Theory of the
Switching type		The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / dark-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current Usage category		max. 100 mA , resistive load DC-12 and DC-13
Voltage drop	U _d	≤ 1.5 V DC
Switching frequency	f f	1000 Hz
Response time		0.5 ms
Conformity		
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Ambient conditions		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information". Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com





Ambient temperature	-40 60 °C (-40 140 °F)
Storage temperature	-40 70 °C (-40 158 °F)
Mechanical specifications	
Housing width	15 mm
Housing height	50.6 mm
Housing depth	41.7 mm
Degree of protection	IP67 / IP69 / IP69K
Connection	4-pin, M12 x 1 connector, 90° rotatable
Material	
Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	Emitter: approx. 37 g receiver: approx. 37 g

Approvals and certificates

UL approval CCC approval E87056 , cULus Listed , class 2 power supply , type rating 1 CCC approval / marking not required for products rated ≤36 V

Curves/Diagrams

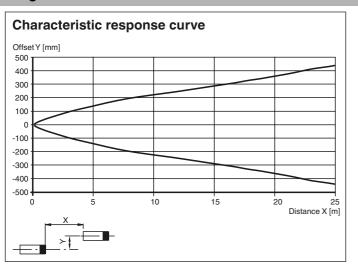

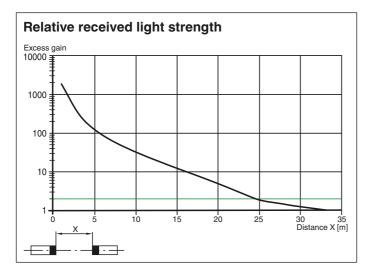

Functions and Operation

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

4

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.

