Retroreflective sensor

OBG5000-R100-EP-IO-0,3M-V3



CE 🚷 IO-Link

Model Number

OBG5000-R100-EP-IO-0,3M-V3

Retroreflective sensor (glass) with fixed cable and 3-pin, M8 connector

Features

- Miniature design with versatile • mounting options
- Detects transparent objects, i.e., clear ٠ glass, PET and transparent films
- Two machines in one: clear object detection or reflection operating mode with long range
- High degree of protection IP69K
- IO-link interface for service and process data


Product information

The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design - from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

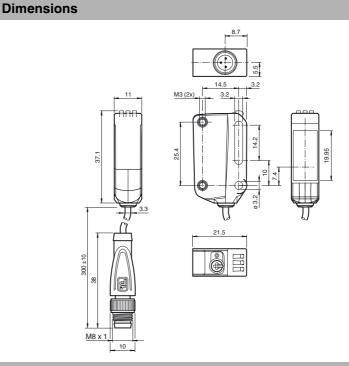


Electrical connection




Pinout



Indicators/operating means





1	Teach-in button
2	Mode rotary switch
3	Operating indicator / dark on
4	Signal indicator
5	Operating indicator / light on

Ν	Normal mode
I	10 % contrast detection
Ш	18 % contrast detection
III	40 % contrast detection
L/D	Switching type
0	Keylock

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com ⁵ PEPPERL+FUCHS 1

Technical data

l'echnical data
General specifications
Effective detection range
Reflector distance
Threshold detection range
Reference target
Light source
Light type
LED risk group labelling
Diameter of the light spot
Angle of divergence
Ambient light limit
Functional safety related parameters
MTTF _d
Mission Time (T _M)
Diagnostic Coverage (DC)

Operation indicator Function indicator Control elements Control elements Contrast detection levels

Indicators/operating means

Electrical specifications

Operating voltage Ripple No-load supply current Protection class Interface Interface type Transfer rate IO-Link Revision Min. cycle time Process data witdh SIO mode support Device ID Compatible master port type Output Switching type

Signal output

Switching voltage Switching current Usage category Voltage drop Switching frequency Response time Conformity Communication interface Product standard Ambient conditions Ambient temperature Storage temperature **Mechanical specifications** Housing width Housing height Housing depth

Housing depth Degree of protection Connection Material Housing Optical face Mass

www.pepperl-fuchs.com

0 ... 3.5 m in TEACH mode ; 0 ... 5 m at switch position "N" 0 ... 3.5 m in TEACH mode ; 0 ... 5 m at switch position "N" 6 m H85-2 reflector LED modulated visible red light exempt group approx. 170 mm at a distance of 3.5 m approx. 5 °

600 a 20 a 0% LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Yellow I ED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve Teach-In key 5-step rotary switch for operating modes selection 10 % - clean, water filled PET bottles 18 % - clear glass bottles 40 % - colored glass or opaque materials Adjustable via rotary switch

10 ... 30 V DC max. 10 % < 25 mA at 24 V supply voltage III

UB

l₀

EN 60947-5-2

IO-Link (via $C/Q = pin 4$)
COM 2 (38.4 kBaud)
1.1
2.3 ms
Process data input 2 Bit Process data output 2 Bit
yes
0x110A01 (1116673)
A

The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link

1 push-pull (4 in 1) output, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC max. 100 mA , resistive load DC-12 and DC-13 ≤ 1.5 V DC 500 Hz 1 ms IEC 61131-9 EN 60947-5-2

-20 ... 60 °C (-4 ... 140 °F) , movable cable not appropriate for conveyor chains -40 ... 70 °C (-40 ... 158 °F)

11 mm 37.1 mm 21.5 mm IP67 / IP69 / IP69K 300 mm fixed cable with M8 x 1, 3-pin connector PC (Polycarbonate) PMMA approx. 17 g

Accessories

REF-H85-2 Reflector, rectangular 84.5 mm x 84.5 mm, mounting holes

REF-H50 Reflector, rectangular 51 mm x 61 mm, mounting holes, fixing strap

REF-H33 Reflector with screw fixing

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OFR-100/100 Reflective tape 100 mm x 100 mm

OMH-R10X-01 Mounting bracket

OMH-R10X-02 Mounting bracket

OMH-R10X-04 Mounting bracket

OMH-R10X-10 Mounting bracket

OMH-ML100-03 Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

OMH-ML100-031 Mounting aid for round steel ø 10 ... 14 mm or sheet 1 mm ... 5 mm

REF-H32G-2

REF-ORR50G-2

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 C

Ud

f

USA: +1 330 486 0001 Germany: + fa-info@us.pepperl-fuchs.com fa-info@de.p

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Cable length


0.3 m

Approvals and certificates


UL approval

E87056, cULus Listed, class 2 power supply, type rating 1

Curves/Diagrams

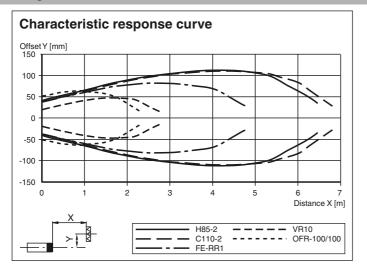

Relative received light strength in switch position "N"

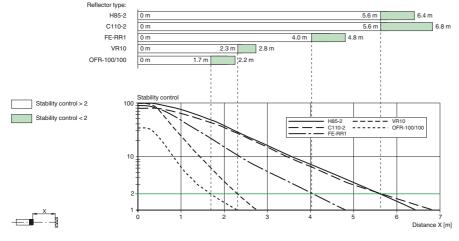

Settings

Teach-in:

Use the rotary switch to select the required operating mode: Normal mode (N) or contrast level I - III.

To teach in a threshold or activate an operating mode, press the "TI" button until the yellow and green LEDs flash in phase (approx. 1 s).

Release the "TI" button. Teach-in starts.

Successful teach-in is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs. The sensor will now operate in the selected operating mode with the taught-in threshold.

An unsuccessful teach-in is indicated by rapidly alternating flashing (8 Hz) of the yellow and green LEDs. After an unsuccessful teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Every taught-in switching threshold can be re-taught (overwritten) by pressing the "TI" button again.

Note: To ensure that the device functions reliably in Contrast mode, the device must be powered on at least 30 s before Teach-in.

Setting the Device to Maximum Sensitivity

Use the rotary switch to select the Normal mode (N) position.

Press the "TI" button for > 4 s. The yellow and green LEDs will go out.

Release the "TI" button.

The settings will be reset to maximum sensitivity. After successfully resetting, the yellow and green LEDs will flash alternately (2.5 Hz).

Switching between light on/dark on

Use the rotary switch to select the light on/dark on (L/D) position.

Press the "TI" button for > 1 s.

The respective operating indicator LED (L/D) will illuminate green and the switching type will change.

To reset the switching type, press the "TI" button for > 4 s.

The respective operating indicator LED (L/D) will illuminate green and the operating indicator will be reset to the most recently active switching type.

267075-100046_eng.xn	
Date of issue: 2019-03-26	
Release date: 2019-03-26 09:34	

Re

ᆔ

Refer to "General Notes Relating to Pepperi+Fuchs Product Information".					
Pepperl+Fuchs Group	USA: +1 330 486 0001	Ge			
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-in			

ermany: +49 621 776 1111 Singapor nfo@de.pepperl-fuchs.com fa-info@sg.p

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com **EPPPERL+FUCHS**

3

Reset to Default Settings

Use the rotary switch to select the O position. Press the "TI" button for > 10 s. The yellow and the green LEDs will both switch off. Release the "TI" button. The yellow LED is on. After resetting, the sensor will operate with the following default settings:

- Normal mode (N)
- Maximum sensitivity adjustment
- Dark on
- Pin 2 (white core): antivalent switching output

www.pepperl-fuchs.com

4