




fischer Strong Undercut Anchor FSU/FSU-P

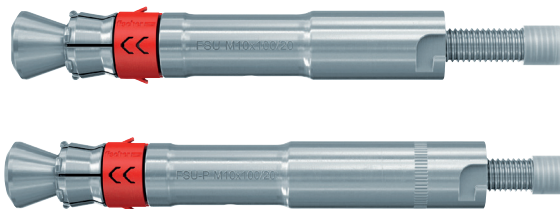

DE Montageanleitung
EN Installation instructions
FR Instructions de montage
NL Montagehandleiding
IT Istruzioni per l'installazione
ES Instrucciones de montaje
PT Instruções de montagem
DA Monteringsvejledning
SV Installationsinstruktioner
NO Installasjonsveiledning
FI Asennusohjeet

PL Instrukcje montażu
CS Návod k montáži
SK Návod na montáž
HU Szerelési útmutató
RO Instrucțiuni de montare
SL Navodila za montažo
HR Upute za instalaciju
SR Navodila za sastavljanje
BS Instalacijski vodici
SQ Udhëzimet e montimit
TR Montaj talimatları

EL Οδηγίες Εγκατάστασης
HE הכוונה להתקנה
BG Инструкции за инсталиране
RU Инструкция по установке
UK Інструкція з використання
ZH 使用说明书
JA 取扱説明書
KO 사용 설명서
TH คำแนะนำการชุมนุม
VI hướng dẫn lắp ráp
AR تعليمات الاستخدام




ETA-22/0674,
for cracked concrete








Fire resistance
classification R120

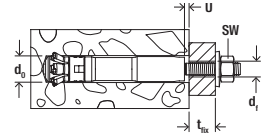

fischer Strong Undercut Anchor FSU Pre-setting anchor




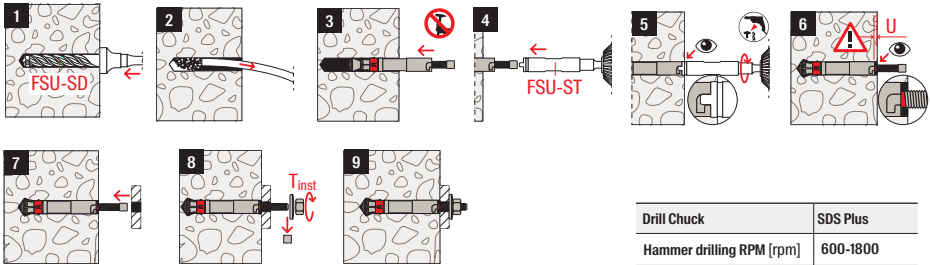



		d_o [mm]	$d_i \leq$ [mm]	$t_{tx} \leq$ [mm]	T_{inst} [Nm]	U [mm]	SW [mm]				
567778	FSU M10x100/20	20	12	20	40	2-5	17	567793	FSU-SD 20x100	568881	FSU-ST M10
567782	FSU M12x125/30	22	14	30	80	3-6	19	567795	FSU-SD 22x125	568882	FSU-ST M12
567786	FSU M12x125/50	22	14	50	80	3-6	19	567795	FSU-SD 22x125	568882	FSU-ST M12




Drill Chuck	SDS Plus
Hammer drilling RPM [rpm]	600-1800
Hammer impact energy [J]	2-5

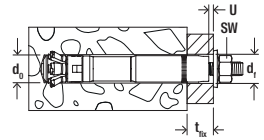fischer Strong Undercut Anchor FSU Push-through anchor



		d_o [mm]	$d_i \leq$ [mm]	t_{tx} [mm]	T_{inst} [Nm]	U [mm]	SW [mm]		
567780	FSU-P M10x100/20	20	21	10-20	40	2-5	17	567794	FSU-SD 20x120
567784	FSU-P M12x125/30	22	23	12-30	80	3-6	19	567796	FSU-SD 22x155
567788	FSU-P M12x125/50	22	23	12-50	80	3-6	19	567797	FSU-SD 22x175

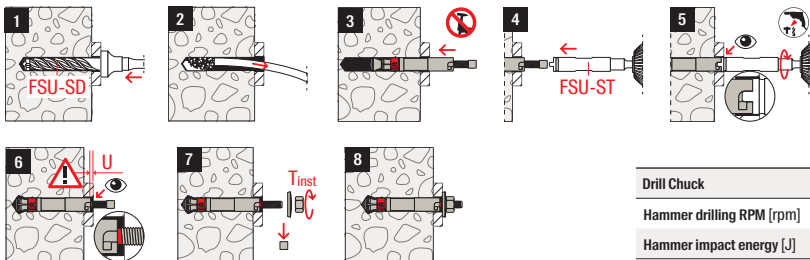

Drill Chuck	SDS Plus
Hammer drilling RPM [rpm]	600-1800
Hammer impact energy [J]	2-5

fischerwerke GmbH & Co. KG · Klaus-Fischer-Straße 1 · 72178 Waldachtal · Germany
T +49 7443 12-0 · F +49 7443 12-4222 · info@fischer.de · www.fischer-international.de