english

Read this document carefully before using this device. The guarantee will be expired by device demages if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA ET2411 ON/OFF HEAT CONTROLLER

Thank you for choosing **ENDA ET2411** ON/OFF Heat Controller.

- 77 x 35mm sized.
- Single NTC sensor input.
- Zero point input shift.
- Selectable heating or cooling control for C1 relay output.
- Selectable heating or cooling control.
- In the case of sensor failure, relay state can be set to ON or OFF.
- Upper and lower setpoint limits can be adjusted.
- Temperature unit can be selected as °C or °F.
- CE marked according to European Norms.

CE RoHS Compliant

Order Code : ET2411 - ☐☐☐ (1)

1 - Supple Voltage
230.....230V AC

LV.....10-30V DC / 8-24V AC

ENDA ET2411 is intended for installation within control panels. Make sure that the device is used only for intended purpose. The shielding must be grounded on the instrument side. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling. Make sure that the operation temperature is not exceeded.

All input and output lines that are not connected to the supply network must be laid out as shielded and twisted cables. These cables should not be close to the power cables or components. The installation and electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations.

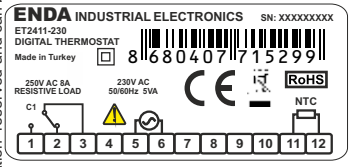

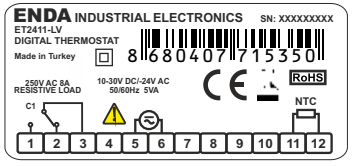

Equipment is protected throughout by DOUBLE INSULATION

Holding screw 0.4-0.5Nm.

NOTE:
SUPPLY:
184-253V AC or 10-30V DC / 8-24V AC 50/60Hz 5VA

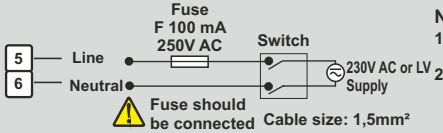

Note:
1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

Up to date : 07.06.2023 modification reserved and can be change any time previous notice !

TECHNICAL SPECIFICATIONS

INPUT

Input Type		Scale Range	Accuracy
NTC Sensor Typ 103AT-2 at 25 °C - 10 kOhm	EN 60751	-60.0...150.0 °C -76.0...302.0°F	± 1% (for full scale) ± 1 Digit

ENVIRONMENTAL CONDITIONS

Ambient/Storage temperature	0 ... +50 / °C -25... +70°C(without icing)
Relative Humidity	Max. humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.
Protection Class	According to EN60529; Front panel: IP65 Rear panel : IP20
Height	Max. 2000m

Do not use the device in locations subject to corrosive and flammable gasses.

ELECTRICAL CHARACTERISTICS

Supply	230V AC +10% -20% 50/60Hz ; 10-30V DC / 8-24V AC SMPS
Power Consumption	Max. 3VA
Wiring	Power connector : 2.5mm² screw-terminal, Signal connector : 1,5mm² screw-terminal conenction.
Line Resistance	Max. 100ohm
Data Retention	EEPROM (Min. 10 years)
EMC	EN 61326-1 : 2013 (Performance criterion B is satisfied for EN 61000-4-3)
Safety Requirements	EN 61010-1 : 2010 (Pollution degree 2, overvoltage category II)
Indicator	4 digits, 12.5mm, 7 segment red LED

OUTPUT

C1 Output	For 8A Models : 250V AC, 8A (resistive load), NO and NC control output.
Life Expectancy for Relay	For 8A Models : 30. Mio. Switching for no-load operation; 300.000 switching for 8A resistive load at 250VAC.

CONTROL

Control Type	Single-setpoint and alarm control.
Control Algorithm	On-Off Control.
A/D Converter	12 bit resolution, 100ms sampling time.
Hysteresis	Adjustable between 0.1 and 20.0°C/F.

HOUSING

Housing Type	Suitable for flush-panel mounting according to DIN 43 700.
Dimensions	W77xH35xD61mm
Weight	Approx. 215g (After packing)
Enclosure Materials	Self extinguishing plastics

While cleaning the device, solvents (thinner, benzine, acid etc.) or corrosive materials must not be used.

Dimensions

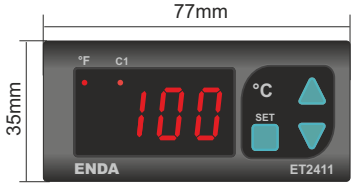

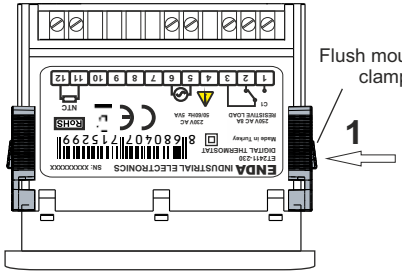

For removing mounting clamps:

- Push the flush-mounting clamp in direction **1** as shown in the figure below.Then,pull out the clamp in direction **2** .

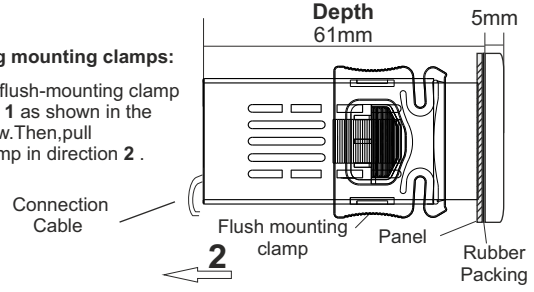

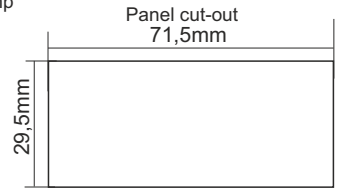

Note: **1)** Panel thickness should be maximum 7mm.
2) If there is not 60mm free space at the back side of the device,it would be difficult to remove it from the panel.

SURAN Industrieelektronik
An der Hanfrötze 6 / D-77731 Willstätt
Tel.: +49 (0)7852 / 4889 962
E-mail : info@suran-elektronik.de
Internet : www.suran-elektronik.de

Programming Diagram

Running Mode



When this button is pressed C.SET message is appeared and temperature setpoint adjustment mode is entered.

Temperature setpoint value is adjusted with ▲ ▼ buttons then, when one of these buttons are pressed for the first time, blinking setpoint value appears.

If ▲ key is pressed while holding down SET key, then Programming Menu is entered.

Entering Running Mode in Programming Mode :

In Programmin Mode, if no keys are pressed for 20 seconds information is saved automatically and Running Mode is entered.

Alternatively, if ▲ and ▼ keys are pressed together, Programming Menu is entered. In the Programming Menu, if ▲ key is pressed while holding down SET key, then Running Mode is entered.

Programming Menu

C1.L.L. = Control set point lower limit for C1 output.
It can be adjusted between -60.0 and C1.H.L. parameter value.

C1.H.L. = Control set point upper limit for C1 output.
It can be adjusted between 150.0 and C1.L.L. parameter value.

C1.HY. = Output hysteresis value.
It can be adjusted between 0.1 and 20.0 °C.

Default Value		
HEAT	C.TYP.	C.TYP. = Control type selection. C.TYP. = HEAT Heating control is selected. C.TYP. = COOL Cooling control is selected.
C	UNIT.	UNIT = Temperature unit selection. UNIT. = Can be selected as C or F
NO	D.P.	D.P. = Decimal point display selection. If D.P. = NO , decimal value is not dotted. If D.P. = YES , decimal value is dotted.
0	OFFS.	OFFS. = Offset value. Zero point shift value is added to the measured value. This feature is used for eliminating the measuring probe distance errors. It can be adjusted between -20.0 and 20.0°C.
	C1.E.S.	C1.E.S. = C1 Output state in case of sensor failure. ON = Output is ON in case of sensor failure. OFF = Output is OFF in case of sensor failure.

Default Value		
0	S.COD.	S.COD = Access code for security menu. This parameter should be 411 .
P.YES	C1.SC.	C1.SC. = C1 CN. Security menu access level. NONE = Invisible. P.YES = Can be modified. P. NO = Visible but can't be modified.
P.YES	CO.SC.	.CO.SC. = CONF. Configuration menu access level. NONE = Invisible. P.YES = Can be modified. P. NO = Visible but can't be modified.
P.YES	C.S.SC.	C.S.SC. = C1 set value security access level. P.YES = Can be modified. P. NO = Visible but can't be modified.

When S.CO. = 0 , if ▼ key is pressed for 4 seconds while holding down SET key, then D.PAR. is seen on display and the device is returned to factory settings.

Modification Of Parameter Diagram



While holding down SET key, parameter value blinks and by ▼ ▲ using keys, the requested value can be adjusted.

If ▲ key is pressed and held 0.6 seconds, the value of the selected parameter increases rapidly. If waited enough,the value increases a hundred at each step. After 1 second, following the release of the key, initial increasing condition is returned. The same procedure is valid for the decrementing.

ERROR MESSAGES

PFA	Sensor is broken
----	Temperature value is higher than the scale
____	Temperature value is lower than the scale

SURAN Industrieelektronik
An der Hanfrötze 6 / D-77731 Willstätt
Tel.: +49 (0)7852 / 4889 962
E-mail : info@suran-elektronik.de
Internet : www.suran-elektronik.de