


Sens'it

The first connected giveaway on
SIGFOX™ Network

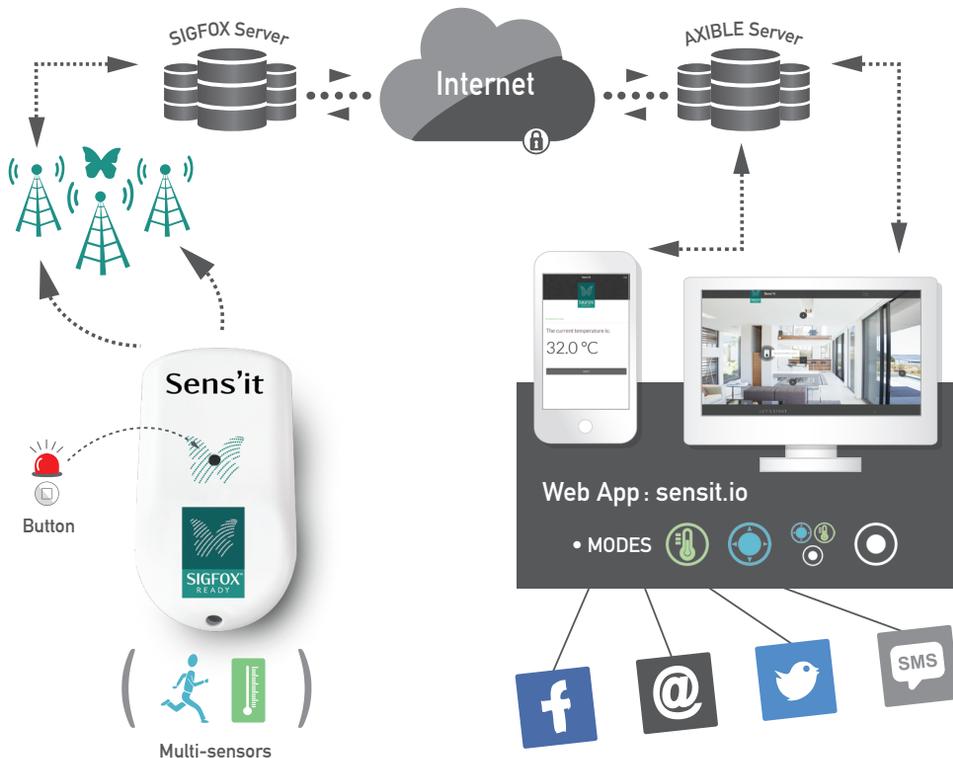

Sens'it is developed by




MADE IN FRANCE


Sens'it Tutorial



1- Connect you on the Web App : sensit.io, click on «Let's start» and provide your activation code OR scan the QR Code on the back of your Sens'it.

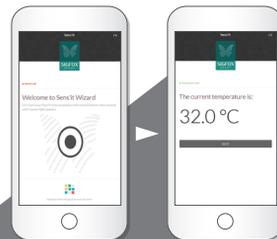

2- Let's turn your Sens'it on by pressing on the central button a few seconds until a green light appears.

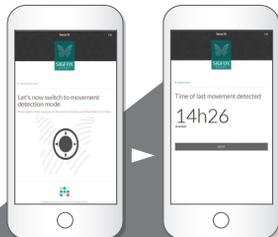

3- Let's now switch to movement detection mode. Press again a few seconds on the central button until the light turns blue. Move now your Sens'it to trigger the motion sensor.



5- Congratulations, you're now ready to use Sens'it! Create an account to add notifications you want to receive based on your Sens'it mode.



Charge your Sens'it with Micro-USB cable. (not provided)



- Short press on the button: display current mode.
- Double short press on the button: Sens'it sends a short message.
- Long press on the button: change the mode.

Here's a quick summary of the different modes :

- Temperature (green light)
- Motion (blue light)
- All sensors (white light)
- Off (red light)