




English

ULTRASONIC CLEANER


Ref.: NU20

- Instruction manual -

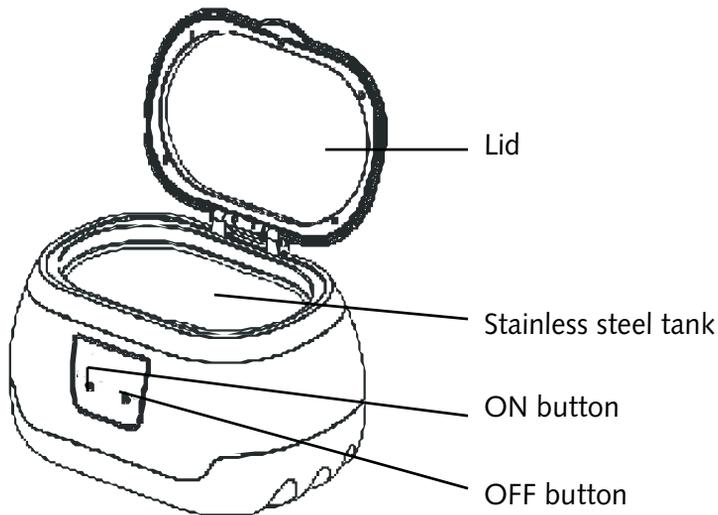

Tank	: 610 ml
Program time	: 3 minutes
Arrêt	: Auto off
Power supply	: AC 220~240V 50Hz
Power	: Max. 50W
Dimensions	: 206 x145 x133 mm
Weight	: 0.860g

APPLIED USES

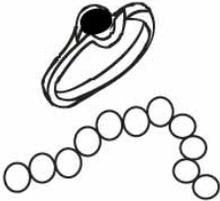
		
<p>Jewels: rings, chains, necklace...</p>	<p>Watches, glasses...</p>	<p>Razors, combs, brushes...</p>
		
<p>Pens</p>	<p>Dental equipment, dentures...</p>	<p>Forks, knives, spoons, scissors...</p>

OPERATION GUIDANCE




1. Open the upper lid, put article into the tank, or use the tray we supplied. Fill with water. (the water should merge the article, but not exceed the ruling mark).

Running without water can damage the unit.

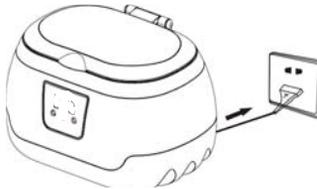

2. Close the lid. Connect the unit with power. **The blue light on the lid will be on for viewing**

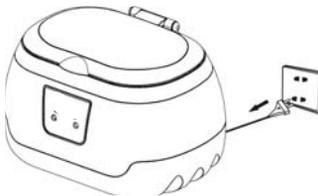

3. Press "ON" to start cleaning. **he working light (blue) around the button will be on**

During cleaning, the « zizi » noise is normal, which comes from tank working.



4. When cleaning is over, cut off the power. Open the cover, take the cleaned article out and drain the water

CLEANING METHODS:

THREE CLEANING METHODS (IN DIFFERENT SITUATION)

General cleaning



Use only tap water for general cleaning. The water should immerge the article to be cleaned, but not exceed "MAX" mark.

Enhance cleaning



If the article is smeary or extraordinary dirty, add about 5-10ml of detergent into water to enhance cleaning result.

Partly cleaning



For large articles, partly cleaning as shown.



The symbol opposite indicates that the electric and electronic components are the subject of a selective collection, it represents a dustbin on wheels barred of a cross. The electric and electronic products can contain substances having negative effects on the environment and health. Worn, they should not be thrown with domestic waste but to be imperatively recovered in the selective collections: dump, associations of social economy and interdependent.

The selection of waste decreases the potential effects on the environment and human health due to the substances dangerous which can compose certain components electric and electronic.

Take an active part: to remove you not from the apparatuses with domestic waste!



Déclaration de Conformité (DoC) EMC

Nous, Société Inovalley, 9 rue Rapporteur, 95310 Saint-Ouen l'Aumone, déclarons sous notre seule responsabilité que le produit:

Marque : Inovalley

Nom commercial : Appareil photo numérique

Type: NU20 - Modèle: HB-2818A

auquel se réfère cette déclaration est conforme aux exigences essentielles et aux autres dispositions de la directive pour la Compatibilité Electro-Magnétique EMC 2004/108/CE qui lui sont applicables.

Le produit est en conformité avec les normes et/ou autres documents normatifs suivants :

EN 55014-1 :2006

EN 55014-2 :1997+A1 :2001

EN 61000-3-2 :2006

EN 61000-3-3 :2008

Lieu et date d'édition
St Ouen l'Aumône, le 4 Février 2010

Le fabricant
INOVALLEY


J.L. THIRY (Président)