

BJZ Adjustable textile wrist strap

The wrist straps are available in different colors:
navy blue with yellow ESD logo
glitter
blood-red
red with yellow ESD logo


Order no.:
C-189-145-N
C-191-148-N
C-195-500-N
C-211-550

Instructions


Adjustable wrist straps for personnel grounding from BJZ are made of special conductive carbon-based fibers which provide the necessary conductivity and prevent allergic skin reactions. An additional contact area made of conductive plastic underneath the closure optimizes the contact with the skin to improve the conductivity of the wrist strap.

The wrist strap needs to be fitted with light pressure for ideal electric contact.


Adjustment of the wrist strap to the wearer's wrist circumference:

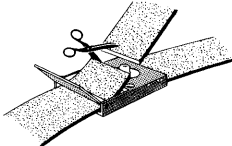

Fit the strap with light pressure to your wrist and cut it off. The overlap should be 1-2 cm.

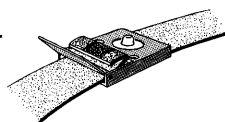

Put the overlap into the closure (to be able to loosen the strap if necessary).

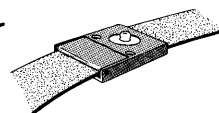

Close the closure with pressure.

For hygienic reasons, the wrist strap should only be worn by one person and occasionally cleaned at approx. 40°C in conventional suds.

CAUTION! Only use wrist straps and grounding cables according to national safety regulations.

Only use dry wrist straps. Wet wrist straps do not provide sufficient protection of personnel.

BJZ GmbH & Co. KG
Berwanger Str. 29 • D-75031 Eppingen/Richen

Telefon: +49 -7262-1064-0
Fax: +49 -7262-1063
E-mail: info@bjz.de
<http://www.bjz.de>