

# USER'S MANUAL

PSO2020

V1.0.0

## Content

<b>General Safety Summary .....</b>	<b>1</b>
<b>Chapter 1 Getting Start.....</b>	<b>2</b>
1.1 System Requirement .....	3
1.2 Install Software .....	4
1.3 Install Driver .....	7
1.4 General Features .....	10
1.5 General Check.....	11
1.6 Function Check .....	11
1.7 Self Calibration .....	12
1.8 Accessories.....	12
<b>Chapter 2 Operating Basics .....</b>	<b>13</b>
2.1 The User's Interface.....	14
2.2 Buttons description .....	15
2.3 The Menu System .....	16
2.4 The Vertical System .....	18
2.5 The Horizontal System .....	18
2.6 The Trigger System.....	19
2.7 Input Connectors.....	19
<b>Chapter 3 Understanding Function .....</b>	<b>20</b>
3.1 Set Oscilloscope.....	21
3.2 Set Vertical Systems.....	21
3.3 Set Horizontal System.....	25
3.4 Set Trigger System.....	26
3.5 Measure Signal.....	27
3.6 The Utility Function.....	31
3.7 The Display System .....	35
3.8 Save/Load Menu .....	39
3.9 Print.....	40
<b>Chapter 4 Application Example .....</b>	<b>41</b>
4.1 Simple Measurement .....	42
4.2 Capturing a Single-Shot Signal.....	43
4.3 Taking Cursor Measurements .....	44
<b>Appendix .....</b>	<b>46</b>
Appendix A: Specification.....	47
Appendix B: General Maintenance.....	49

# General Safety Summary

Review the following safety precautions carefully before operate the device to avoid any personal injuries or damages to the device and any products connected to it. To avoid potential hazards use the device as specified by this user's guide only.

- ◆ **To Avoid Fire or Personal Injury**
- ◆ **Use Proper Power Cord.** Use only the power cord specified for this product and certified for the country of use.
- ◆ **Connect and Disconnect Properly.** Do not connect or disconnect probes or test leads while they are connected to a voltage source.
- ◆ **Connect and Disconnect Properly.** Connect the probe output to the measurement device before connecting the probe to the circuit under test. Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement device.
- ◆ **Observe All Terminal Ratings.** To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.
- ◆ **Use Proper Probe.** To avoid shock hazard, use a properly rated probe for your measurement.
- ◆ **Avoid Circuit or Wire Exposure.** Do not touch exposed connections and components when power is on.
- ◆ **Do Not Operate With Suspected Failures.** If suspected damage occurs with the device, have it inspected by qualified service personnel before further operations.
- ◆ **Provide Proper Ventilation.** Refer to the installation instructions for proper ventilation of the device.
- ◆ **Do not operate in Wet/Damp Conditions.**
- ◆ **Do not operate in an Explosive Atmosphere.**
- ◆ **Keep Product Surfaces Clean and Dry.**

# Chapter 1 Getting Start

The oscilloscope is small, lightweight, no external power required, portable oscilloscopes! The oscilloscopes is ideal for production test, research and design and all of the applications involving analog circuits test and troubleshooting, as well as education and training.

In addition to the list of general features on the next page, this chapter describes how to do the following tasks:

- ◆ **System Requirements**
- ◆ **Install software**
- ◆ **Install driver**
- ◆ **General Features**
- ◆ **General Check**
- ◆ **Functional Check**
- ◆ **self calibration**
- ◆ **Accessories**

## 1.1 System Requirement

To run the oscilloscope software, the needs of computer configuration are as follows:

### Minimum System Requirements

#### Operating System

Window XP /7/8/10/Vista 32bits and 64bits

#### Processor

Upwards of 1.00G processor

#### Memory

256M byte

#### Disk Space

500M disk free space

#### Screen resolution

800 x 600

### Recommended Configuration

Windows XP SP2 System

2.4G Processor

512M Byte Memory

80G Disk Space


1024 x 768 or 1280 x 1024 resolution

DPI Setting: Normal Size (96DPI)


## 1.2 Install Software

**Caution:** You must install the software before using the oscilloscope.


1. While in Windows, insert the installation CD into the CD-ROM drive.
2. The installation should start up automatically. Otherwise in Windows Explorer, switch to the CD-ROM drive and run Setup.exe.
3. The software Installation is started. Click 'Next' to continue.

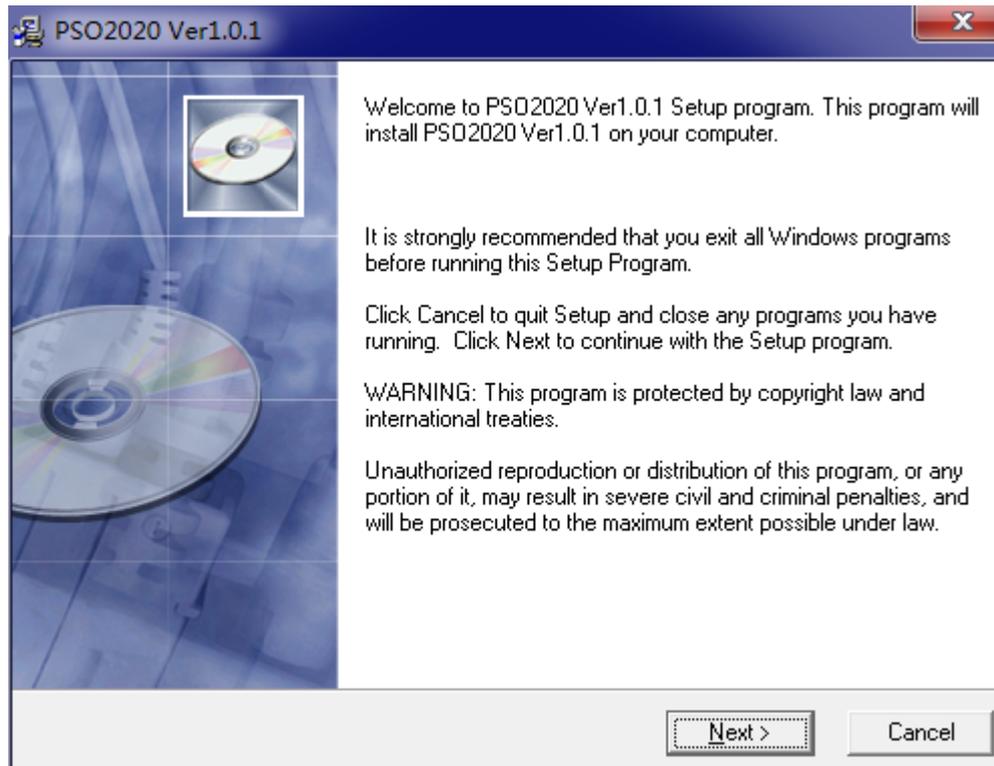


4. Choose a destination directory. Click 'Next' to continue.

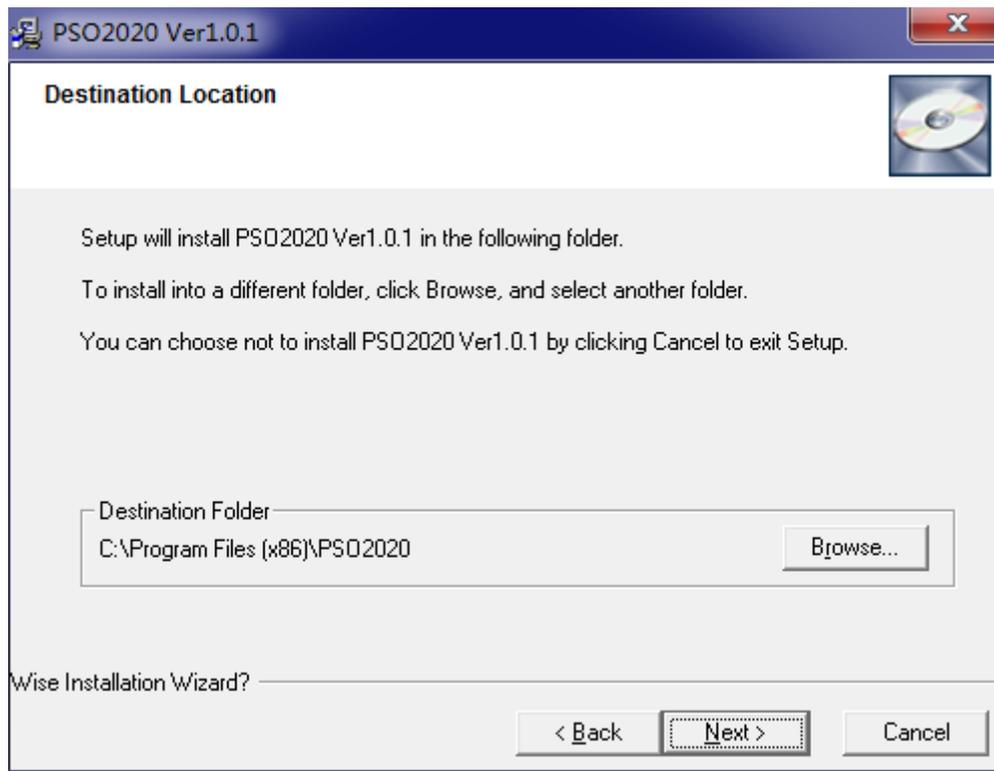


5. Check the setup information. Click Next to start copying of files.

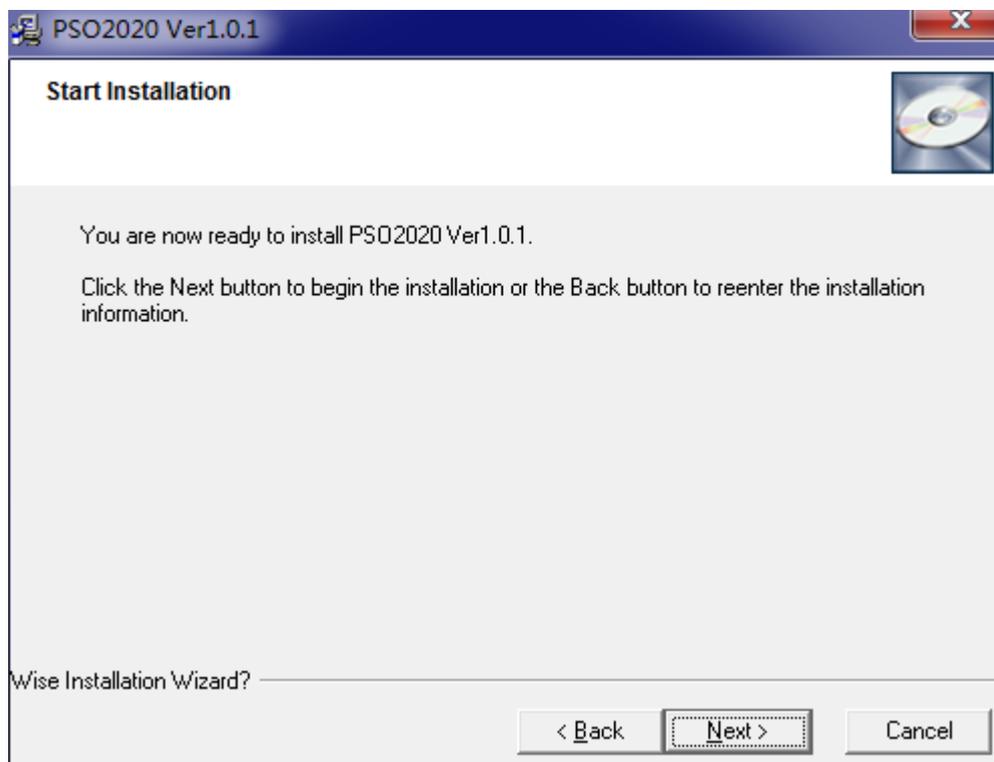


6. This Status dialog is displayed during copying of files.

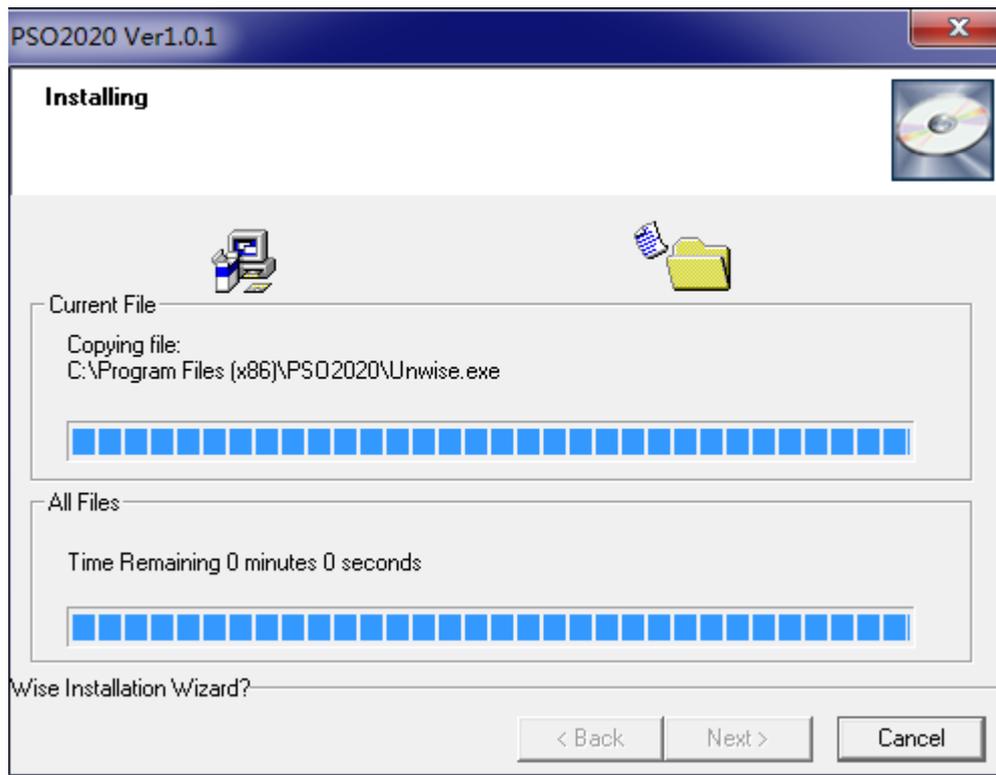

7. Updating Your System Configuration.

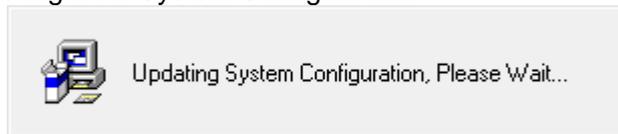

8. The installation is complete.

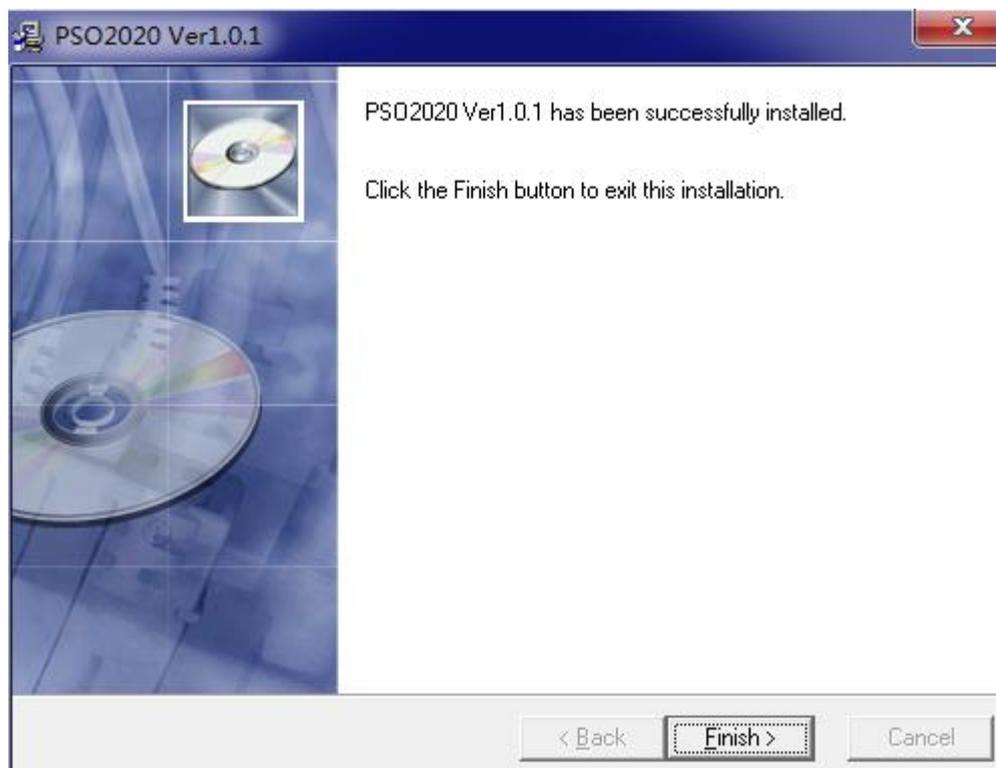

## 1.3 Install Driver

1. Connect the A-Type Plug of USB cable to your PC'S USB port.





2. New hardware is found.



3. New hardware search wizard starts.



5. New hardware search wizard starts to search the driver.

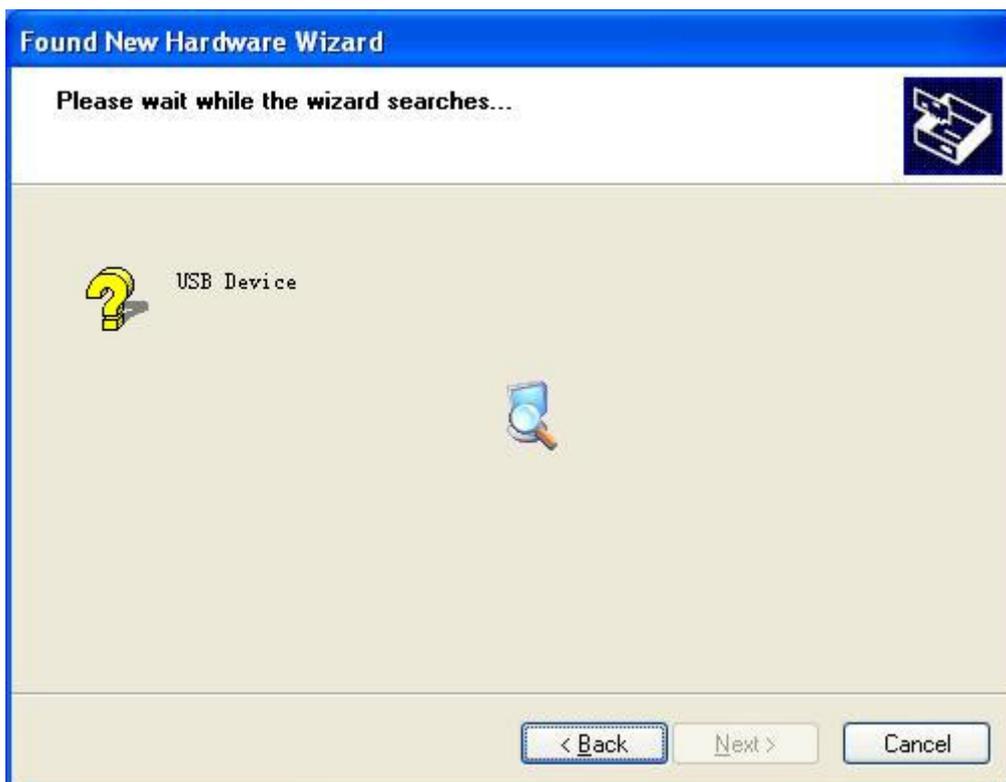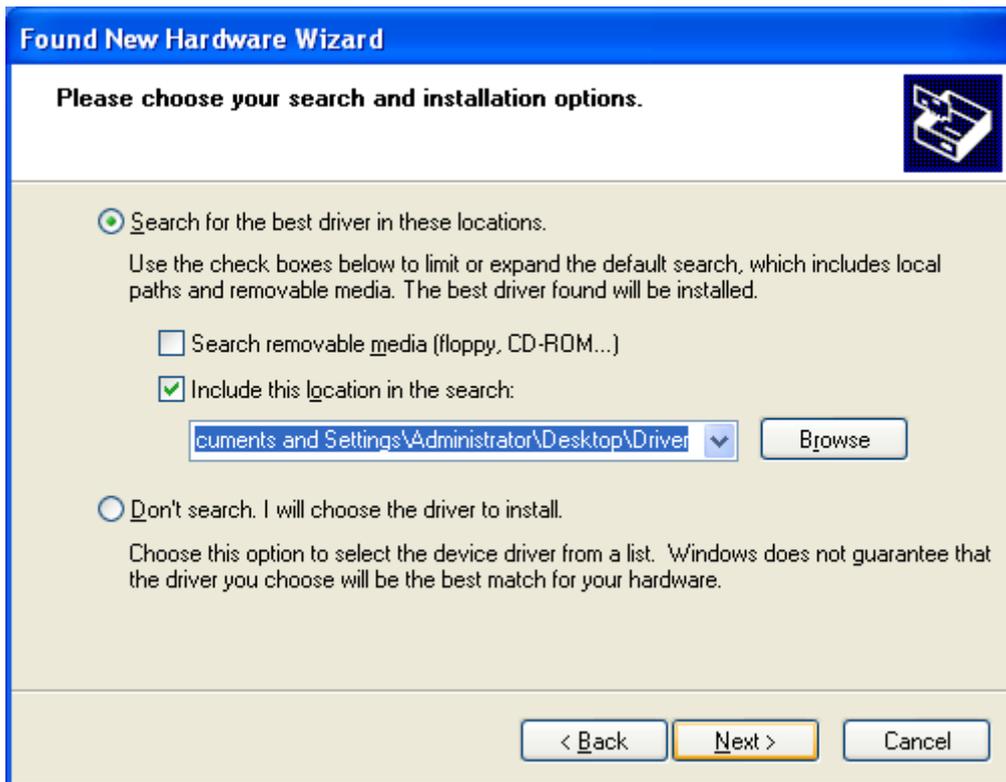

6. New hardware wizard installs "DRIVER".



7. The wizard has finished installing for "DRIVER".



8. Your new hardware is installed and ready to use.



## 1.4 General Features

- ◆ **Maximum real-time sample rate: 96MSa/s**
- ◆ **Memory depth: 1Mbyte/channel**
- ◆ **Built-in Fast Fourier Transform function(FFT);**
- ◆ **20 Automatic measurements;**
- ◆ **Automatic cursor tracking measurements;**
- ◆ **Waveform storage;**
- ◆ **User selectable fast offset calibration;**
- ◆ **Adjustable waveform intensity, more effective waveform view;**
- ◆ **User interface in several user-selectable languages;**

## 1.5 General Check

Please check the instrument as following steps after receiving an oscilloscope:

◆ **Check the shipping container for damage:**

Keep the damaged shipping container or cushioning material until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically.

◆ **Check the accessories:**

Accessories supplied with the instrument are listed in "Accessories" in this guide. If the contents are incomplete or damaged, please notify the franchiser.

◆ **Check the instrument:**


In case there is any mechanical damage or defect, or the instrument does not operate properly or fails performance tests, please notify the franchiser.

## 1.6 Function Check

Perform this functional check to verify that your oscilloscope is operating correctly.

◆ **Connect the oscilloscope**

You should connect the A-Type Plug of USB cable to your PC USB port and connect the probe with the signal source.

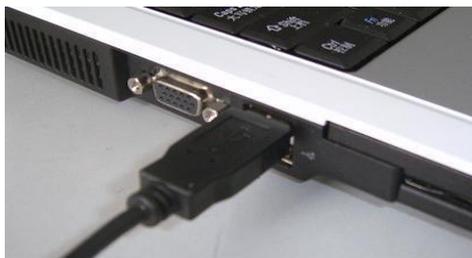

◆ **Input a signal to a channel of the oscilloscope**

**Please input signal in the following steps:**

connect the probe with the signal source and ensure good grounding clip.



1. Attach the tip of probe and ground nip to the Connector of Probe. A square wave will be displayed within a several seconds. (Approximately 1 kHz, 2V, peak- to-peak).

## 1.7 Self Calibration

The self calibration routine lets you optimize the oscilloscope signal path for maximum measurement accuracy. You can run the routine at any time but you should always run the routine if the ambient temperature changes by 5°C or more. For accurate calibration, power on the oscilloscope and wait twenty minutes to ensure it is warmed up. To compensate the signal path, disconnect any probes or cables from the input connectors. Then, access the “**Menu -> Utility -> Calibration**” option and follow the directions on the screen. The self calibration routine takes about several minutes.

## 1.8 Accessories

All the accessories listed below are standard accessories for the oscilloscope:


- ◆ A PC software CD of the oscilloscope

## Chapter 2 Operating Basics

- ◆ The User's Interface
- ◆ The Menu System
- ◆ The Vertical System
- ◆ The Horizontal System
- ◆ The Trigger System
- ◆ Input Connector

## 2.1 The User's Interface

Click the software icon on the desk after you finished the software setting and equipment connecting. Then a user interface will be showed as follows:

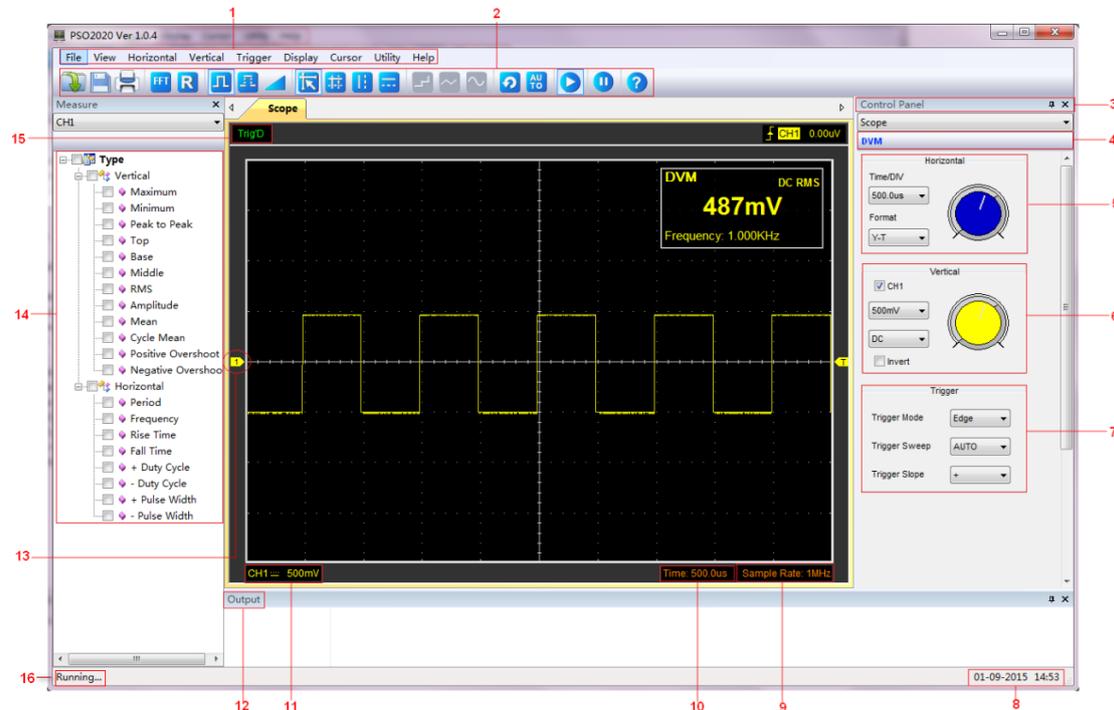

In addition to displaying waveforms, the display area is filled with many details about the waveform and the oscilloscope control settings.

### 1. The Main Menu

All settings can be found in the main menu.

### 2. The Toolbar

### 3. Control Panel

### 4. DVM

### 5. The Horizontal Panel

The user can change Time/Div, format in the panel.

### 6. The Vertical Panel

The user can turn on/off the CH1. Also the user can change the CH1 volt/div.

### 7. The Trigger Panel

In this panel, the user can change the trigger mode, sweep, slope.

### 8. Displays the system time.

### 9. Displays Sample Rate

### 10. Displays the main time base setting.

### 11. Displays the CH1 information

Readouts show the coupling of the channels.

Readouts show the vertical scale factors of the channels.

12. Output Window

13. The markers show the reference points of the displayed waveforms. If there is no marker, the channel is not displayed.


14. Measure Window.

15. Trige state

16. "Running":the program found the hardware and the hardware works normally.  
 "Searching Device":not find the device and the program is searching the device.

## 2.2 Button description

The buttons with PSO2020 pen storage oscilloscope as follows:

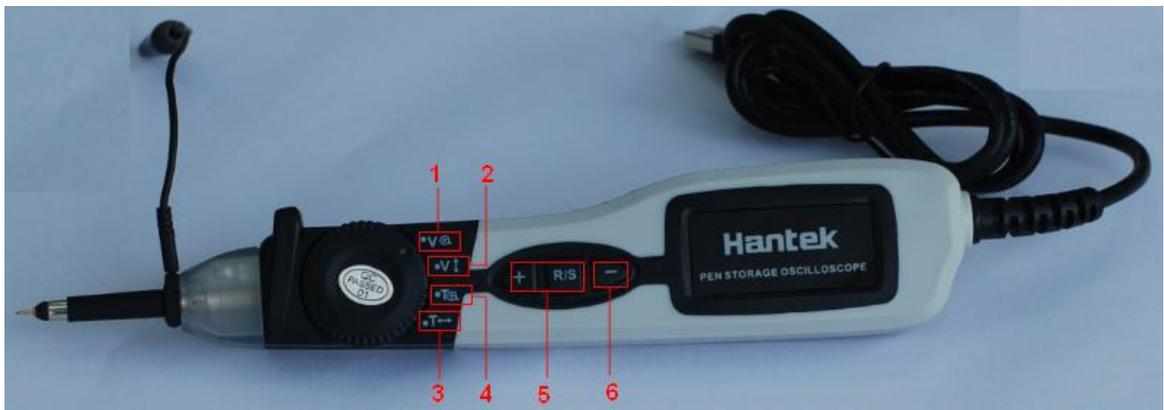


1、Voltage (V⬆️)	“+” button	Single click: Voltage increase Keep clicking: continuous increase with Voltage
	“-” button	Single click: Voltage decrease Keep clicking: continuous decrease with Voltage
	R/S button	Single click: RUN or STOP Keep clicking: AUTO SET
2、OFFSET (V↕)	“+” button	Single click: Waveform moves down Keep clicking: Waveform continuous downward movement
	“-” button	Single click: Waveform move upward Keep clicking : Waveform continuous upward movement
	R/S button	Single click: RUN or STOP Keep clicking: AUTO SET
3、POSITION (T↔️)	“+” button	Single click: left shift Keep clicking: left shift continuous
	“-” button	Single click: right shift Keep clicking: right shift continuous
	R/S button	Single click: RUN or STOP


		Keep clicking: AUTO SET
<b>4、TIME (T)</b>	“+” button	Single click: Time increase Keep clicking: continuous increase with Time
	“-” button	Single click: Time decrease Keep clicking: continuous decrease with Time
	R/S button	Single click: RUN or STOP Keep clicking: AUTO SET
<b>5、combination button</b>	“+” & “R/S”	Single click: LED lamp switch
<b>6、-</b>	“-”	-

## 2.3 The Menu System


The Main Menu




- File:** Load or Save data, setup

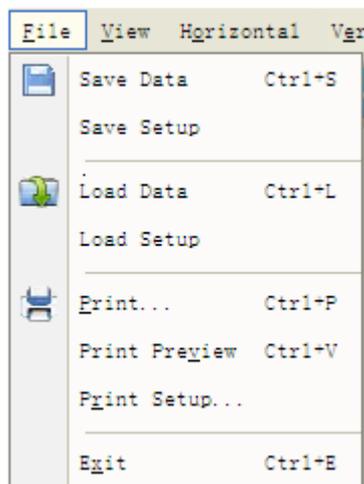


- View:** Change the user interface

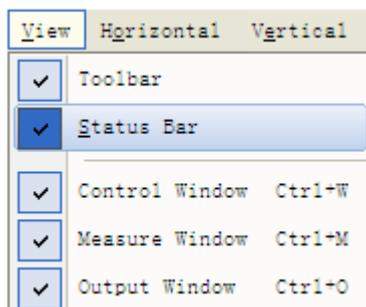

3. **Horizontal:** Set the horizontal system

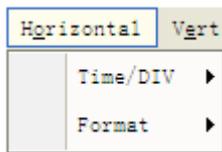


4. **Vertical:** Set the vertical system




5. **Trigger:** Set the trigger system




6. **Display:** The waveform display setup

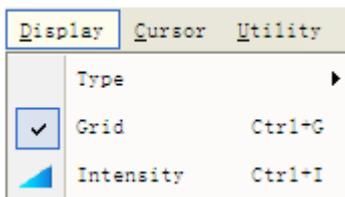


7. **Cursor:** Cursor measure setup

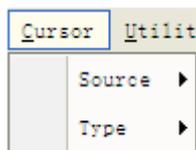

8. **Utility:** Utility setting

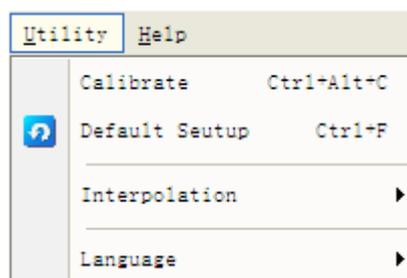


9. **Help:** Turn on help file

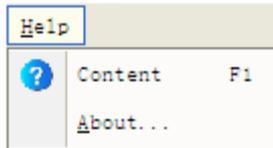

## 2.4 The Vertical System

Click “**Vertical**” in main menu

The following figure shows the vertical system menu. It shows the vertical parameters setting.




1. **CH1**: Leads to the setting of the **CH1** parameters

Use the left mouse button to dragging the channel icon to set the vertical position offset precisely.

## 2.5 The Horizontal System

Click “**Horizontal**” in main menu


The following figure shows the Horizontal System window. It shows the horizontal parameters settings.

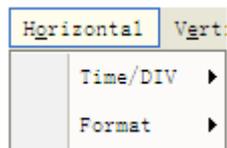

1. **Time/DIV**: leads the setting of the time base parameters
2. **Format**: leads the setting of the horizontal format parameters


The time base ranges of the oscilloscope is listed as follows. The horizontal scan speed is from 4ns/div to 1hour/div.

In the “**Format**” menu of the “**Horizontal**” menu, select the display mode to **Y-T**.

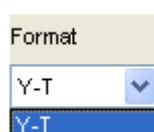

## 2.6 The Trigger System

Click “**Trigger**” in main menu.

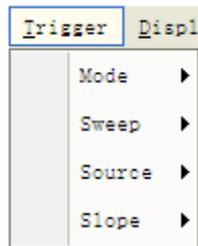

**Mode:** Sets the trigger mode to **Edge** trigger

**Sweep:** Selects the trigger sweep mode to **AUTO**, **NORMAL** or **SINGLE**

**Source:** Selects the trigger source to **CH1**.

**Slope:** Selects the edge trigger slope to **Positive** or **Negative** slope

The user can drag the trigger icon to adjust the trigger level and the trigger level will be displayed on the top right corner.

## 2.7 Input Connectors

### Input Connectors:



**CH 1:** Input connectors for waveform display.

**GND.:** a ground terminal

**USB PORT:** Connect the A-Type Plug of USB cable to your pc.

## Chapter 3 Understanding Function

- ◆ Set Oscilloscope
- ◆ Set Vertical System
- ◆ Set Horizontal System
- ◆ Set Trigger System
- ◆ Measure Signal
- ◆ Utility Function
- ◆ The Display System
- ◆ Save/Load
- ◆ Print

## 3.1 Set Oscilloscope

### Save Setup

The oscilloscope software saves the current setup before you close the oscilloscope software. The oscilloscope recalls this setup the next time you run the software. You can use the “**Save Setup**” menu to permanently save up to several different setups.

### Load Setup


The oscilloscope can recall the last setup before the oscilloscope software was running, any saved setups, or the factory setup. You can use the “**Load Setup**” menu to permanently recall a setup.

### Factory Setup

The oscilloscope software is set up for normal operation when it is shipped from the factory. This is the factory setup. To recall this setup, push the “**Factory Setup**” menu.

## 3.2 Set Vertical Systems

Click “**Vertical**” in main menu




### The Vertical Menu function:

- ◆ **Turn ON/Off:** Turn on/off the channel
- ◆ **Volt/DIV:** Select the channel voltage/div
- ◆ **Invert:** Turns the displayed waveform 180 degrees

### ➤ **Change Volt/DIV**

You can click “**Volt/Div**” in “**CH1**” Menu to select the voltage

You can also change “**CH1**” voltage in sidebar

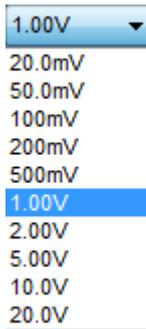

You can left click and drag the mouse on the green knob or the yellow knob to change the voltage.

### ➤ **Invert**

The invert function turns the displayed waveform 180 degrees, with respect to the ground level. When the oscilloscope is triggered on the inverted signal, the trigger is also inverted. Click “**Invert**” in **vertical**.


Turn off invert




Turn on invert



The following picture shows the waveform before inversion:

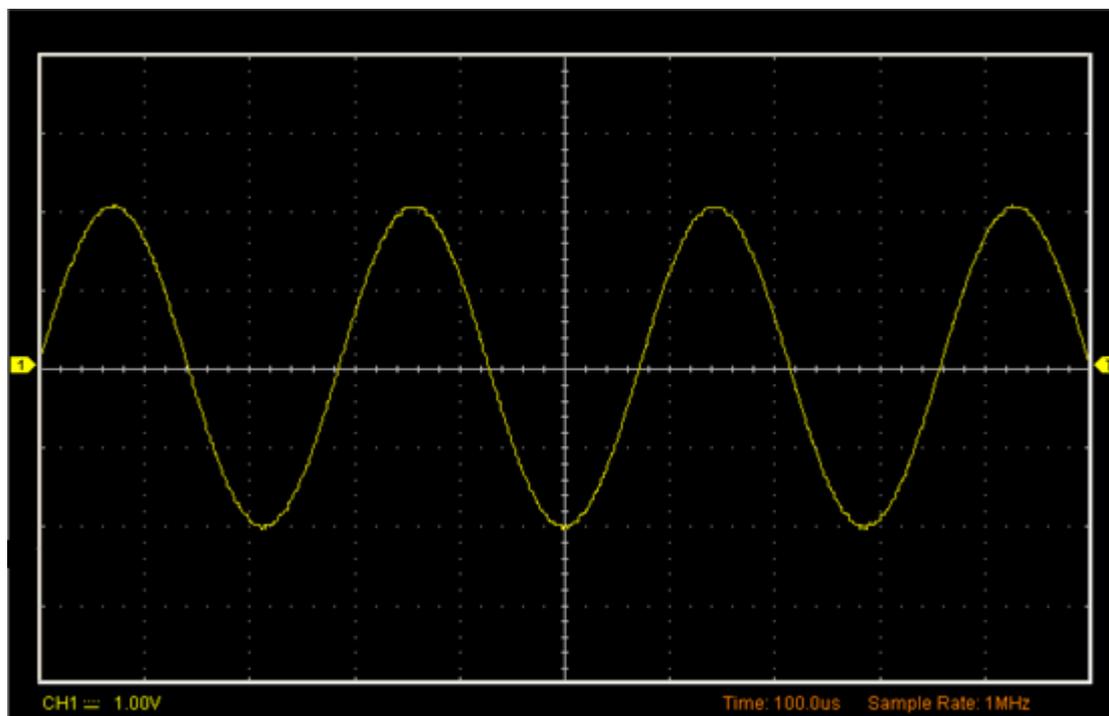

The following picture shows the waveform of inversion:

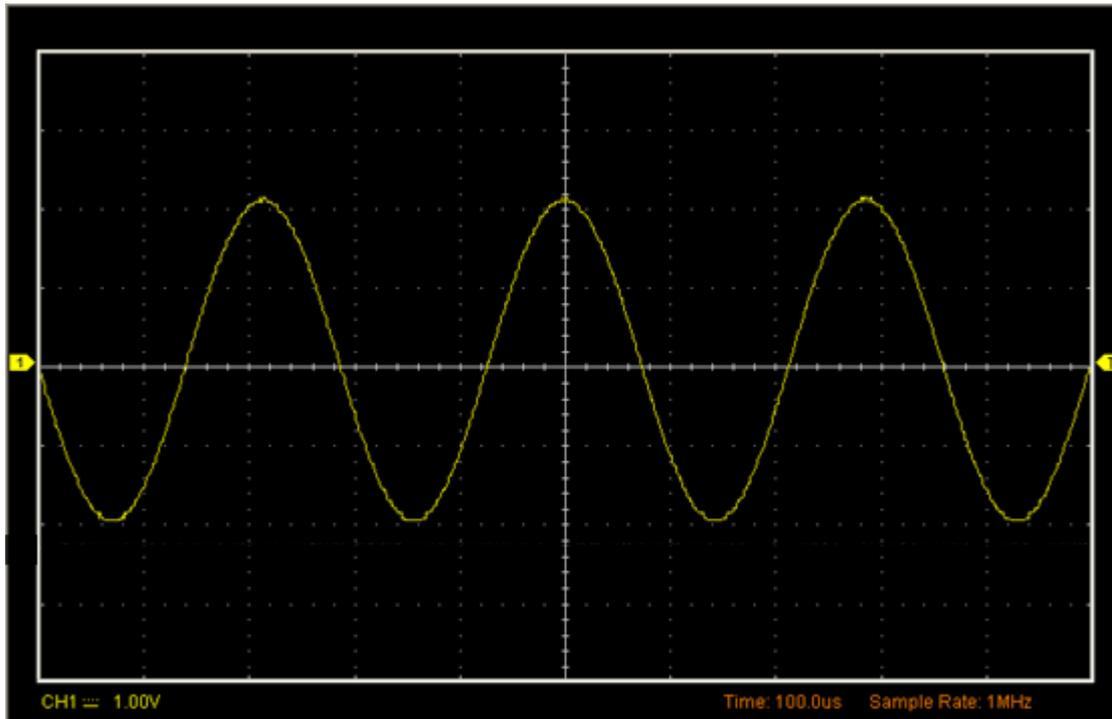


### 3.2.1 Set FFT


## Fast Fourier Transform Function

To use the FFT mode, you need to click  in Toolbar to open the FFT setup window.

**The FFT setup window:**

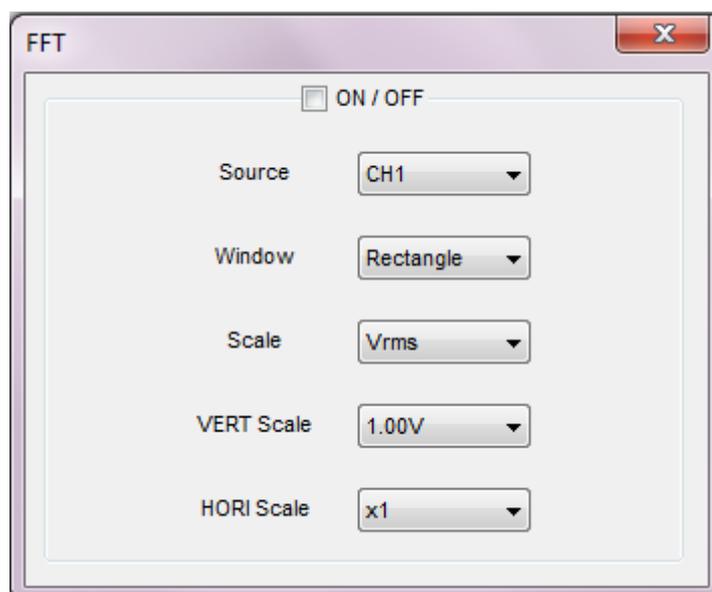

You can select the Source channel, Window algorithm, FFT number, and FFT Zoom factor. It displays only one FFT spectrum at a time.

**Source:** 

Selects the channel used as the FFT source

**Window:** Window Rectangle ▾

Selects the FFT window type

**Scale:** Vrms ▾

Selects the vertical scale units

**Vert Scale:** 1.00V ▾

Selects the vertical scale

**HORI Scale:** x1 ▾

Selects the FFT zoom factor

Sets horizontal scale, If the information is more than the quantity displayed to the display window, more information is displayed by using scroll bar.


You can click the “ON/OFF” button to start FFT math, also you can click this button to stop FFT math.

### 3.2.2 Set Reference

Click “**R**” in Toolbar to set REF.


The Reference Channel Function:

- ◆ **Turn On/Off:** Turn on/off the reference channel.
- ◆ **Volt/DIV:** Channel the resolution of the reference channel.
- ◆ **Time/DIV:** leading the setting of the time base parameters.

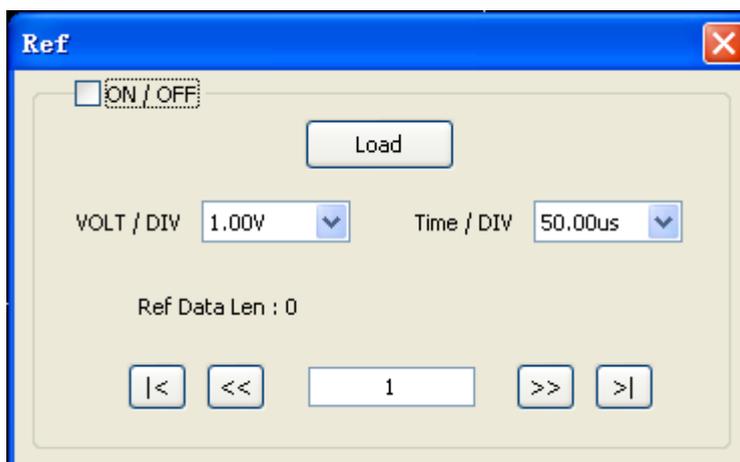

You can change the vertical scale of a waveform. The waveform display will contract or expand relative to the reference level.


### The Reference Waveform Display Window:

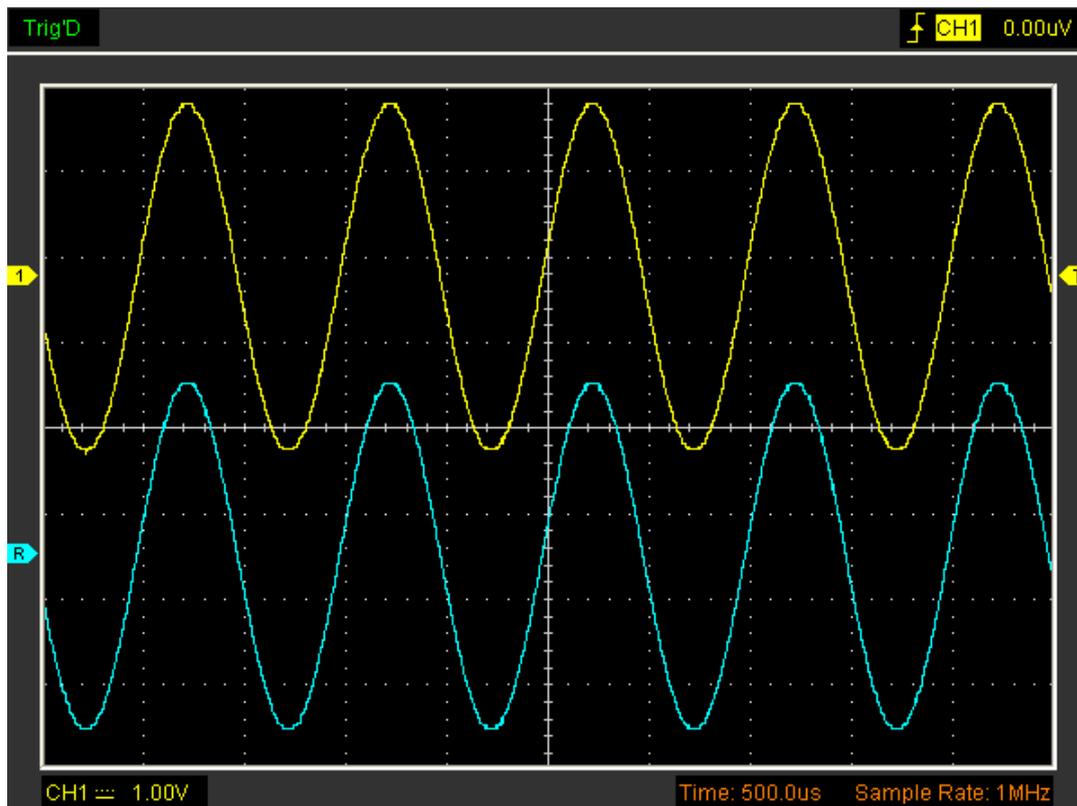

**Note:** If you turn on the “Reference” channel, the load file window will appear.

## 3.3 Set Horizontal System

The following figure shows the Horizontal System window. It shows the horizontal parameters settings.

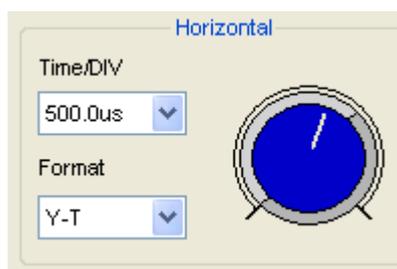

1. **Time/DIV:** leads the setting of the time base parameters



2. **Format:** leads the setting of the horizontal format parameters

The time base ranges of the oscilloscope is listed as follows. The horizontal scan speed is


from 4ns/div to 1hour/div.

In the **“Format”** menu of the **“Horizontal”** menu, select the display mode to **Y-T**.



### 3.4 Set Trigger System

Click **“Trigger”** in main menu.

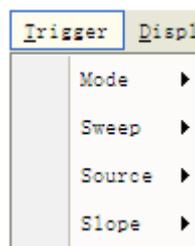

The trigger determines when the oscilloscope starts to acquire data and display a waveform. When a trigger is set up properly, it can convert unstable displays or blank screens into meaningful waveforms.

If the oscilloscope wants to acquire a waveform, it collects enough data so that it can draw the waveform to the left of the trigger point. The oscilloscope continues to acquire data while waiting for the trigger condition to occur. The oscilloscope continues to acquire enough data so that it can draw the waveform to the right of the trigger point after it detects a trigger.


The **Edge** trigger determines whether the oscilloscope finds the trigger point on the rising or the falling edge of a signal. Select **Edge** trigger mode to trigger on **Rising** edge or **Falling** edge.

**Mode:** Select the trigger mode.



The oscilloscope only provides edge trigger mode.

**Sweep:** Set the sweep mode to **Auto**, **Normal** or **Single**.

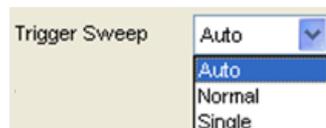

**Auto:** Acquire waveform even no trigger occurred

**Normal:** Acquire waveform when trigger occurred.

**Single:** Acquire waveform when trigger occurred then stop

**Slope:** Set the slope to **Rising (+)** or **Falling (-)**.




**Rising:** Trigger on rising edge

**Falling:** Trigger on falling edge

## 3.5 Measure Signal


### 3.5.1 Cursor

Click "**Cursor**" in main menu.

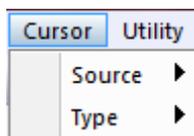


This method allows you to take measurements by moving the cursors

#### 1. Source

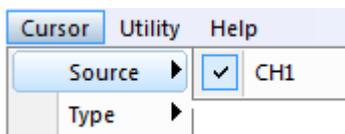

The user can set the source to **CH1**.

#### 2. Type

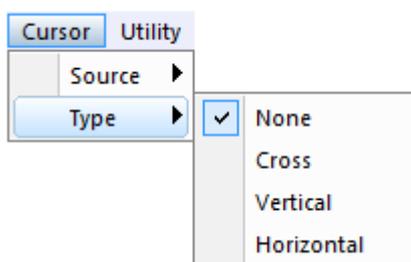


There are four types of cursors: **Cross**, **Vertical** and **Horizontal**.

##### 1) Cross

The **Cross** cursors appear as cross lines on the display and measure the vertical and horizontal parameters.


The **Cross** cursor display window:

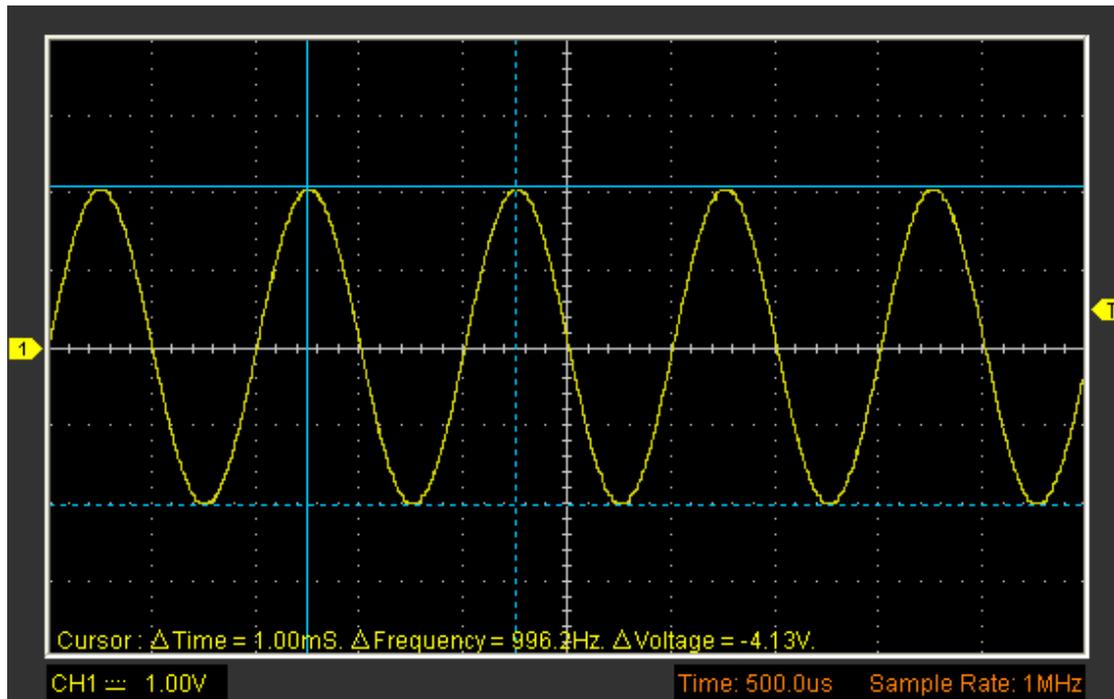

## 2) Vertical

The **Vertical** cursors appear as vertical lines on the display and measure the vertical parameters.


The **Vertical** cursor display window:

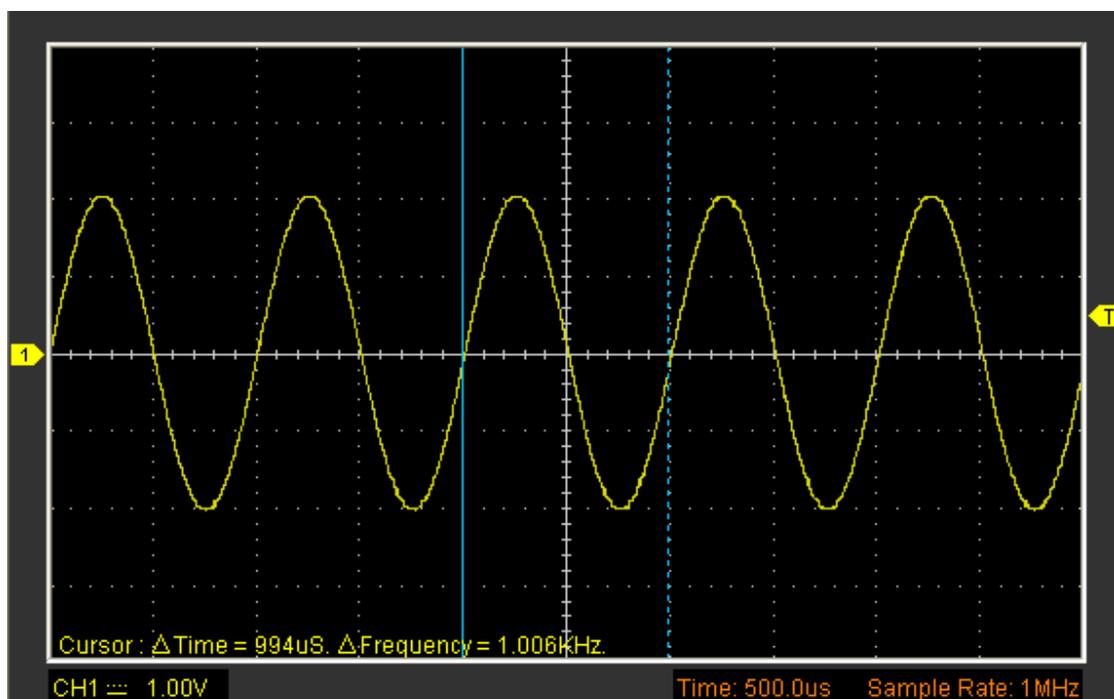

## 3) Horizontal

The **Horizontal** cursors appear as horizontal lines on the display and measure the horizontal parameters.

The **Horizontal** cursor display window:

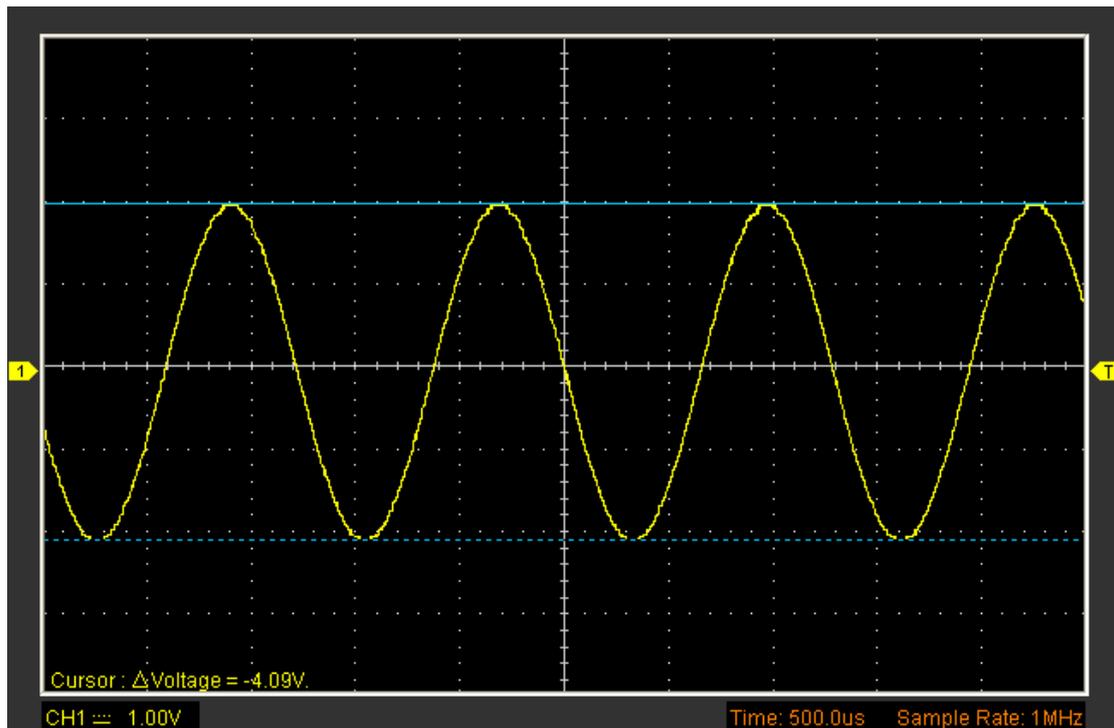


### 3.5.2 Measure

Click “**Measure**” in main menu.

The oscilloscope provides 20 parametric auto measurements (12 voltage and 8 time measurements).



#### 1. Vertical

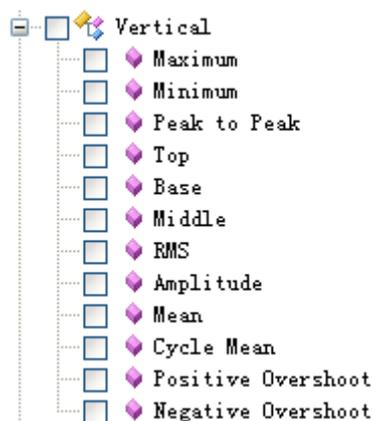

**Maximum:** Voltage of the absolute maximum level, Measured over the entire waveform

**Minimum:** Voltage of the absolute minimum level, Measured over the entire waveform

**Peak To Peak:** Peak-to-peak = Max – Min, Measured over the entire waveform

**Top:** Voltage of the statistical maximum level, Measured over the entire waveform

**Base:** Voltage of the statistical minimum level, Measured over the entire waveform

**Middle:** Voltage of the 50% level from base to top

**RMS:** The Root Mean Square voltage over the entire waveform

**Amplitude:** Amp = Base – Top, Measured over the entire waveform


**Mean:** The arithmetic mean over the entire waveform

**Cycle Mean:** The arithmetic mean over the first cycle in the waveform

**Preshoot:** Positive Overshoot =  $(\text{Max} - \text{Top})/\text{Amp} \times 100 \%$ , Measured over the entire waveform

**Overshoot:** Negative Overshoot =  $(\text{Base} - \text{Min})/\text{Amp} \times 100 \%$ , Measured over the entire waveform

## 2. Horizontal

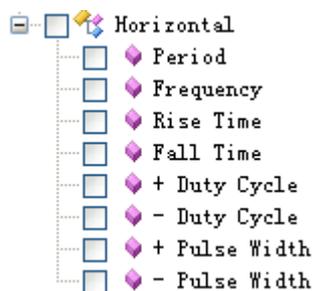

**Period:** Time to take for the first signal cycle to complete in the waveform

**Frequency:** Reciprocal of the period of the first cycle in the waveform

**Rise Time:** Time taken from lower threshold to upper threshold

**Fall Time:** Time taken from upper threshold to lower threshold

**+Duty Cycle:** Positive Duty Cycle =  $(\text{Positive Pulse Width})/\text{Period} \times 100\%$ , Measured of the first cycle in waveform

**-Duty Cycle:** Negative Duty Cycle =  $(\text{Negative Pulse Width})/\text{Period} \times 100\%$ , Measured of the first cycle in waveform


**+Pulse Width:** Measured of the first positive pulse in the waveform. The time between the 50% amplitude points

**-Pulse Width:** Measured of the first negative pulse in the waveform. The time between the 50% amplitude points

## 3. Clear Measure

Clear all measure items on display screen.

The **Measure** Display Window:

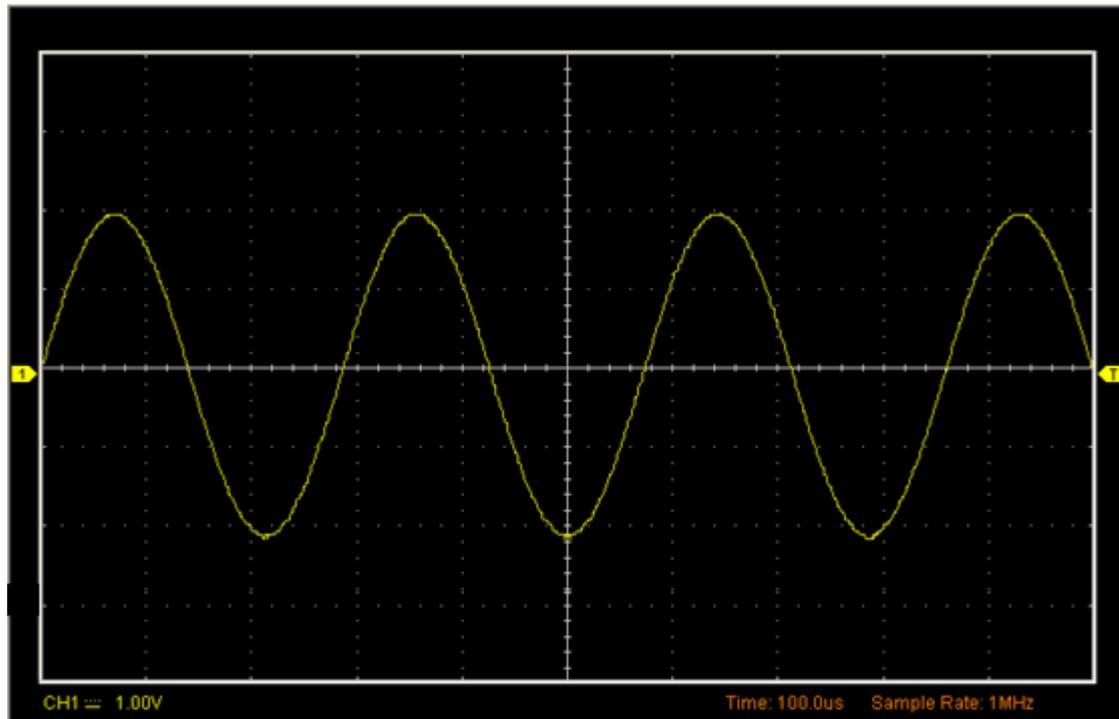


Information output	
CH1	
Maximum	2.10V
Period	1.10mS
Frequency	909.1Hz
+ Duty Cycle	49.6%

**Note:** The results of the automatic measurements will be displayed on the bottom of the screen. Maximum 8 results could be displayed at the same time. When there is no room, the next new measurement result will make the previous results moving left, out of screen.

## 3.6 The Utility Function

Click the “**Menu -> Utility**” to get into the “**Utility**” menu.

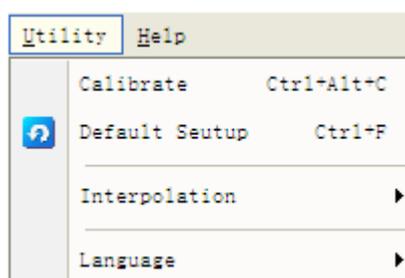


The “**Utility**” Functions:

### ◆ **Default Setup**

- ◆ Interpolation
- ◆ Language

### 3.6.1 Default Setup

Click “**Default Setup**” in “**Utility**” menu to load default setups

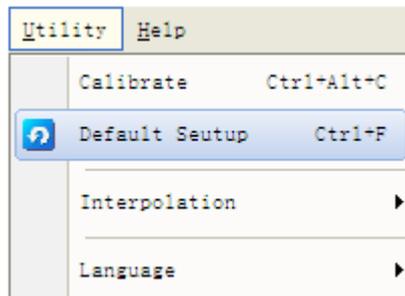

When you click the **Default Setup** in **Utility** menu, the oscilloscope displays the CH1 waveforms and removes all other waveforms.


The oscilloscope set up for normal operation when it is shipped from the factory and can be recalled at anytime by user.

The Factory Setup function does not reset the following settings:

- ◆ Language option
- ◆ Date and time

### 3.6.2 Language

Click “**Language**” in “**Utility**” menu.

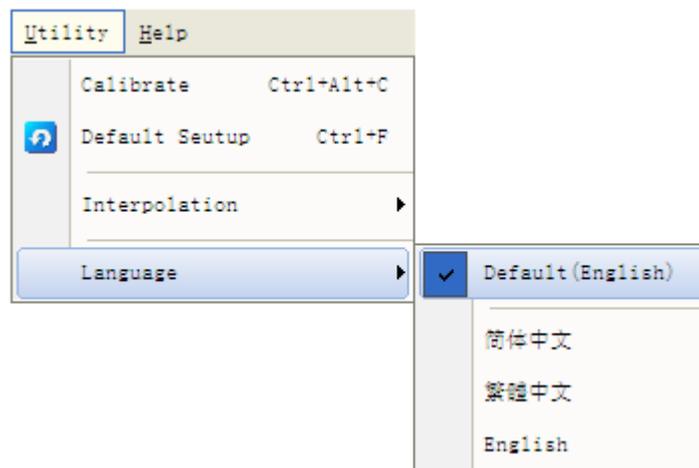


There are four languages in “**Language**” menu. The default language is English.


At the time base 40ns/div or faster, user can use the 3 different interpolation mode to get waveforms of different smoothness.

### 3.6.3 Interpolation


Click “**Utility->Interpolation**”.

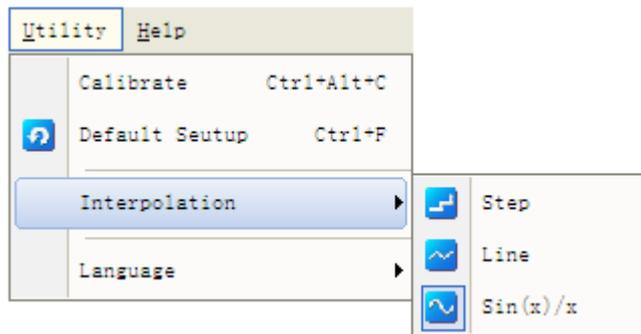


The **Step** Interpolation:

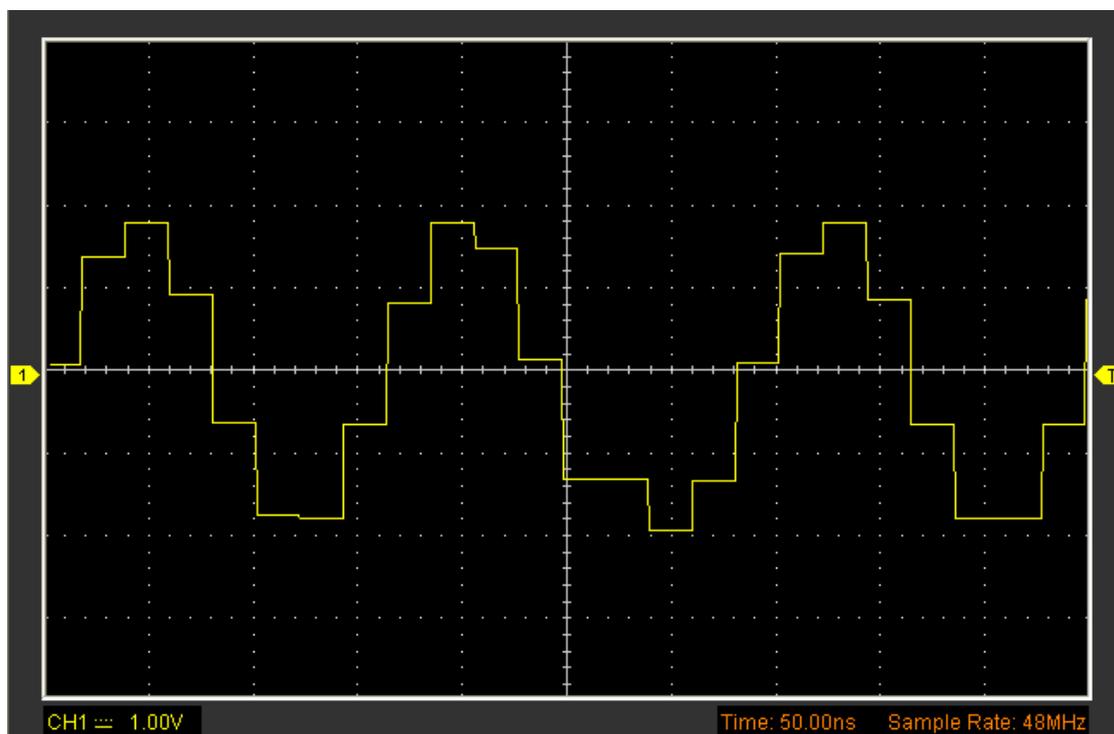

The **Linear** Interpolation:

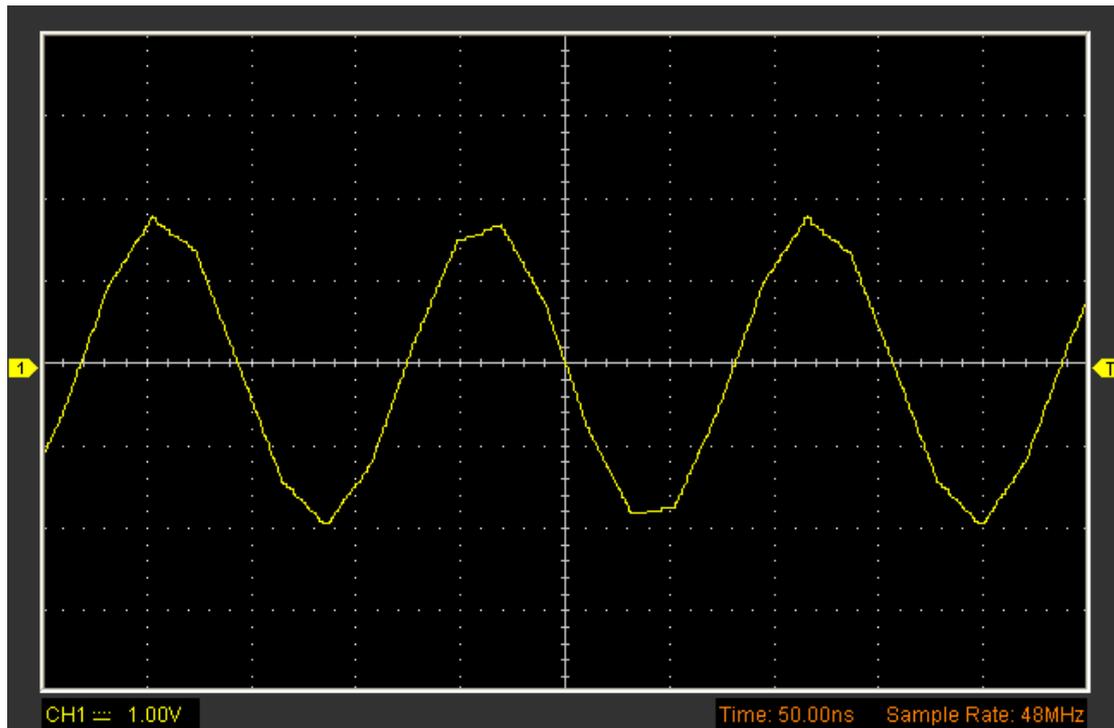

The **Sin(x)/x** Interpolation:

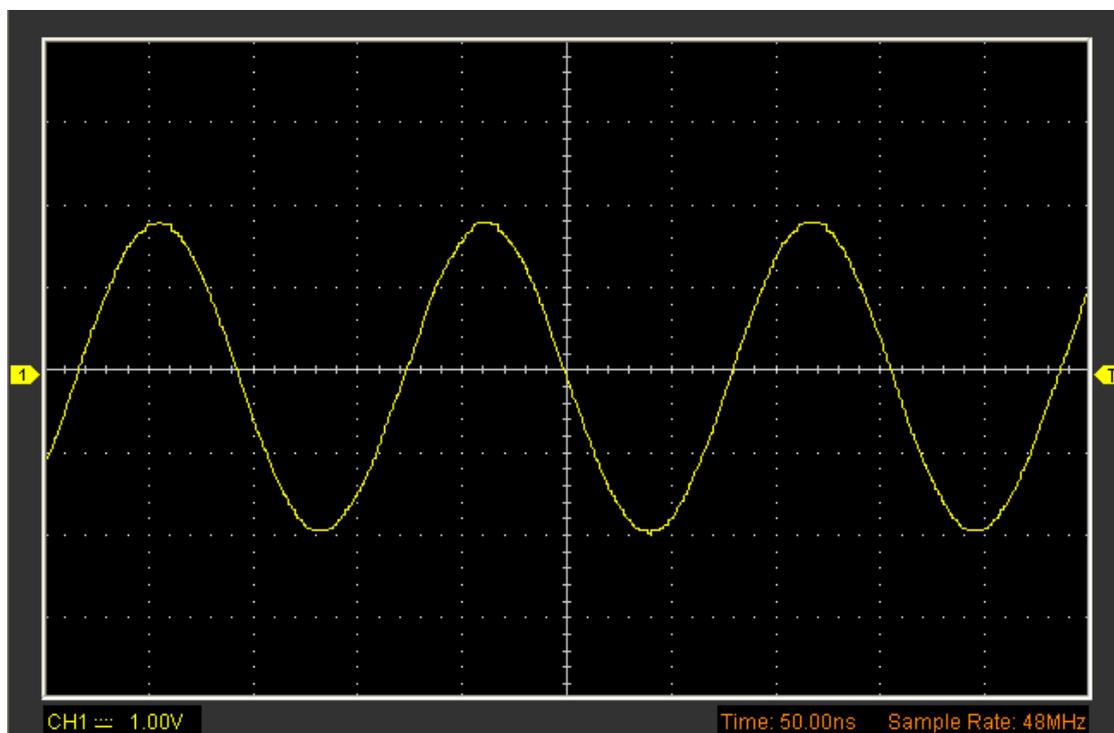


**Note:** The default interpolation mode is Sin(x)/x.

## 3.7 The Display System

Click “**Display**” in main menu.


The following figure shows the display system menu. Displays parameters setting.

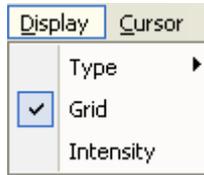


- ◆ **Type**
- ◆ **Grid**
- ◆ **Intensity**

### 3.7.1 Type


Click “**Type**” in “**Display**” menu.

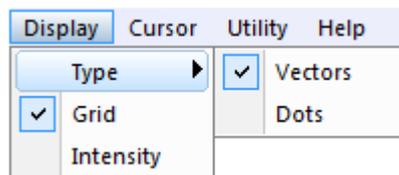

If the **Vectors** type mode is selected, the waveform will be displayed as following figure.

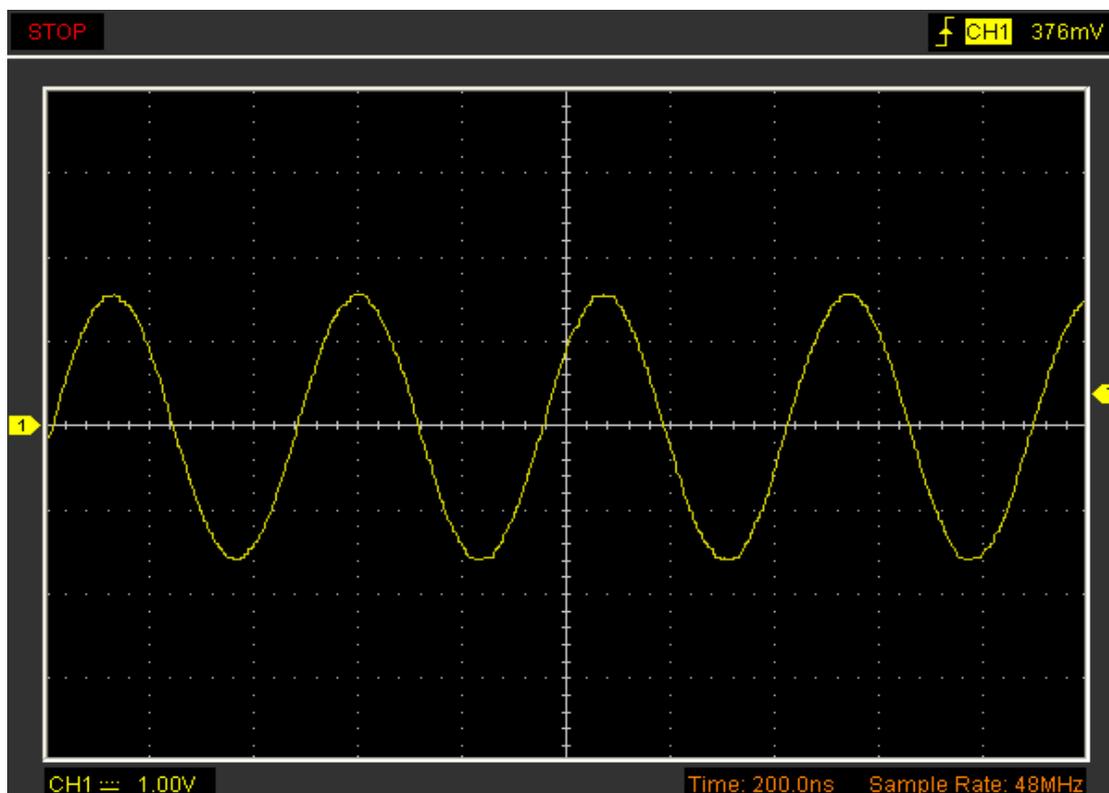


If the **Dots** type mode is selected, the waveform will be displayed as following figure.

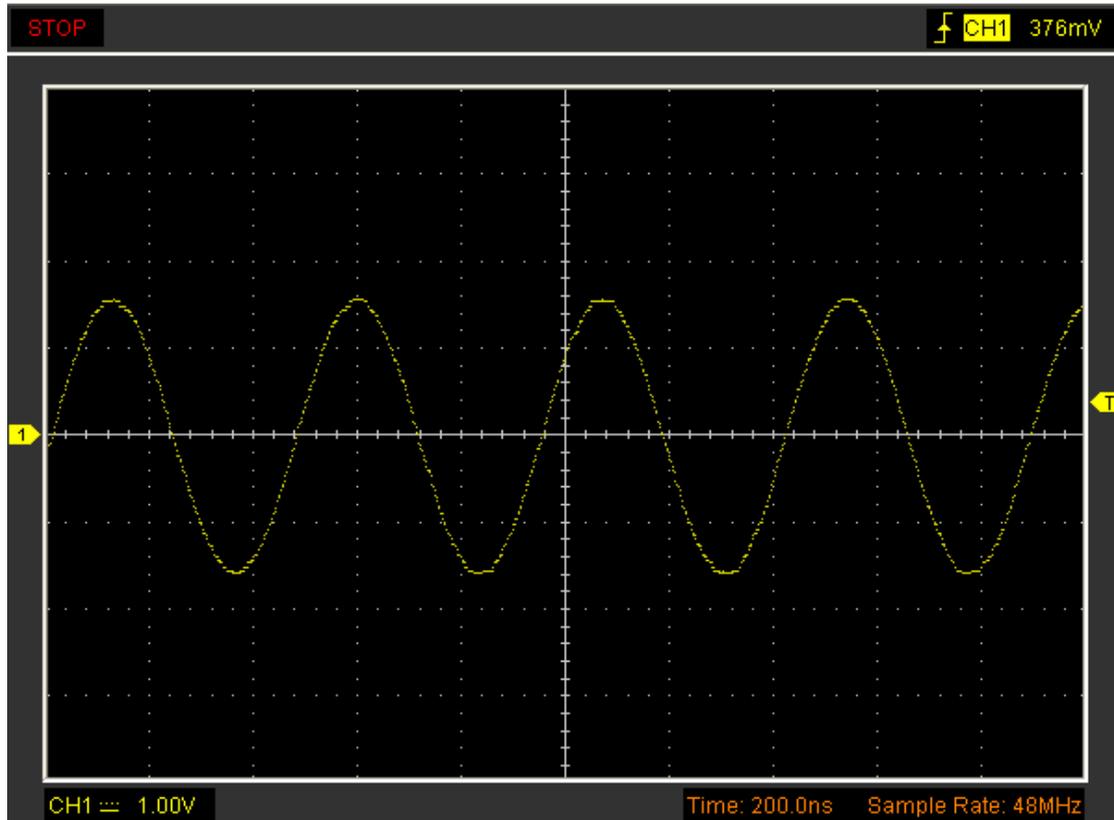


### 3.7.2 Grid


Click “Display” in main menu.

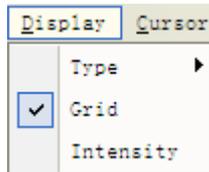

The grid shows:

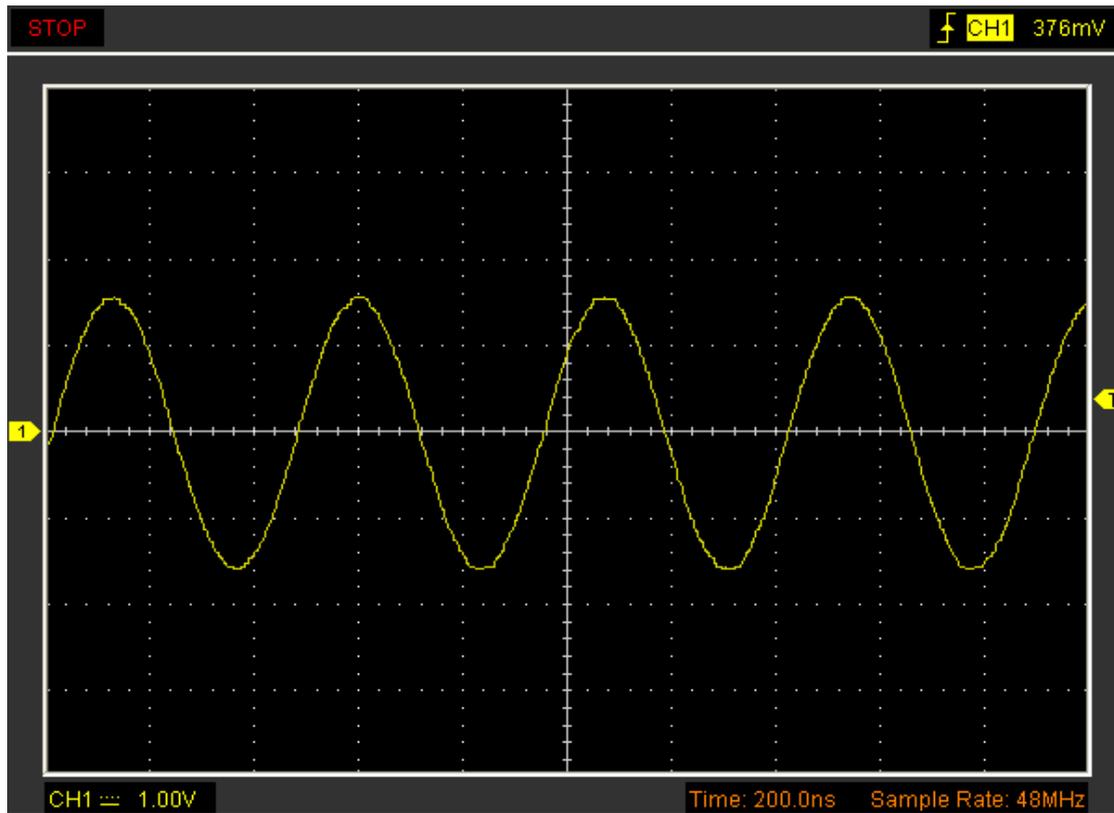

Without the grid show:

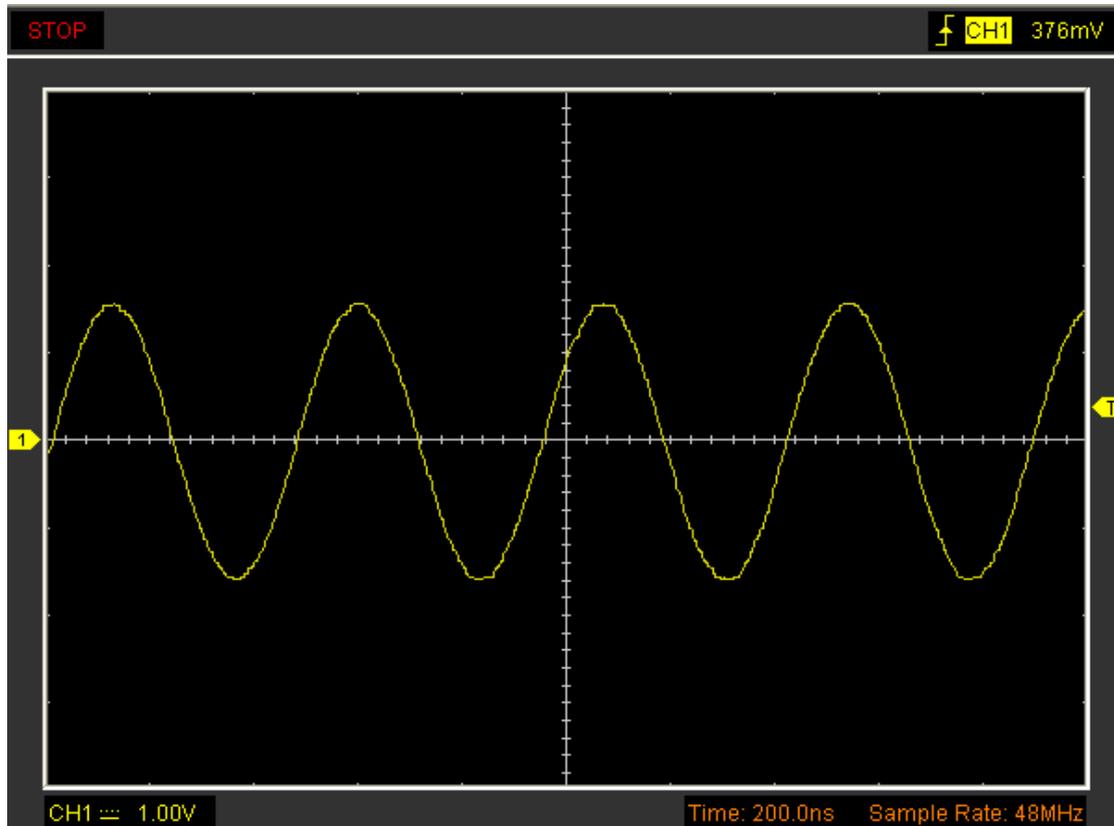

### 3.7.3 Intensity

Click **“Display->Intensity”** in main menu


The following figure shows the intensity dialog. It shows the display parameters setting.



You can change the grid and waveform color intensity in this dialog.

## 3.8 Save/Load Menu


Click **“File”** in main menu to save waveform, setups and screen

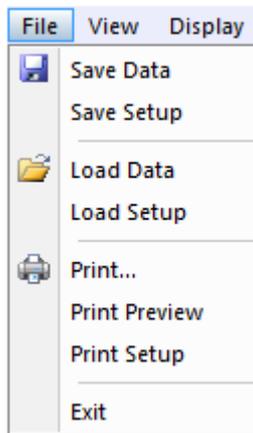

1. **Save Data**  
Save waveform data
2. **Save Setups**  
Save the current oscilloscope setups to file

### Load Menu


Click **“File”** in main menu to recall saved waveform, setup

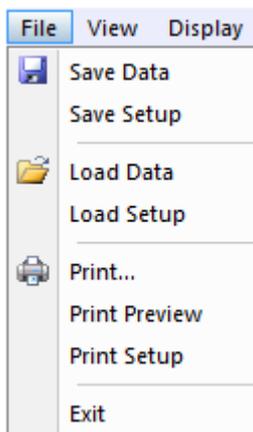

1. **Load Data**  
Load the waveform
2. **Load Setup**  
Load the instrument that had saved


## 3.9 Print

Click “Print” in File.

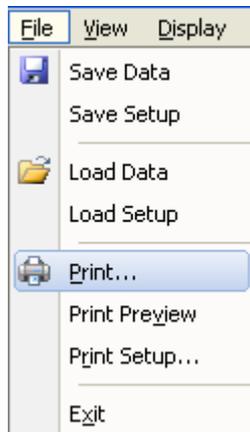

1. Click “Print” in “File” menu to set the printer to print the current waveform.
2. Click the “PrintPreview” in “File” menu to get into the Preview window.

In “PrintPreview” window, use the  button to change the size of the waveform graph. Click the “Close” button to turn this window off and click the “Print” button to print the report.

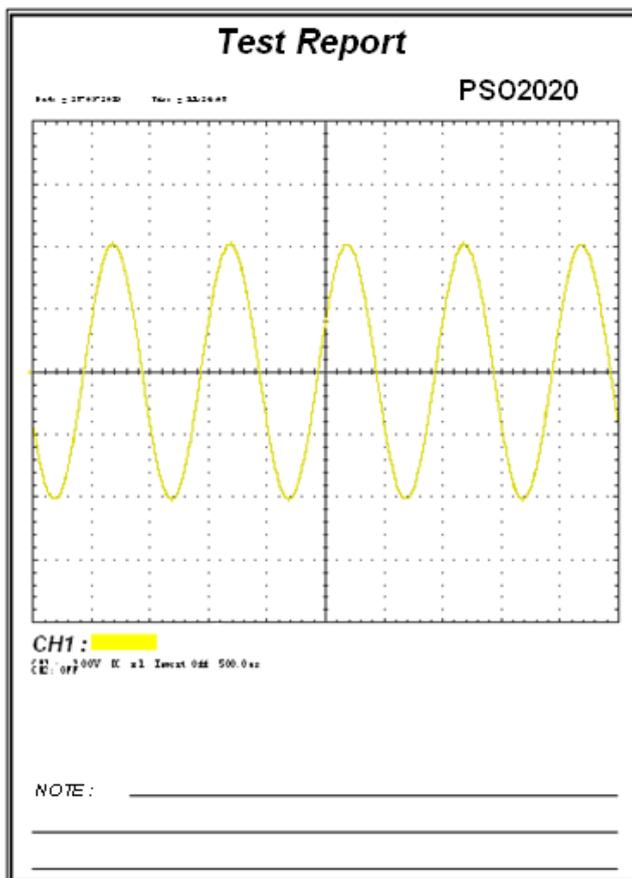

## Chapter 4 Application Example


- ◆ Simple Measurement
- ◆ Capturing a Single-Shot Signal
- ◆ Taking Cursor Measurement

## 4.1 Simple Measurement


To acquire and display a signal, please do the steps as follows:

Connect signal to **CH1** by using probe

The oscilloscope set the vertical, horizontal, and triggers controls at the best status automatically. Also, you can adjust the controls to meet your measurement to optimize the waveform display.

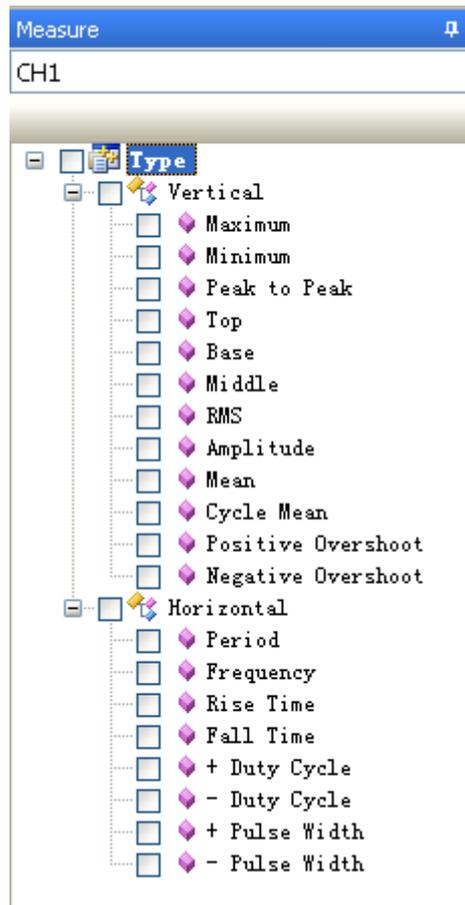

1. To measure the frequency and "**Vpp**", you can do these steps as follows:
2. Click the  Frequency button, the frequency of the signal display on the bottom of the waveform interface.
3. Click the  Peak to Peak button, the "**Vpp**" of the signal will also display on the bottom of the waveform interface.
4. To clear the measurement on the waveform interface, click the  button.

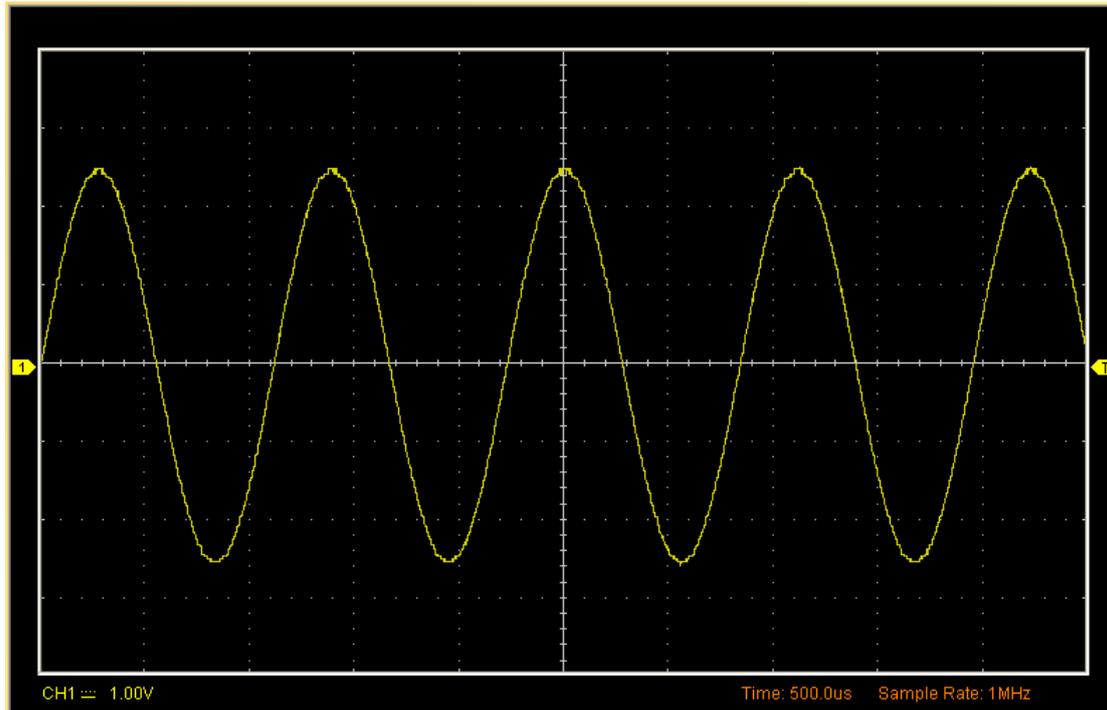

The results of measure display in Information output.

Information output	
CH1	
Peak to Peak	5.11V
- Pulse Width	554uS

## 4.2 Capturing a Single-Shot Signal

To capture a single event, it needs to gather some pre-test knowledge of the signal in order to set up the trigger level and slope correctly. For example, if the event is derived from 3.3V COMS logic, a trigger level of 1.2 or higher Volts should work on a rising edge.

Do these steps as follows:

1. Set up the trigger in the Trigger Menu, or in the Trigger Setting window.
  - 1) Adjust the Trigger Mode to Edge.
  - 2) Set the Trigger Sweep to Single.
  - 3) Set the Trigger Slope to "+" which means you select the rising edge.
  - 4) Adjust the Volts/Div and the time base in a proper range for the signal.
  - 5) Drag the trigger level sign on the waveform display screen to proper position. It's usually higher a little above the normal level.

- 6) When the trigger conditions are met, data appears on the display representing the data points that the oscilloscope obtained with one acquisition.


## 4.3 Taking Cursor Measurements

Use cursors to make time and amplitude measurements on a waveform quickly.

### Measure the Peak Frequency or Time of the First Sine Waveform

Do these steps:

1. Click "**Cursor->Source**", select CH1.
2. Click "**Cursor->Type**", select Vertical.
3. Push left mouse button, and the vertical lines appear.
4. Drag the mouse button to the point you want to measure.
5. Release the left mouse button, the frequency difference and time difference will be shown at the status bar.

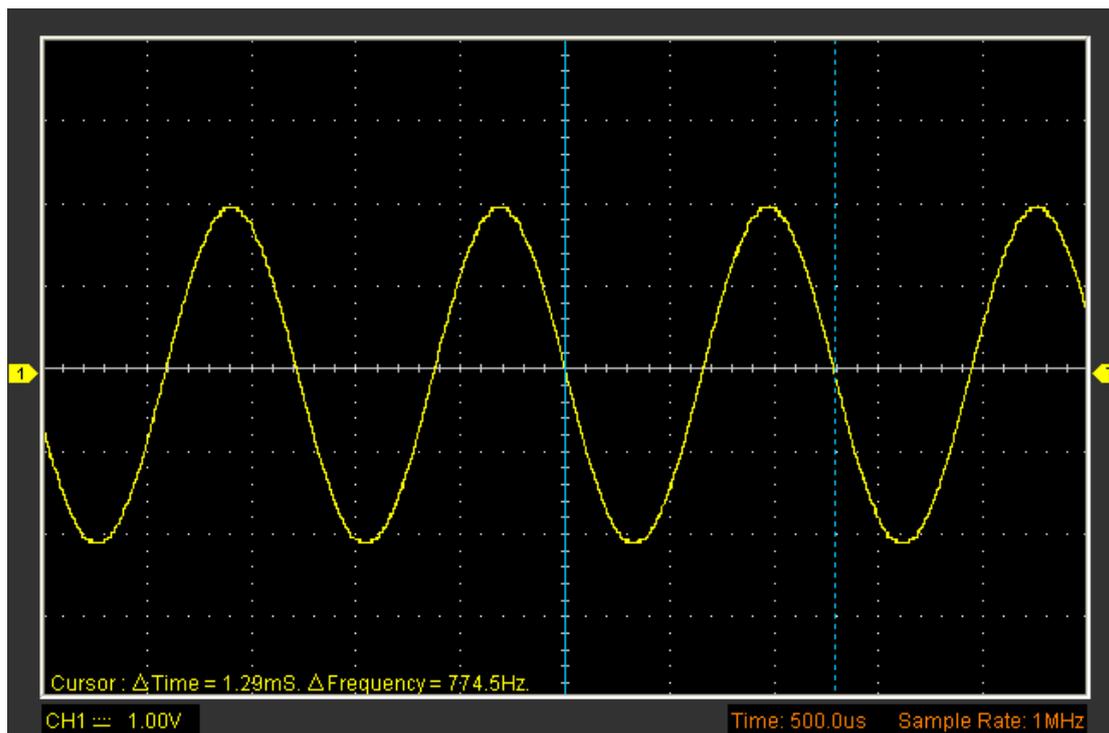


### Measure the Amplitude of the First Waveform Peak of the Waveform

Do these steps:

1. Click "**Cursor->Source**", select CH1.
2. Click "**Cursor->Type**", select Horizontal.
3. Push left mouse button, and the Horizontal lines appear.
4. Drag the mouse button to the point you want to measure.

5. Release the left mouse button, the voltage difference will be shown at the status bar.

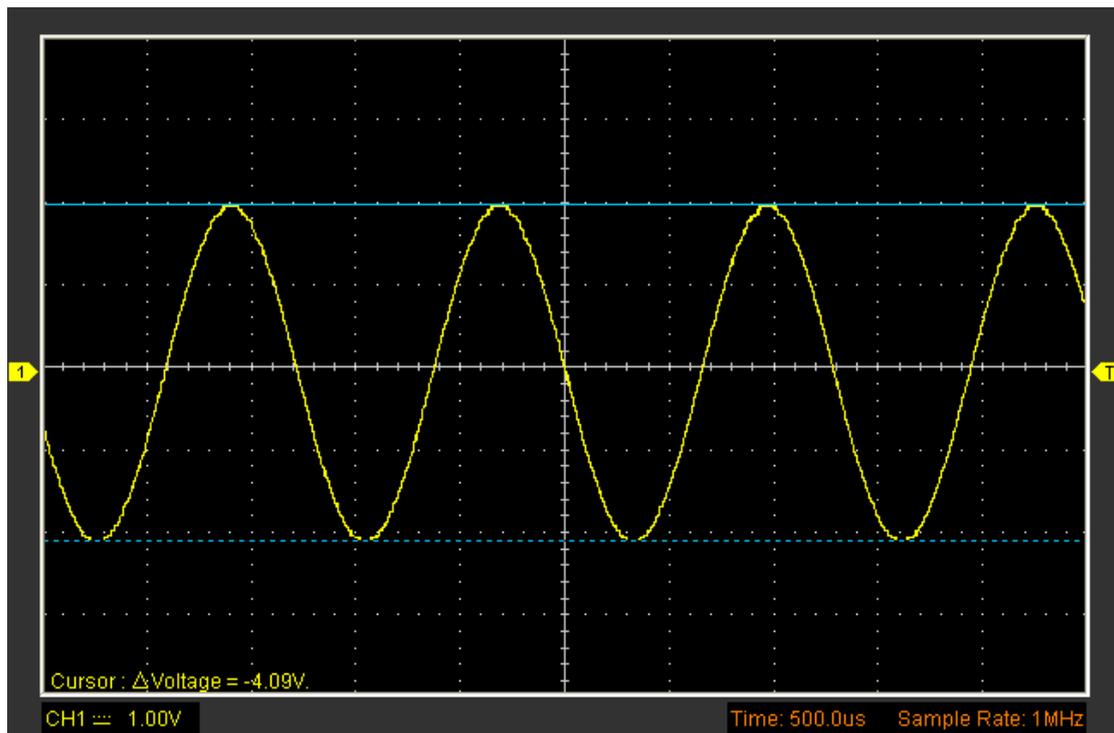

**Note:** Click “Cursor->Type”, select “Cross”, you can measure time and amplitude at one time.

# Appendix

- ◆ **Appendix A: Specifications**
- ◆ **Appendix B: General Maintenance**

## Appendix A: Specification

### Specifications Table:

Input	
Max. sample rate	Real-time sampling:96MS/s
Channels	1 Channels
Bandwidth	20MHz (-3dB)
Vertical resolution	8 bits/channel
Gain range	20mV~20V/div
Range	8 divisions
Offset level	+/-4 divisions
Coupling	DC/AC/GND
Offset increments	0.02 div
Impedance	1M ohm
DC accuracy	+/-3%
Max. Input	50V
Max. input voltage	60Vpk(Without external attenuation DC + peak AC < 10kHz)
Display mode	Y-T
Timebase	
Timebase range	1ns/div~5000s/div(1ns,2ns,5ns,10ns,20ns,50ns,100ns,200ns,500ns,1us,2us,5us,10us,20us,50us,100us,200us,500us,1ms,2ms,5ms,10ms,20ms,50ms,100ms,200ms,500ms,1s,2s,5s,10s,20s,50s,100s,200s,500s,1000s,2000s,5000s/div 1,2,5 sequence)
Range	10 divisions
Buffer Size	MAX.1M samples
Trigger	
Type	Edge trigger: Rising edge, Falling edge
Mode	Auto, Normal and Single
Autoset	Yes(100Hz-20MHz)
Range	8 divisions
Trigger level	+/-4 divisions
Settability	0.02 div increments
Math	
Measurements	Vp-p, Vmax, Vmin, Vmean, Vrms, Vamp, Vtop, Vbase, Vmid,positive overshoot, negative overshoot, cycle mean, cycle RMS, period, frequency, positive pulse width, negative pulse width, rise time (10%~90%), fall time (10%~90%), positive duty cycle, negative duty cycle
Math	FFT
FFT	Rectangular, Hanning, Hamming, Blackman Window
Physical	

---

Interface	Universal Serial Bus(USB 2.0)
Power	No external power source required. Bus-powered from USB
Dimensions	230x40x 20(mm)

## **Appendix B: General Maintenance**

### **General Care**

Do not store or leave the oscilloscope where the device will be exposed to direct sunlight for long periods of time.

### **Caution**

To avoid damages to the device or probes, do not expose them to sprays, liquids or solvents.

To avoid damages to the surface of the device or probes not use any abrasive or chemical cleaning agents.

### **Cleaning**

Inspect the device and probes as often as operating conditions require. Make sure the device disconnect form all power sources.

To clean the exterior surface, perform the following steps:

1. Remove loose dust on the outside of the oscilloscope and probes with a lint-free cloth.

Use care to avoid scratching the clear glass display filter.

2. Use a soft cloth dampened with water to clean the device.