

**PRODUCT**

# Disposable ESD Wrist Strap

Disposable wrist straps are designed for users who temporarily need an ESD wrist strap without the requirement of being durable or reusable. Individually bagged and complete with instructions, the strap can be shipped with components and devices for assembly eg. memory upgrades, servers components, circuit boards etc.

A hypoallergenic adhesive provides 360-degree contact, reducing skin-to-band resistance by its conductive element fabricated into the plastic ribbon. At the other end of the strap, the adhesive copper foil attaches to any convenient electrical ground. Once removed the adhesive will leave no residue behind on newly assembled products.



**FEATURES**


- Low cost, static control that can be shipped with your product
- 1.5m total length
- Fully adjustable wrist loop - no messy adhesives
- Copper foil for ground connection - no tape residues left on equipment
- Each wrist strap is packaged individually with instructions
- 25 individually bagged wrist straps per pack

PRODUCT CODE	DESCRIPTION	NOTES
066-0064	Disposable ESD Wrist Strap	Pack of 25
066-0052	Disposable ESD Wrist Strap	Each

SPECIFICATIONS	
Length	1.5m
Resistance	1 Megaohm
Packaging	25 individually bagged wrist straps per pack

To request a quotation or for more information, please call **+44 (0)1473 836200** email [info@antistat.co.uk](mailto:info@antistat.co.uk) or visit [www.antistat.co.uk](http://www.antistat.co.uk)

IMPORTANT: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © 2021 Antistat.

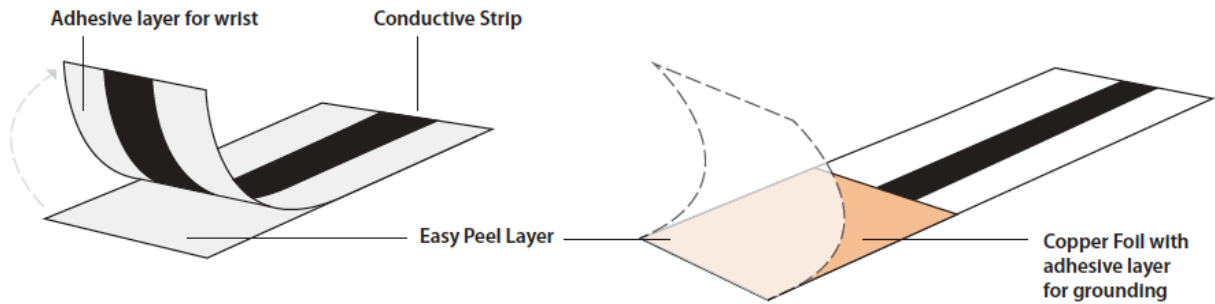

Remove wrist strap from external packaging.



Peel back to reveal adhesive layer.



Place the tacky side on wrist.



Ensure wrist is covered and the black conductive strip is against the skin.



Peel back to reveal copper foil layer at the other end.



Fix the copper foil to your grounding point.

To request a quotation or for more information, please call **+44 (0)1473 836200**  
email [info@antistat.co.uk](mailto:info@antistat.co.uk) or visit [www.antistat.co.uk](http://www.antistat.co.uk)

**IMPORTANT:** This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © 2021 Antistat.