

Programmable DC Power Supply

PSU Series

PROGRAMMING MANUAL

Revision 1.2 July 2014



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Table of Contents

SAFETY INSTRUCTIONS	4
GETTING STARTED	8
PSU Series Overview	9
Appearance	13
Configuration Settings	21
REMOTE CONTROL	30
Interface Configuration	31
Command Syntax	55
Command List	58
Status Register Overview	104
Error List	115
APPENDIX	124
PSU Default Settings	124
Error Messages & Messages	124
LED ASCII Table Character Set	126
INDEX.....	128

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to insure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.



Warning: Identifies conditions or practices that could result in injury or loss of life.



Caution: Identifies conditions or practices that could result in damage to the PSU or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



CAUTION

- Do not place any heavy object on the PSU.
- Avoid severe impact or rough handling that leads to damaging the PSU.
- Do not discharge static electricity to the PSU.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the PSU unless you are qualified.

(Measurement categories) EN61010-1:2010 and EN61010-2-030 specifies the measurement categories and their requirements as follows. The PSU falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- 0 is for measurements performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage range: 85Vac~265Vac
 - Frequency: 47Hz to 63Hz
 - To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.
-

-
- Cleaning the PSU
- Disconnect the power cord before cleaning.
 - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
 - Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.
-

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: 20%~ 85% (no condensation)
- Altitude: < 2000m
- Temperature: 0°C to 50°C

(Pollution Degree) EN61010-1:2010 and EN61010-2-030 specifies the pollution degrees and their requirements as follows. The PSU falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
 - Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
 - Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.
-

Storage environment

- Location: Indoor
 - Temperature: -25°C to 70°C
 - Relative Humidity: ≤90%(no condensation)
-

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the power supply in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons




WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

This chapter describes the power supply in a nutshell, including its main features and front / rear panel introduction. After going through the overview, please read the theory of operation to become familiar with the operating modes, protection modes and other safety considerations.



GETTING STARTED	8
PSU Series Overview	9
Series lineup	9
Main Features	10
Accessories	11
Appearance	13
PSU Series Front Panel	13
PSU Series Display and Operation Panel	16
Rear Panel	18
Configuration Settings.....	21

PSU Series Overview

Series lineup

The PSU series consists of 5 models, covering a number of different current, voltage and power capacities:

Model name	Voltage Rating ¹	Current Rating ²	Power
PSU 6-200	6V	200A	1200W
PSU 12.5-120	12.5V	120A	1500W
PSU 20-76	20V	76A	1520W
PSU 40-38	40V	38A	1520W
PSU 60-25	60V	25A	1500W

¹Minimum voltage guaranteed to 0.2% of rating voltage.

²Minimum current guaranteed to 0.4% of rating current.

Main Features

- Performance
- High power density: 1500W in 1U
 - Universal input voltage 85~265Vac, continuous operation.
 - Output voltage up to 60V, current up to 200A.
-

- Features
- Active power factor correction.
 - Parallel master/slave operation with active current sharing.
 - Remote sensing to compensate for voltage drop in load leads.
 - 19" rack mounted ATE applications.
 - A built-in Web server that lets you monitor the instrument directly from an internet browser on your computer.
 - OVP, OCP and OHP protection.
 - Preset memory function.
 - Adjustable voltage and current slew rates.
 - Bleeder circuit ON/OFF setting. (to prevent over-discharging of batteries)
 - CV, CC priority start function. (prevents overshoot with output ON)
 - Supports test scripts.
-

- Interface
- Built-in RS-232/485, LAN and USB interface.
 - Analog output programming and monitoring.
 - Optional interfaces: GPIB, Isolated Voltage (0-5V/0-10V) and Isolated Current (4-20mA) programming and monitoring interface. (Factory options)

Accessories

Before using the PSU power supply unit, check the package contents to make sure all the standard accessories are included.

Standard Accessories	Part number	Description	Qty.
		Output terminal cover	1
		Analog connector plug kit	1
		Output terminal M8 bolt set	1
		Input terminal cover	1
	62SB-8K0HD101	1U Handle, ROHS	2
	62SB-8K0HP101	1U BRACKET (LEFT), RoHS	1
	62SB-8K0HP201	1U BRACKET (RIGHT), RoHS	1
	82SU-60250E01	User manual CD	1 set
	82SU-60250M01	Quick start guide	1
	82SU-062H0K01	Packing list	
	82GW-00000C01	* CTC GW/INSTEK JAPAN USE ,RoHS	1

Factory Installed Options	Part number	Description
	PSU-GPIB	GPIB interface
	PSU-ISO-V	Voltage programming isolated analog interface
	PSU-ISO-I	Current programming isolated analog interface


Optional Accessories	Part number	Description
	PSU-01C	Cable for 2 units of PSU-Series in parallel mode connection
	PSU-01B	Bus Bar for 2 units of PSU-Series in parallel mode connection
	PSU-02C	Cable for 3 units of PSU-Series in parallel mode connection
	PSU-02B	Bus Bar for 3 units of PSU-Series in parallel mode connection
	PSU-03C	Cable for 4 units of PSU-Series in parallel mode connection
	PSU-03B	Bus Bar for 4 units of PSU-Series in parallel mode connection
	PSU-232	RS232 cable with DB9 connector kit
	PSU-485	RS485 cable with DB9 connector kit
	GRM-001	Rack-mount slides (General Devices P/N: C-300-S-116-RH-LH)
	GTL-246	USB Cable 2.0-A-B Type, Approx. 1.2M
	GPW-001	Power Cord SJT 12AWG/3C, 3m MAX Length, 105 °C, RNB5-5*3P UL/CSA type
	GPW-002	Power Cord H05W-F 1.5mm ² /3C, 3m MAX Length, 105 °C, RNB5-5*3P VDE type
	GPW-003	Power Cord VCTF 3.5mm ² /3C, 3m MAX Length, 105 °C, RNB5-5*3P PSE type

Download	Name	Description
	psu_cdc.inf	PSU USB driver


Other	Name	Description
		Certificate of traceable calibration

Appearance

PSU Series Front Panel

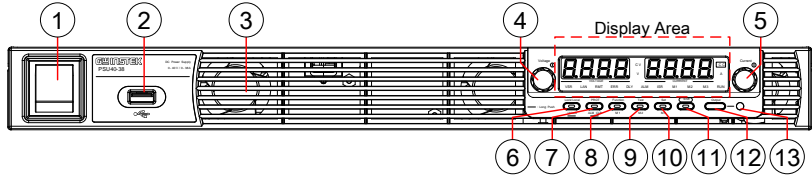


1. Power Switch  Used to turn the power on/off.


2. USB A Port  USB A port for data transfer, loading test scripts etc.






3. Air Inlet

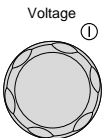
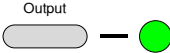
Air inlet for cooling the inside of the PSU series.

4. Voltage Knob  Used to set the voltage value or select a parameter number in the Function settings.

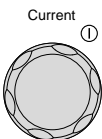Display Area The display area shows setting values, output values and parameter settings. The function LEDs below show the current status and mode of the power supply. See page 16 for details.


5. Current Knob  Displays the current or the value of a Function parameter.

- | | | |
|-----------------------------|---|--|
| <p>6. Lock/Local Button</p> | <p>Lock/Local</p>  | <p>Used to lock all front panel buttons other than the Output Button or it switches to local mode.</p> |
| <p>Unlock Button</p> | | <p>(Long push) Used to unlock the front panel buttons.</p> |
| <p>7. PROT Button</p> | <p>PROT</p>  | <p>Used to set and display OVP, OCP and UVL.</p> |
| <p>ALM_CLR Button</p> | | <p>(Long push) Used to release protection functions that have been activated.</p> |
| <p>8. Function Button</p> | <p>Function</p>  | <p>Used to configure the various function.</p> |
| <p>M1 Button</p> | | <p>(+Shift) Used to recall the M1 setup.
(+Shift and hold) Used to save the current setup to M1.</p> |
| <p>9. Test Button</p> | <p>TEST</p>  | <p>Used to run customized scripts for testing.</p> |
| <p>M2 Button</p> | | <p>(+Shift) Used to recall the M2 setup.
(+Shift and hold) Used to save the current setup to M2.</p> |
| <p>10. Set Button</p> | <p>SET</p>  | <p>Used to set and confirm the output voltage and output current.</p> |
| <p>M3 Button</p> | | <p>(+Shift) Used to recall the M3 setup.
(+Shift and hold) Used to save the current setup to M3.</p> |

11. Shift Button  Used to enable the functions that are written in blue characters below the button.
12. Output Button  Used to turn output on and off.
13. Output ON LED Lights in green during output ON.

PSU Series Display and Operation Panel

Display Area

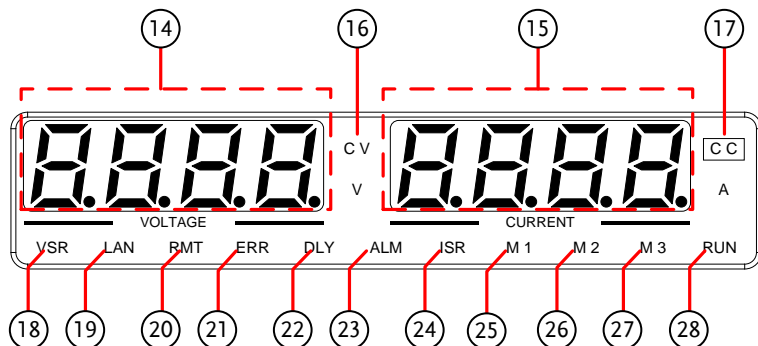

- | | |
|-------------------|---|
| 14. Voltage Meter | Displays the voltage or the parameter number of a Function parameter. |
| 15. Current Meter | Displays the current or the value of a Function parameter. |
| 16. CV LED | Lights in green during constant voltage mode. |
| 17. CC LED | Lights in green during constant current mode. |
| 18. VSR LED | The voltage slew rate enable. |
| 19. LAN LED | Lights up when the LAN interface is connected. |
| 20. RMT LED | Lights in green during remote control. |
| 21. ERR LED | Lights in red when an error has occurred. |
| 22. DLY LED | The output on/off delay enable. |
| 23. ALM LED | Lights in red when a protection function has been activated. |


- 24. ISR LED The current slew rate enable.
- 25. M1 LED Lights in green when the memory value are being recalled or saved.
- 26. M2 LED Lights in green when the memory value are being recalled or saved.
- 27. M3 LED Lights in green when the memory value are being recalled or saved.
- 28. RUN LED Auto sequence has been activated.




Note

Only the ERR and ALM LED's are red. All the others are green.

Rear Panel

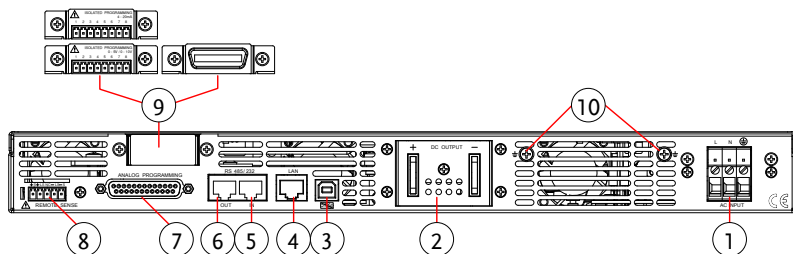


1. AC Input

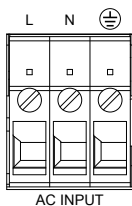


Wire clamp connector.

2. DC Output

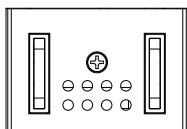


Output terminals for 6V to 60V models.

3. USB




USB port for controlling the PSU remotely.

4. LAN



Ethernet port for controlling the PSU remotely.

5. Remote-IN




Two different types of cables can be used for RS232 or RS485-based remote control.

PSU-232: RS232 cable with DB9 connector kit.

PSU-485: RS485 with DB9 connector kit.

6. Remote-OUT



RJ-45 connector that is used to daisy chain power supplies with the Remote-IN port to form a communication bus.


PSU-485S: Serial link cable with RJ-45 shielded connector.

7. Analog Control




External analog control connector.

8. Remote Sense



Compensation of load wire drop.


9. Option Slot



Blank sub-plate for standard units.
 Isolated Analog connector for units equipped with Isolated Current and Voltage Programming and Monitoring option.
 GPIB connector for units equipped with IEEE programming option.

10. Ground Screw

Connector for grounding the output (two positions, shown in red).

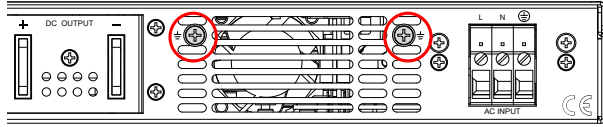

Configuration Settings

Setting Normal Function Settings

The normal function settings (F-01~F-61, F-70~F-76) and F-88 ~ F-89 can be easily configured with the Function key.

- Ensure the load is not connected.
- Ensure the output is off.
- Function settings F-90~97 can only be viewed.



Note

Function setting F-89 (Show Version) can only be viewed, not edited.

Configuration settings F-90~ F-97 cannot be edited in the Normal Function Settings. Use the Power On Configuration Settings. See page 23 for details.


Steps

1. Press the Function key. The function key will light up.

Function




2. The display will show F-01 on the left and the configuration setting for F-01 on the right.




3. Rotate the voltage knob to change the F setting.



Range F-00~F-61, F-70~F-76,
F-88~F-97



- 4. Use the current knob to set the parameter for the chosen F setting.



Press the Voltage knob to save the configuration setting. ConF will be displayed when it is configuring.



Exit

Press the Function key again to exit the configuration settings. The function key light will turn off.



Setting Power On Configuration Settings

Background

The Power On configuration settings can only be changed during power up to prevent the configuration settings being inadvertently changed.

- Ensure the load is not connected.
- Ensure the power supply is off.

Steps

1. Hold the Function key whilst turning the power on.




2. The display will show F-90 on the left and the configuration setting for F-90 on the right.




3. Rotate the voltage knob to change the F setting.



Range F-90 ~ F-97



4. Use the current knob to set the parameter for the chosen F setting.



Press the Voltage knob to save the configuration setting. ConF will be displayed when it is configuring.



Exit

Cycle the power to save and exit the configuration settings.

Configuration Table

Please use the configuration settings listed below when applying the configuration settings.


Normal Function		
Settings	Setting	Setting Range
Output ON delay time	F-01	0.00s~99.99s
Output OFF delay time	F-02	0.00s~99.99s
V-I mode slew rate select	F-03	0 = CV high speed priority (CVHS) 1 = CC high speed priority (CCHS) 2 = CV slew rate priority (CVLS) 3 = CC slew rate priority (CVLS)
Rising voltage slew rate	F-04	0.001~0.06V/msec (PSU 6-200) 0.001~0.125V/msec (PSU 12.5-120) 0.001~0.2V/msec (PSU 20-76) 0.001~0.4V/msec (PSU 40-38) 0.001~0.6V/msec (PSU 60-25)
Falling voltage slew rate	F-05	0.001~0.06V/msec (PSU 6-200) 0.001~0.125V/msec (PSU 12.5-120) 0.001~0.2V/msec (PSU 20-76) 0.001~0.4V/msec (PSU 40-38) 0.001~0.6V/msec (PSU 60-25)
Rising current slew rate	F-06	0.001~2A/msec (PSU 6-200) 0.001~1.2A/msec (PSU 12.5-120) 0.001~0.76A/msec (PSU 20-76) 0.001~0.38A/msec (PSU 40-38) 0.001~0.25A/msec (PSU 60-25)
Falling current slew rate	F-07	0.001~2A/msec (PSU 6-200) 0.001~1.2A/msec (PSU 12.5-120) 0.001~0.76A/msec (PSU 20-76) 0.001~0.38A/msec (PSU 40-38) 0.001~0.25A/msec (PSU 60-25)

Internal resistance setting	F-08	0~0.03Ω (PSU 6-200) 0~0.104Ω (PSU 12.5-120) 0~0.263Ω (PSU 20-76) 0~1.053Ω (PSU 40-38) 0~2.4Ω (PSU 60-25)
Bleeder circuit control	F-09	0 = OFF, 1 = ON
Buzzer ON/OFF control	F-10	0 = OFF, 1 = ON
OCP Delay Time	F-12	0.1 ~ 2.0 sec
Current Setting Limit (I-Limit)	F-13	0 = OFF, 1 = ON
Voltage Setting Limit (V-Limit)	F-14	0 = OFF, 1 = ON
Display memory parameter when recalling (M1, M2, M3)	F-15	0 = OFF, 1 = ON
Auto Calibration Parallel Control	F-16	0 = Disable, 1 = Enable, 2 = Execute Parallel Calibration and set to Enable. Note: Must be a short between each unit before starting.
Measurement Average Setting	F-17	0 = Low, 1 = Middle, 2 = High
Alarm Recovery and Output Status	F-18	0 = Safe Mode, 1 = Force Mode
Lock Mode	F-19	0:Lock Panel, Allow Output OFF 1:Lock Panel, Allow Output ON/OFF
USB/GPIB settings		
Show front panel USB status	F-20	0 = None, 1 = Mass Storage
Show rear panel USB status	F-21	0 = None, 1 = Linking to PC
Setup rear USB Speed	F-22	0 = Disable USB, 1 = Full Speed, 2 = Auto Detect Speed
GPIB Address	F-23	0 ~ 30
GPIB Enable/Disable	F-24	0 = Disable GPIB, 1 = Enable GPIB
Show GPIB available status	F-25	0 = No GPIB, 1 = GPIB is available
SCPI Emulation	F-26	0 = GW Instek, 1 = TDK GEN, 2 = Agilent 5700, 3 = Kikusui PWX
LAN settings		
Show MAC Address-1	F-30	0x00~0xFF

Show MAC Address-2	F-31	0x00~0xFF
Show MAC Address-3	F-32	0x00~0xFF
Show MAC Address-4	F-33	0x00~0xFF
Show MAC Address-5	F-34	0x00~0xFF
Show MAC Address-6	F-35	0x00~0xFF
LAN Enable	F-36	0 = OFF, 1 = ON
DHCP	F-37	0 = OFF, 1 = ON
IP Address-1	F-39	000~255
IP Address-2	F-40	000~255
IP Address-3	F-41	000~255
IP Address-4	F-42	000~255
Subnet Mask-1	F-43	000~255
Subnet Mask-2	F-44	000~255
Subnet Mask-3	F-45	000~255
Subnet Mask-4	F-46	0~255
Gateway-1	F-47	0~255
Gateway-2	F-48	0~255
Gateway-3	F-49	0~255
Gateway-4	F-50	0~255
DNS address -1	F-51	0~255
DNS address -2	F-52	0~255
DNS address-3	F-53	0~255
DNS address-4	F-54	0~255
Socket Server Enable/Disable	F-57	0 = Disable, 1 = Enable
Web Server Enable/Disable	F-59	0 = Disable, 1 = Enable
Web Password Enable/Disable	F-60	0 = Disable, 1 = Enable
Web Enter Password	F-61	0000~9999
UART Settings		
UART Mode	F-70	0 = Disable UART, 1 = RS232, 2 = RS485
UART Baud Rate	F-71	0 = 1200, 1 = 2400, 2 = 4800, 3 = 9600, 4 = 19200, 5 = 38400, 6 = 57600, 7 = 115200
UART Data Bits	F-72	0 = 7 bits, 1 = 8 bits
UART Parity	F-73	0 = None, 1 = Odd, 2 = Even
UART Stop Bit	F-74	0 = 1 Bit, 1 = 2 Bits
UART TCP	F-75	0 = SCPI, 1 = TDK (emulation mode)

UART Address (For TDK)	F-76	00 ~ 31
System Settings		
Factory Set Value	F-88	0 = None 1 = Return to factory default settings
Show Version	F-89	0, 1 = Version 2, 3, 4, 5 = Build date (YYYYMMDD) 6, 7 = Keyboard CPLD 8, 9 = Analog Board CPLD A, B = Analog Board FPGA C, D, E, F = Kernel Build (YYYYMMDD) G, H = Test Command Version I, J, K, L = Test Command Build (YYYYMMDD)
Power On Configuration Settings*		
CV Control	F-90	0 = Control by Local 1 = Control by External Voltage 2 = Control by External Resistor - Rising <input type="checkbox"/> 3 = Control by External Resistor - Falling <input type="checkbox"/> 4 = Control by Isolated Board
CC Control	F-91	0 = Control by Local 1 = Control by External Voltage 2 = Control by External Resistor - Rising <input type="checkbox"/> 3 = Control by External Resistor - Falling <input type="checkbox"/> 4 = Control by Isolated Board
Output Status when Power ON	F-92	0 = Safe Mode (Always OFF), 1 = Force Mode (Always ON), 2 = Auto Mode (Status before last time power OFF)
Master/Slave Configuration	F-93	0 = Independent 1 = Master with 1 slave in parallel 2 = Master with 2 slaves in parallel 3 = Master with 3 slaves in parallel 4 = Slave (parallel)
External Output Logic	F-94	0 = High ON, 1 = Low ON
Monitor Voltage Select	F-96	0 = 5V , 1 = 10V

Control Range	F-97	0 = 5V [5k Ω], 1 = 10V [10k Ω]
External Output Control Function	F-98	0 = OFF, 1 = ON
Special Function Settings*		
Calibration	F-00	0000 ~ 9999



Power On configuration settings can only be set during power up. They can, however, be viewed under normal operation.

REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control.

Interface Configuration	31
Command Syntax	55
Command List.....	58
Status Register Overview.....	103
Error List.....	115

Interface Configuration


USB Remote Interface

Configuration

USB Configuration	PC side connector	Type A, host
	PSU side connector	Rear panel Type B, slave
	Speed	1.1/2.0 (full speed/high speed)
	USB Class	CDC (communications device class)

Steps

1. Connect the USB cable to the rear panel USB B port.



2. Change the Rear panel-USB (F-22) setting to 2 (Auto Detect Speed) or 1 (USB Full Speed). Page 21



Note

If you are not using the rear panel USB device port, set F-22 to 0 (Disable USB). Page 21

3. The RMT indicator will turn on when a remote connection has been established.



RMT indicator

Function Check

Functionality
check

Invoke a terminal application such as Realterm.

To check the COM port No., see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.

Run this query command via the terminal application after the instrument has been configured for USB remote control (page 31).

*idn?

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.

GW-INSTEK,PSU40-38,TW123456,T0.01.12345678

Manufacturer: GW-INSTEK

Model number : PSU40-38

Serial number : TW123456

Firmware version : T0.01.12345678

GPIB Remote Interface

Configuration


To use GPIB, the optional GPIB option (GW Instek part number: PSU-GPIB) must be installed. This is a factory installed option and cannot be installed by the end-user. Only one GPIB address can be used at a time.

- Configure GPIB
1. Ensure the PSU is off before proceeding.
 2. Connect a GPIB cable from a GPIB controller to the GPIB port on the PSU.
 3. Turn the PSU on.
 4. Press the Function key to enter the Page 21 Normal configuration settings.
 5. Set the following GPIB settings.

F-24 = 1	Enable the GPIB port
F-23 = 0~30	Set the GPIB address (0~30)
 6. Check to see that the GPIB option is detected by the PSU. The F-25 setting indicates the GPIB port status.

F-25 = 1	Indicates that the GPIB port is available.
F-25 = 0	Indicates that the GPIB port is not detected.

- The RMT indicator will turn on when a remote connection has been established.



RMT indicator

-
- GPIB constraints
- Maximum 15 devices altogether, 20m cable length, 2m between each device
 - Unique address assigned to each device
 - At least 2/3 of the devices turned On
 - No loop or parallel connection

GPIB Function Check


Background To test the GPIB functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>

Requirements Operating System: Windows XP, 7, 8


Functionality check

1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


Start>All Programs>National Instruments>Measurement & Automation

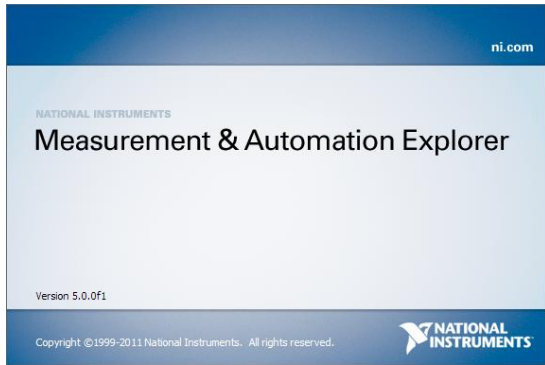


2. From the Configuration panel access;
My System>Devices and Interfaces>GPIB
3. Press *Scan for Instruments*.

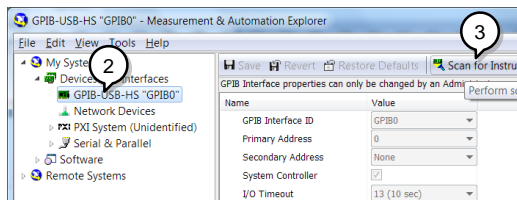

4. Select the device (GPIB address of PSU) that now appears in the *System>Devices and Interfaces > GPIB-USB-HS "GPIBX"* node.
5. Click on the *VISA Properties* tab on the bottom.
6. Click *Open Visa Test Panel*.

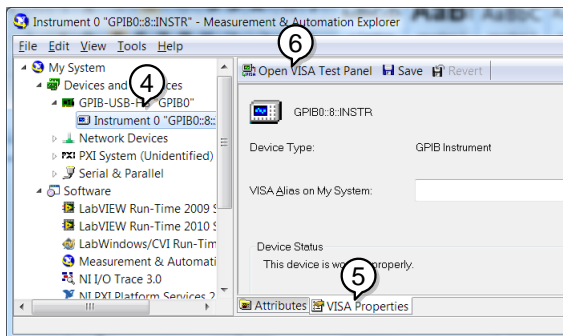


7. Click on *Configuration*.
8. Click on the *GPIB Settings* tab and confirm that the GPIB settings are correct.

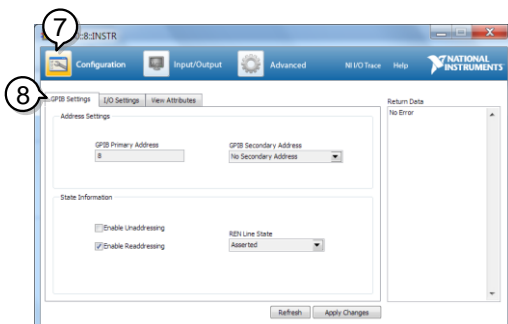

9. Click on the *I/O Settings* tab.
10. Make sure the *Enable Termination Character*

check box is checked, and the terminal character is \n (Value: xA).

11. Click *Apply Changes*.

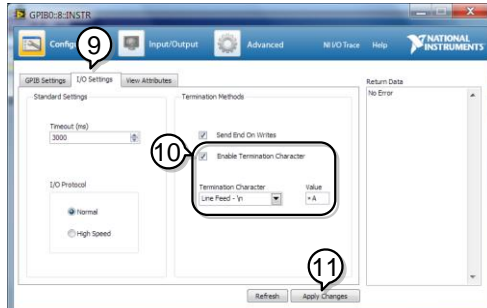

12. Click on *Input/Output*.


13. Click on the *Basic/IO* tab.

14. Enter *IDN? in the *Select or Enter Command* drop down box.

15. Click *Query*.

16. The *IDN? query will return the Manufacturer, model name, serial number and firmware version in the dialog box.

GW-INSTEK,PSU40-38,
TW123456,T0.02.20131205

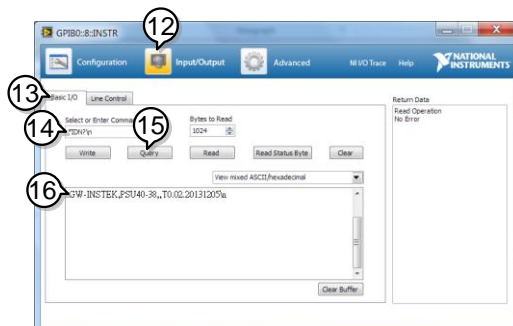

UART Remote Interface

Configure UART

Overview

The PSU uses the IN & OUT ports for UART communication coupled with RS232 (GW Part number PSU-232) or RS485 adapters (GW part number PSU-485)

The pin outs for the adapters are shown below.

PSU-232 RS232 cable with DB9 connector	DB-9 Connector		Remote IN Port		Remarks
	Pin No.	Name	Pin No.	Name	
	Housing	Shield	Housing	Shield	
	2	RX	7	TX	Twisted pair
	3	TX	8	RX	
	5	SG	1	SG	

PSU-485 RS485 cable with DB9 connector

DB-9 Connector		Remote IN Port		Remarks
Pin No.	Name	Pin No.	Name	
Housing	Shield	Housing	Shield	
9	TXD -	6	RXD -	Twisted pair
8	TXD +	3	RXD +	
1	SG	1	SG	
5	RXD -	5	TXD -	Twisted pair
4	RXD +	4	TXD +	

Steps

1. Connect the RS232 serial cable (included in the PSU-232 kit) or RS485 serial cable (included in the PSU-485 kit) to the (Remote IN port) on the rear panel.



Connect the other end of the cable to the PC.

2. Press the Function key to enter the Page 21 Normal configuration settings.


Set the following UART settings:

F-70 = 1 or 2	Interface: 0= Disable UART, 1= RS232 or 2 = RS485
F-71 = 0 ~ 7	Set the baud rate: 0=1200, 1=2400, 2=4800, 3=9600, 4=19200, 5=38400, 6=57600, 7=115200
F-72 = 0 or 1	Data bits: 0=7 or 1=8
F-73 = 0 ~3	Parity: 0 = none, 1 = odd, 2 = even
F-74 = 0 or 1	Stop bits: 0 = 1, 1 = 2
F-75 = 0 or 1	TCP: 0 = SCPI, 1 = TDK (emulation mode)

F-76 = 00~31

UART address if TDK is selected
for F-75.

3. The RMT indicator will turn on when a remote connection has been established.



RMT indicator



Note

If TDK (emulation mode) is selected for F-75, the TDK GENESYS legacy commands should be used for remote commands. See the TDK Genesys user manual for details.

UART Function Check

Functionality
check

Invoke a terminal application such as Realterm.

To check the COM port No, see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.

Run this query command via the terminal application after the instrument has been configured for either RS232 or RS485 remote control (page 38).

```
*idn?
```

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format:

```
GW-INSTEK,PSU40-38,,T0.01.12345678
```

```
Manufacturer: GW-INSTEK
```

```
Model number : PSU40-38
```

```
Serial number : TW123456
```


```
Firmware version : T0.01.12345678
```

Multiple Unit Connection Using Local RS485 Bus

The PSU power supplies can have up to 31 units daisy-chained together using the 8 pin connectors (IN OUT ports) on the rear panel. The first unit in the chain is remotely connected to a PC using RS232 or RS485. Each subsequent unit is daisy-chained to the next using an RS485 local bus. The OUT port on the last terminal must be terminated by the end terminal connector.

Only the TDK GENESYS legacy commands can be used when using multiple units over the local RS485 bus, SCPI commands cannot be used. When using the TDK commands, each unit is assigned a unique address and can then be individually controlled from the host PC. When using SCPI commands via RS232/RS485, remote commands can only be used to control the master unit.

- Operation
1. Connect the first unit's IN port to a PC via RS232 or RS485.
 - Use the serial cables supplied in the PSU-232 or PSU-485 connection kit.
 2. Connect the OUT port on the first unit to the IN port of the second unit using the serial link cable supplied in the PSU-232 or PSU-485 connection kit.
 3. Connect all the remaining units in the same fashion until all the units have been daisy-chained together.

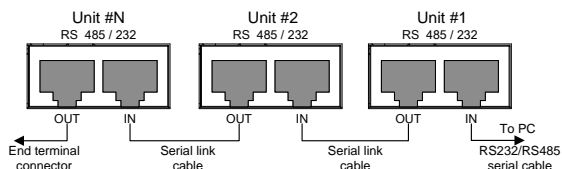

4. Terminate the OUT port of the last unit with the end terminal connector included in the PSU-232 or PSU-485 connection kit.
5. Press the Function key to enter the Page 21 Normal configuration settings for the master unit.

Set the following settings:

F-70 = 1 or 2	Configure the master unit as you normally would for RS232 or RS485 remote control.
F-71 = 0~7	Set the baud rate (set all units the same).
F-72 = 1	Set to 8 data bits.
F-73 = 0	Parity to none.
F-74 = 1	1 Stop bit.
F-75 = 1	Set the UART TCP to TDK (emulation mode).
F-76 = 00~31	Set the address of the master unit. It must be a unique address identifier.

6. Press the Function key to enter the Page 21 Normal configuration settings for the slave(s).

Set the following settings:

F-70 = 2	Set the slave unit to RS485.
F-71 = 0~7	Set the baud rate (make all units, including the master, the same baud).
F-72 = 1	Set to 8 data bits.
F-73 = 0	Parity to none.
F-74 = 1	1 Stop bit.
F-75 = 1	Set the UART TCP to TDK (emulation mode).

F-76 = 00~31 Set the address of each slave to a unique address identifier

- Multiple units can now be operated at the same time, see the function check below for usage details.

Serial link cable with RJ-45 shielded connectors from PSU-232 or PSU-485 connection kit

8 Pin Connector (IN)		8 Pin Connector (OUT)	
Pin No.	Name	Pin No.	Name
Housing	Shield	Housing	Shield
1	SG	1	SG
6	TXD -	6	TXD -
3	TXD +	3	TXD +
5	RXD -	5	RXD -
4	RXD +	4	RXD +

Multi-Unit Function Check

Functionality check

Invoke a terminal application such as Realterm.

To check the COM port No, see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.

Below shows an example using the TDK GENESYS legacy commands.

TDK Query

When using the TDK GENESYS legacy commands, each unit can be individually controlled using the unique address identifiers. For this function check, we will assume that the master unit is assigned to address 8, while a slave is assigned address 11.

Run this query command via the terminal application after the instruments have been configured for multi-unit control. See page 42.

ADR 8
IDN?

The identity string for the Master unit will be returned:

GW-INSTEK,PSU40-38,,T0.01.12345678

Type the following:

ADR 11
IDN?

The identity string for the slave with address 11 will be returned:

GW-INSTEK,PSU40-38,,T0.01.12345678

Note: TDK commands do not use LF (line feed) codes to terminate commands. See the TDK Genesys user manual for further information.

Configure Ethernet Connection

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.


The PSU series supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.

Ethernet configuration Parameters	For details on how to configure the Ethernet settings, please see the configuration chapter on page 21.
	MAC Address (display only) LAN Enable/Disable
	DHCP Enable/Disable IP Address
	Subnet Mask Gateway
	DNS Address Sockets Server Enable/Disable
	Web Server Enable/Disable Web Password Enable/Disable
	Web Enter Password

Web Server Configuration

Configuration This configuration example will configure the PSU as a web server and use DHCP to automatically assign an IP address to the PSU.

1. Connect an Ethernet cable from the network to the rear panel Ethernet port.




2. Press the Function key to enter the Page 21 Normal configuration settings.

Set the following LAN settings:

F-36 = 1	Turn LAN on
F-37 = 1	Enable DHCP
F-59 = 1	Turn the web server on
F-60 = 0 or 1	Set to 0 to disable web password, set to 1 to enable web password
F-61 = 0000 ~9999	Set the web password

3. The LAN indicator will turn on when a network cable is plugged in.



LAN indicator



Note

It may be necessary to cycle the power or refresh the web browser to connect to a network.

Web Server Remote Control Function Check

Functionality check

Enter the IP address of the power supply in a web browser after the instrument has been configured as a web server (page 46).

The web server allows you to monitor the function settings of the PSU.

You can check the IP address by checking F-39 to F-42.

F-39 = AAA	IP Address part 1 of 4
F-40 = BBB	IP Address part 2 of 4

F-41 = CCC IP Address part 3 of 4
 F-42 = DDD IP Address part 4 of 4

http:// AAA.BBB.CCC.DDD

The web browser interface appears.



Visit Our Site

Support | Contact Us

Welcome Page

Network Configuration

Analog Control

Figure of Dimensions

Operating Area

PSU Series

Web Control Pages

Thanks For Your Using.

Use the left menu to select the features you need.

More How-to
Please refer to user manual.



System Information

Manufacturer:	GW-INSTEK
Serial Number:	
Description:	GW-INSTEK.PSU40-38
Firmware Version:	T0.02.20131205
Hostname:	P-
IP Address:	172.16.22.134
Subnet Mask:	255.255.128.0
Gateway:	172.16.0.254
DNS:	172.16.1.252
MAC Address:	02:80:ad:20:31:b2
DHCP State:	ON

Copyright 2011 © Good Will Instrument Co., Ltd All Rights Reserved.

The web browser interface allows you to access the following:


- Network configuration settings
- Analog control pinouts & usage
- PSU dimensions
- Operating area diagram

Sockets Server Configuration

Configuration This configuration example will configure the PSU socket server.

The following configuration settings will manually assign the PSU an IP address and enable the socket server. The socket server port number is fixed at 2268.

1. Connect an Ethernet cable from the network to the rear panel Ethernet port.



2. Press the Function key to enter the Page 21 Normal configuration settings.

Set the following LAN settings:

F-36 = 1	Enable LAN
F-37 = 0	Disable DHCP
F-39 = 172	IP Address part 1 of 4
F-40 = 16	IP Address part 2 of 4
F-41 = 5	IP Address part 3 of 4
F-42 = 133	IP Address part 4 of 4
F-43 = 255	Subnet Mask part 1 of 4
F-44 = 255	Subnet Mask part 2 of 4
F-45 = 128	Subnet Mask part 3 of 4
F-46 = 0	Subnet Mask part 4 of 4
F-43 = 172	Gateway part 1 of 4
F-44 = 16	Gateway part 2 of 4
F-45 = 21	Gateway part 3 of 4
F-46 = 101	Gateway part 4 of 4
F-57 = 1	Enable Sockets

Socket Server Function Check

Background To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>

Requirements Operating System: Windows XP, 7, 8

Functionality check

1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


Start>All Programs>National Instruments>Measurement & Automation




2. From the Configuration panel access;

My System>Devices and Interfaces>Network Devices


3. Press *Add New Network Device>Visa TCP/IP Resource...*

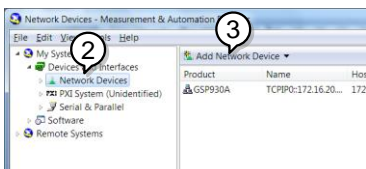

4. Select *Manual Entry of Raw Socket* from the popup window.

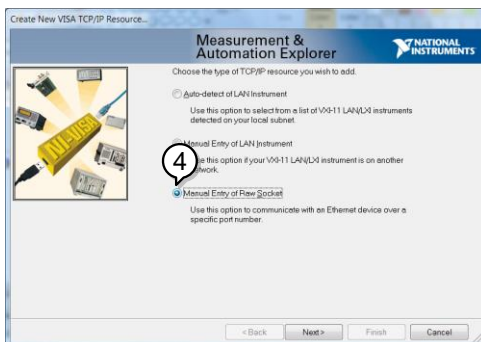


5. Enter the IP address and the port number of the PSU. The port number is fixed at 2268.
6. Click the Validate button.
7. A popup will appear if a connection is successfully established.
8. Click Next.

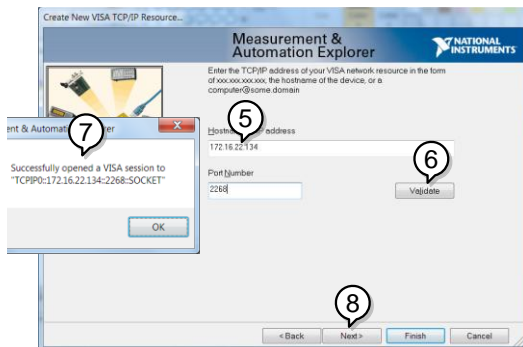


9. Next configure the Alias (name) of the PSU connection. In this example the Alias is: PSU_DC1

10. Click finish.

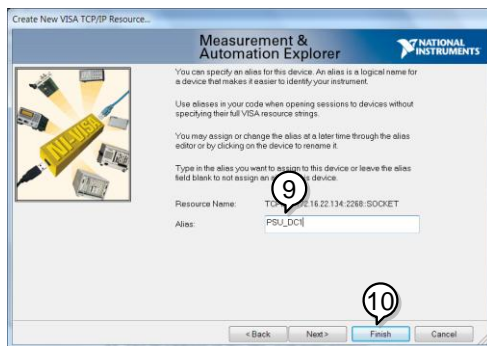

11. The IP address of the PSU will now appear under Network Devices in the configuration panel. Select this icon now.

12. Click *Open VISA Test Panel*.

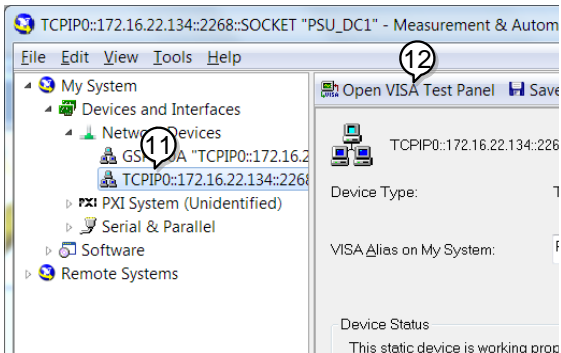

13. Click the *Configuration* icon,

14. Click on *I/O Settings*.

15. Make sure the *Enable Termination Character* check box is checked, and the terminal character is \n (Value: xA).

16. Click *Apply Changes*.




17. Click the *Input/Output* icon.

18. Enter *IDN? in the *Select or Enter Command* dialog box if it is not already.

19. Click the *Query* button.

20. The *IDN? query will return the Manufacturer, model name, serial number and firmware version in the dialog box.

GW-INSTEK,PSU40-38,TW123456,T0.02.20131205

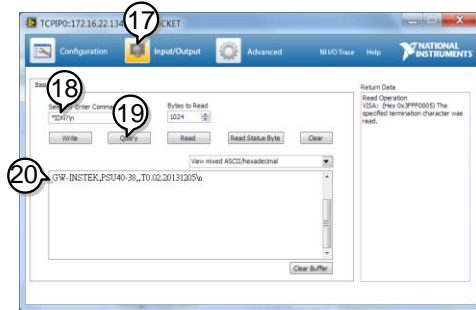


Command Syntax

Compatible Standard	IEEE488.2	Partial compatibility
	SCPI, 1999	Partial compatibility

Command Structure

SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

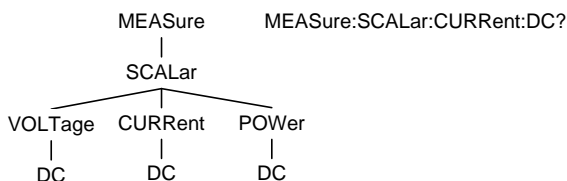

Command types

There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

Command types

Simple A single command with/without a parameter

Example *IDN?

Query A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.

Example meas:curr:dc?

Compound Two or more commands on the same command line. Compound commands are separated with either a semi-colon (;) or a semi-colon and a colon (;:).

A semi-colon is used to join two related commands, with the caveat that the last command must begin at the last node of the first command.

A semi-colon and colon are used to combine two commands from different nodes.

Example meas:volt:dc?::meas:curr:dc?

Command Forms Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.

The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.


Below are examples of correctly written commands.

Long form	STATus:OPERation:NTRansition? STATUS:OPERATION:NTRANSITION? status:operation:ntransition?
Short form	STAT:OPER:NTR? stat:oper:ntr?

Square Brackets Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below.

Both “DISPlay:MENU[:NAME]?” and “DISPlay:MENU?” are both valid forms.

Command Format

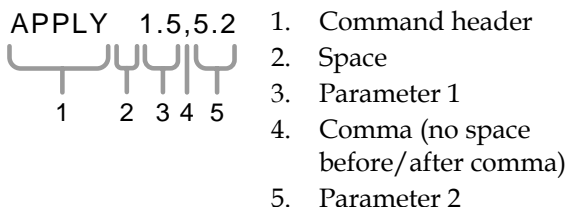

Parameters	Type	Description	Example
	<Boolean>	Boolean logic	0, 1

<NR1>	integers	0, 1, 2, 3
<NR2>	decimal numbers	0.1, 3.14, 8.5
<NR3>	floating point	4.5e-1, 8.25e+1
<NRF>	any of NR1, 2, 3	1, 1.5, 4.5e-1
<block data>	Definitive length arbitrary block data. A single decimal digit followed by data. The decimal digit specifies how many 8-bit data bytes follow.	

Message Terminator	LF	Line feed code
--------------------	----	----------------

Command List

Display Commands	:DISPlay:MENU[:NAME]	62
	:DISPlay[:WINDow]:TEXT:CLEar.....	62
	:DISPlay[:WINDow]:TEXT[:DATA].....	63
	:DISPlay:BLINK.....	63
Initiate Commands	:INITiate:CONTInuous[:TRANsient]	64
	:INITiate[:IMMediate]:NAME	64
	:INITiate[:IMMediate][:TRANsient].....	65
Measure Commands	:MEASure[:SCALar]:ALL[:DC]	66
	:MEASure[:SCALar]:CURRent[:DC].....	66
	:MEASure[:SCALar]:VOLTage[:DC]	66
	:MEASure[:SCALar]:POWer[:DC].....	67

Output	:OUTPut:DELay:ON.....	68	
Commands	:OUTPut:EXTernal:LOGic	68	
	:OUTPut:EXTernal[:STATe].....	69	
	:OUTPut:DELay:OFF	69	
	:OUTPut:MODE.....	69	
	:OUTPut:PON[:STATe].....	70	
	:OUTPut[:STATe][:IMMediate]	70	
	:OUTPut[:STATe]:TRIGgered	71	
	:OUTPut:PROTectio:n:CLEar	71	
	Status Commands	:STATus:OPERation[:EVENT]	72
		:STATus:OPERation:CONDitio:n	72
:STATus:OPERation:ENABle		73	
:STATus:OPERation:PTRansition.....		73	
:STATus:OPERation:NTRansition.....		73	
:STATus:QUESTio:nable[:EVENT]		73	
:STATus:QUESTio:nable:CONDitio:n		74	
:STATus:QUESTio:nable:ENABle		74	
:STATus:QUESTio:nable:PTRansition.....		74	
:STATus:QUESTio:nable:NTRansition.....		74	
:STATus:PRESet.....	75		
Source Commands	[:SOURce]:CURRent:EXTernal:RANGe.....	76	
	[:SOURce]:CURRent:EXTernal:SOURce.....	77	
	[:SOURce]:CURRent[:LEVel][:IMMediate][:AMPLitude]	77	
	[:SOURce]:CURRent[:LEVel]:TRIGgered[:AMPLitude]	78	
	[:SOURce]:CURRent:LIMit:AUTO	78	
	[:SOURce]:CURRent:PROTectio:n:DELay.....	78	
	[:SOURce]:CURRent:PROTectio:n[:LEVel].....	79	
	[:SOURce]:CURRent:PROTectio:n:STATe.....	79	
	[:SOURce]:CURRent:PROTectio:n:TRIPped	80	
	[:SOURce]:CURRent:SLEW:RISing	80	
	[:SOURce]:CURRent:SLEW:FALLing.....	81	
	[:SOURce]:MODE?.....	81	
	[:SOURce]:RESistance[:LEVel][:IMMediate] [:AMPLitude].....	81	
	[:SOURce]:VOLTage[0]:EXTernal:RANGe.....	82	
	[:SOURce]:VOLTage[0]:EXTernal:SOURce.....	82	
	[:SOURce]:VOLTage[0][:LEVel][:IMMediate] [:AMPLitude].....	83	
	[:SOURce]:VOLTage[0][:LEVel]:TRIGgered		

	[:AMPLitude].....	83
	[:SOURce]:VOLTage[0]:LIMit:AUTO	84
	[:SOURce]:VOLTage[0]:LIMit:LOW	84
	[:SOURce]:VOLTage[0]:PROTection[:LEVel]	85
	[:SOURce]:VOLTage[0]:PROTection:TRIPped	85
	[:SOURce]:VOLTage[0]:SLEW:RISing	86
	[:SOURce]:VOLTage[0]:SLEW:FALLing.....	86
System	:SYSTem:CONFIgure:BEEPer[:STATe].....	88
Commands	:SYSTem:CONFIgure:BLEeder[:STATe]	88
	:SYSTem:CONFIgure:CURRent:CONTRol.....	88
	:SYSTem:CONFIgure:VOLTage:CONTRol	89
	:SYSTem:CONFIgure:OUTPut:PON[:STATe]	89
	:SYSTem:CONFIgure:PROTection:RECOvery.....	90
	:SYSTem:CONFIgure:MSLave	90
	:SYSTem:CONFIgure:OUTPut:EXTernal[:MODE]	90
	:SYSTem:COMMunicate:ENABle	91
	:SYSTem:COMMunicate:GPIB[:SELf]:ADDReSS	91
	:SYSTem:COMMunicate:LAN:IPADdress	92
	:SYSTem:COMMunicate:LAN:GATEWay	92
	:SYSTem:COMMunicate:LAN:SMASk.....	93
	:SYSTem:COMMunicate:LAN:MAC	93
	:SYSTem:COMMunicate:LAN:DHCP.....	93
	:SYSTem:COMMunicate:LAN:DNS.....	94
	:SYSTem:COMMunicate:TCPip:CONTRol.....	94
	:SYSTem:COMMunicate:SERial:LANGUage[:SELect]....	94
	:SYSTem:COMMunicate:SERial[:RECEive]	
	:TRANsmit:BAUD.....	95
	:SYSTem:COMMunicate:SERial[:RECEive]	
	:TRANsmit:BITS.....	95
	:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit	
	:PARity	96
	:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit	
	:SBITs.....	96
	:SYSTem:COMMunicate:USB:FRONT:STATe.....	97
	:SYSTem:COMMunicate:USB:REAR:MODE.....	97
	:SYSTem:COMMunicate:USB:REAR:STATe.....	97
	:SYSTem:ERRor.....	98
	:SYSTem:KLOCK.....	98
	:SYSTem:KEYLock:MODE.....	98
	:SYSTem:ERRor:ENABle.....	98
	:SYSTem:LANGUage:EMULation.....	99
	:SYSTem:LANGUage[:SELect].....	99

	:SYSTem:PREset	99
	:SYSTem:VERSion.....	99
	:SYSTem:REBoot.....	100
Common	*CLS	100
Commands	*ESE.....	100
	*ESR.....	101
	*IDN	101
	*OPC.....	101
	*RCL.....	102
	*RST	102
	*SAV.....	102
	*SRE	102
	*STB	103
	*TRG.....	103
	*TST	103
	*WAI	103

Display Commands

:DISPlay:MENU[:NAME]	62
:DISPlay[:WINDow]:TEXT:CLEAr.....	62
:DISPlay[:WINDow]:TEXT[:DATA].....	63
:DISPlay:BLINK.....	63

:DISPlay:MENU[:NAME]

Set →

← Query

Description	The DISPlay MENU command selects a screen menu or queries the current screen menu.	
Syntax	:DISPlay:MENU[:NAME] <NR1>	
Query Sytax	:DISPlay:MENU[:NAME]?	
Parameter/ Return parameter	<NR1>	Description
	0	Measure voltage & current
	1~2	Not Used
	3	Set Menu
	4	OVP / OCP Menu
	5~99	Not Used.
	100~199	F-00~99 Menu.
Example	DISP:MENU:NAME 0 Sets the display to the Voltage/Current display screen.	

:DISPlay[:WINDow]:TEXT:CLEAr

Set →

Description	Clears the text on the main screen from the :DISPlay[:WINDow]:TEXT[:DATA] command.	
Syntax	:DISPlay[:WINDow]:TEXT:CLEAr	

:DISPlay[:WINDow]:TEXT[:DATA]  

Description Sets or queries the data text that will be written to the display. Writing to the display will overwrite data that is currently on the screen. Overwriting a display area with a shorter string may or may not overwrite the screen. The string must be enclosed in quotes: "STRING". Only ASCII characters 20H to 7EH can be used in the <string>.

Syntax :DISPlay[:WINDow]:TEXT[:DATA] <string>

Query Syntax :DISPlay[:WINDow]:TEXT[:DATA]?

Parameter/Return parameter <string> ASCII character 20H to 7EH can be used to in the string parameter. The string must be enclosed in quotes: "STRING"

Example DISP:WIND:TEXT:DATA "STRING"
Writes STRING to the display.

Query Example DISP:WIND:TEXT:DATA?
"STRING"
Returns the text data string on the screen.

:DISPlay:BLINK  

Description Turns blink on or off for the display. Blink is set to OFF by default.

Syntax :DISPlay:BLINK {<bool>|OFF|ON}

Query Syntax :DISPlay:BLINK?

Parameter OFF | 0 Turns blink OFF
ON | 1 Turns blink ON

Return parameter <bool> Returns the blink status.

Example DISP:BLIN 1
Turns blink ON.

Initiate Commands

:INITiate:CONTInuous[:TRANsient]	64
:INITiate[:IMMEDIATE]:NAME	64
:INITiate[:IMMEDIATE][:TRANsient]	65

:INITiate:CONTInuous[:TRANsient] (Set) →
→ (Query)

Description	This command continuously initiates software triggers for the transient or output triggers.
Syntax	:INITiate:CONTInuous[:TRANsient] {<bool> OFF ON}
Query Syntax	:INITiate:CONTInuous[:TRANsient]?
Parameter	OFF 0 OFF ON 1 ON
Return parameter	0 OFF 1 ON
Example	INIT:TRAN 1 Turns on the continuous trigger.

:INITiate[:IMMEDIATE]:NAME (Set) →

Description	The INITiate command starts the TRANsient or OUTPut trigger.
Syntax	:INITiate[:IMMEDIATE]:NAME {TRANsient OUTPut}
Parameter	TRANsient Starts the TRANsient trigger. OUTPut Starts the OUTPut trigger.
Example	INITiate:NAME TRANient Starts the TRANsient trigger.

:INITiate[:IMMEDIATE][:TRANSient]

Set →

Description	This command controls the enabling of output triggers. When a trigger is enabled, a trigger causes the specified action to occur. If the trigger system is not enabled, all triggers are ignored.
Syntax	:INITiate[:IMMEDIATE][:TRANSient]
Example	INIT

Measure Commands

:MEASure[:SCALar]:ALL[:DC]	66
:MEASure[:SCALar]:CURRent[:DC]	66
:MEASure[:SCALar]:VOLTage[:DC]	66
:MEASure[:SCALar]:POWer[:DC]	67

:MEASure[:SCALar]:ALL[:DC] → Query

Description	Takes a measurement and returns the average output current and voltage	
Syntax	:MEASure[:SCALar]:ALL[:DC]?	
Return parameter	" +0.0000,+0.0000"	<voltage>,<current> Returns the voltage (V) and current (A), respectively.

:MEASure[:SCALar]:CURRent[:DC] → Query

Description	Takes a measurement and returns the average output current	
Syntax	:MEASure[:SCALar]:CURRent[:DC]?	
Return parameter	" +0.0000"	Returns the current in amps.

:MEASure[:SCALar]:VOLTage[:DC] → Query

Description	Takes a measurement and returns the average output voltage.	
Syntax	:MEASure[:SCALar]:VOLTage[:DC]?	
Return	" +0.0000"	Returns the voltage in volts.

:MEASure[:SCALar]:POWer[:DC]

→ Query

Description	Takes a measurement and returns the average output power.
Syntax	:MEASure[:SCALar]:POWer[:DC]?
Return	" +0.0000 " Returns the power measured in watts.

Output Commands

:OUTPut:DElay:ON	68
:OUTPut:EXTErnal:LOGic	68
:OUTPut:EXTErnal[:STATe].....	69
:OUTPut:DElay:OFF	69
:OUTPut:MODE	69
:OUTPut:PON[:STATe].....	70
:OUTPut[:STATe][:IMMediate]	70
:OUTPut[:STATe]:TRIGgered	71
:OUTPut:PROTEction:CLEar	71

:OUTPut:DElay:ON



Description	Sets the Delay Time in seconds for turning the output on. The delay is set to 0.00 by default.	
Syntax	:OUTPut:DElay:ON {<NR2> MINimum MAXimum}	
Query Syntax	:OUTPut:DElay:ON?	
Parameter	<NR2>	0.00~99.99 seconds, where 0=no delay.
Return parameter	"0.00"	Returns the delay on time in seconds until the output is turned on.

:OUTPut:EXTErnal:LOGic



Description	Sets the logic used to turn the output on or off when using an external contact. This is the equivalent to the F-94 (External Output Logic) power on configuration settings.	
Syntax	:OUTPut:EXTErnal:LOGic {LOW HIGH}	
Return Syntax	:OUTPut:EXTErnal:LOGic?	
Parameter/ Return parameter	LOW	The output is turned on with a low signal.
	HIGH	The output is turned on with a high signal.

:OUTPut:EXTErnal[:STATe] (Set) →
→ (Query)

Description	Sets whether the output will be turned on or off externally. By default this setting is turned off.	
Syntax	:OUTPut:EXTErnal[:STATe] {<bool> OFF ON}	
Return Syntax	:OUTPut:EXTErnal[:STATe]?	
Parameter	ON 1	External control is performed.
	OFF 0	External control is not performed.
Return parameter	<bool>	Returns output status of the instrument.

:OUTPut:DELAy:OFF (Set) →
→ (Query)

Description	Sets the Delay Time in seconds for turning the output off. The delay is set to 0.00 by default.	
Syntax	:OUTPut:DELAy:OFF {<NR2> MINimum MAXimum}	
Return Syntax	:OUTPut:DELAy:OFF?	
Parameter	<NR2>	0.00~99.99 seconds, where 0=no delay.
Return parameter	"0.00"	Returns the delay off time in seconds until the output is turned off.

:OUTPut:MODE (Set) →
→ (Query)

Description	Sets the PSU output mode. This is the equivalent to the F-03 (V-I Mode Slew Rate Select) settings.	
Syntax	:OUTPut:MODE {<NR1> CVHS CCHS CVLS CCLS}	
Return Syntax	:OUTPut:MODE?	
Parameter	CVHS 0	CV high speed priority
	CCHS 1	CC high speed priority
	CVLS 2	CV slew rate priority
	CCLS 3	CC slew rate priority
Return parameter	<NR1>	Returns the output mode.

:OUTPut:PON[:STATe] (Set) →
→ (Query)

Description	Sets the output state at power-on. This is the equivalent to the F-92 (Output Status when Power ON) power on configuration settings. These settings only apply after the unit has been reset.	
Syntax	:OUTPut:PON[:STATe] {<NR1> SAFE FORCe AUTO}	
Return Syntax	:OUTPut:PON[:STATe]?	
Parameter	SAFE 0	The PSU turns on in the same state the unit was in prior to the previous shut down. The output is set to off (default).
	FORCe 1	The PSU turns on in the same state the unit was in prior to the previous shut down. The output is set to on.
	AUTO 2	The PSU turns on in the same state the unit was in prior to the previous shut down, but with the same output on/off setting.
Return parameter	0	The power on output setting is "SAFE".
	1	The power on output setting is "FORCe".
	2	The power on output setting is "AUTO".

:OUTPut[:STATe][:IMMEDIATE] (Set) →
→ (Query)

Description	Turns the output on or off.	
Syntax	:OUTPut[:STATe][:IMMEDIATE] { <bool> OFF ON }	
Query Syntax	:OUTPut[:STATe][:IMMEDIATE]?	
Parameter	OFF 0	Turns the output off.
	ON 1	Turns the output on.
Return parameter	<bool>	Returns output status of the instrument.

:OUTPut[:STATe]:TRIGgered

Set →

→ Query

Description	Turns the output on or off when a software trigger is generated.	
Syntax	:OUTPut[:STATe]:TRIGgered { <bool> OFF ON }	
Query Syntax	:OUTPut[:STATe]:TRIGgered?	
Parameter	OFF 0	Turns the output off when a software trigger is generated (*TRG).
	ON 1	Turns the output on when a software trigger is generated (*TRG).
Return parameter	<bool>	Returns output trigger status of the instrument.

:OUTPut:PROTection:CLEar

Set →

Description	Clears over-voltage, over-current and over-temperature (OVP, OCP, OTP) protection circuits. It also clears the shutdown and sense protection circuit. The AC failure protection cannot be cleared.	
Syntax	:OUTPut:PROTection:CLEar	

Status Commands

For an overview of all the status registers, their associated register contents and the system diagram, please see the status overview on page 103

:STATus:OPERation[:EVENT]	72
:STATus:OPERation:CONDition	72
:STATus:OPERation:ENABle	73
:STATus:OPERation:PTRansition	73
:STATus:OPERation:NTRansition	73
:STATus:QUEStionable[:EVENT]	73
:STATus:QUEStionable:CONDition	74
:STATus:QUEStionable:ENABle	74
:STATus:QUEStionable:PTRansition	74
:STATus:QUEStionable:NTRansition	74
:STATus:PRESet	75

:STATus:OPERation[:EVENT] → Query

Description	Queries the Operation Status Event register and clears the contents of the register.
Syntax	:STATus:OPERation[:EVENT]?
Return	<NR1> Returns the bit sum of the Operation Status Event register.

:STATus:OPERation:CONDition → Query

Description	Queries the Operation Status register. This query will not clear the register.
Syntax	:STATus:OPERation:CONDition?
Return	<NR1> Returns the bit sum of the Operation Condition register.

 →
 → 

:STATus:OPERation:ENABLE

Description Sets or queries the bit sum of the Operation Status Enable register.

Syntax :STATus:OPERation:ENABLE <NR1>

Query Syntax :STATus:OPERation:ENABLE?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

 →
 → 

:STATus:OPERation:PTRansition

Description Sets or queries the bit sum of the positive transition filter of the Operation Status register.

Syntax :STATus:OPERation:PTRansition <NR1>

:STATus:OPERation:PTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

 →
 → 

:STATus:OPERation:NTRansition

Description Sets or queries the bit sum of the negative transition filter of the Operation Status register.

Syntax :STATus:OPERation:NTRansition <NR1>

Query Syntax :STATus:OPERation:NTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767



:STATus:QUESTionable[:EVENT]

Description Queries the bit sum of the Questionable Status Event register. This query will also clear the contents of the register.

Query Syntax :STATus:QUESTionable[:EVENT]?

Return parameter <NR1> 0~32767

:STATus:QUEStionable:CONDition → Query

Description Queries the status (bit sum) of the Questionable Status register. This query will not clear the register.

Query Syntax :STATus:QUEStionable:CONDition?

Return parameter <NR1> 0~32767

Set →

:STATus:QUEStionable:ENABle → Query

Description Sets or queries the bit sum of the Questionable Status Enable register.

Syntax :STATus:QUEStionable:ENABle <NR1>

Query Syntax :STATus:QUEStionable:ENABle?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

Set →

:STATus:QUEStionable:PTRansition → Query

Description Sets or queries the bit sum of the positive transition filter of the Questionable Status register.

Syntax :STATus:QUEStionable:PTRansition <NR1>

Return Syntax :STATus:QUEStionable:PTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

Set →

:STATus:QUEStionable:NTRansition → Query


Description Sets or queries the negative transition filter of the Questionable Status register.

Syntax :STATus:QUEStionable:NTRansition <NR1>

Query Syntax :STATus:QUEStionable:NTRansition?

Parameter	<NR1>	0~32767
Return parameter	<NR1>	0~32767

:STATus:PRESet



Description This command resets the ENABLE register, the PTRansition filter and NTRansition filter on the Operation Status and Questionable Status Registers. The registers/filters will be reset to a default value.

Default Register/Filter Values	Setting
QUESTionable Status Enable	0x0000
QUESTionable Status Positive Transition	0x7FFF
QUESTionable Status Negative Transition	0x0000
Operation Status Enable	0x0000
Operation Status Positive Transition	0x7FFF
Operation Status Negative Transition	0x0000

Summary: The Questionable Status Enable registers and the Operation Status Enable registers are both reset to 0.

The Questionable Status and Operation Status Positive Transition filters are all set high (0x7FFF) and the Negative Transition filters are all set low (0x0000). I.e., only positive transitions will be recognized for the Questionable Status and Operation Status registers.

Syntax :STATus:PRESet

Source Commands

[:SOURce]:CURRent:EXTernal:RANGe.....	76
[:SOURce]:CURRent:EXTernal:SOURce.....	77
[:SOURce]:CURRent[:LEVel][:IMMediate]	
[:AMPLitude].....	77
[:SOURce]:CURRent[:LEVel]:TRIGgered[:AMPLitude].	78
[:SOURce]:CURRent:LIMit:AUTO.....	78
[:SOURce]:CURRent:PROTection:DELay.....	78
[:SOURce]:CURRent:PROTection[:LEVel].....	79
[:SOURce]:CURRent:PROTection:STATe.....	79
[:SOURce]:CURRent:PROTection:TRIPped.....	80
[:SOURce]:CURRent:SLEW:RISing.....	80
[:SOURce]:CURRent:SLEW:FALLing.....	81
[:SOURce]:MODE?.....	81
[:SOURce]:RESistance[:LEVel][:IMMediate]	
[:AMPLitude].....	81
[:SOURce]:VOLTage[0]:EXTernal:RANGe.....	82
[:SOURce]:VOLTage[0]:EXTernal:SOURce.....	82
[:SOURce]:VOLTage[0][:LEVel][:IMMediate]	
[:AMPLitude].....	83
[:SOURce]:VOLTage[0][:LEVel]:TRIGgered	
[:AMPLitude].....	83
[:SOURce]:VOLTage[0]:LIMit:AUTO.....	84
[:SOURce]:VOLTage[0]:LIMit:LOW.....	84
[:SOURce]:VOLTage[0]:PROTection[:LEVel].....	85
[:SOURce]:VOLTage[0]:PROTection:TRIPped.....	85
[:SOURce]:VOLTage[0]:SLEW:RISing.....	86
[:SOURce]:VOLTage[0]:SLEW:FALLing.....	86

Set →

← Query

[:SOURce]:CURRent:EXTernal:RANGe

Description	Sets or queries the CC or CV control range that is used during external control. Note: the setting will only be valid after the power has been cycled.				
Syntax	[:SOURce]:CURRent:EXTernal:RANGe {LOW HIGH}				
Query Syntax	[:SOURce]:CURRent:EXTernal:RANGe?				
Parameter/Return parameter	<table border="0"> <tr> <td>LOW</td> <td>A range of 0 V to 5 V is used.</td> </tr> <tr> <td>HIGH</td> <td>A range of 0 V to 10 V is used.</td> </tr> </table>	LOW	A range of 0 V to 5 V is used.	HIGH	A range of 0 V to 10 V is used.
LOW	A range of 0 V to 5 V is used.				
HIGH	A range of 0 V to 10 V is used.				

`[:SOURce]:CURRent[:LEVel]:TRIGgered` (Set) →
`[:AMPLitude]` → (Query)

Description	Sets or queries the current level in amps when a software trigger has been generated.
Syntax	<code>[:SOURce]:CURRent[:LEVel]:TRIGgered[:AMPLitude] {<NR2> (A) MINimum MAXimum}</code>
Query Syntax	<code>[:SOURce]:CURRent[:LEVel]:TRIGgered[:AMPLitude]?</code>
Parameter	<code><NR2></code> 0%~105% of the rated current output in amps. MIN Minimum current level. MAX Maximum current level.
Return Parameter	<code><NR2></code> Returns the current level.
Example	<code>SOUR:CURR:LEV:TRIG:AMPL?</code> 38.000 Returns the maximum possible current level in amps.

`[:SOURce]:CURRent:LIMit:AUTO` (Set) →
→ (Query)

Description	Enables or disables the limit on the current setting.
Syntax	<code>[:SOURce]:CURRent:LIMit:AUTO {<bool> OFF ON}</code>
Query Syntax	<code>[:SOURce]:CURRent:LIMit:AUTO?</code>
Parameter	OFF 0 Disable the setting current limit ON 1 Enable the setting current limit
Return parameter	<code><bool></code> Returns the setting in <code><bool></code> format.
Example	<code>SOUR:CURR:LIM:AUTO 0</code> Disables the current limit.

`[:SOURce]:CURRent:PROTection:DELay` (Set) →
→ (Query)

Description	Sets the Delay Time for OCP in seconds for turning the output off. The delay is set to 0.1 by default.
Syntax	<code>[:SOURce]:CURRent:PROTection:DELay {<NR2> MINimum MAXimum}</code>

Query Syntax	[:SOURce]:CURRent:PROTection:DELay?	
Parameter	<NR2>	0.1~2.0 seconds, where 0=no delay
	MAX	The maximum allowed delay time
	MIN	The minimum allowed delay time
Return parameter	<NR2>	Returns the delay time in seconds
Example	SOUR:CURR:PROT:DEL MAX Sets the current protection delay to the maximum.	

Set →

→ Query

[:SOURce]:CURRent:PROTection[:LEVel]		
Description	Sets or queries the OCP (over-current protection) level in amps.	
Syntax	[:SOURce]:CURRent:PROTection[:LEVel] {<NR2>(A) MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:PROTection[:LEVel]?	
Parameter	<NR2>	Current protection level. Minimum: Depend on the unit type: if Irated * 0.1 > 5A, then minimum = 5A, else minimum = Irated * 0.1
	MIN	Minimum current level.
	MAX	Maximum current level.
	Return parameter	<NR2>
Example	SOUR:CURR:PROT:LEV? +5.000 Returns the minimum possible current level in amps.	

Set →

→ Query

[:SOURce]:CURRent:PROTection:STATe		
Description	Turns OCP (over-current protection) on or off.	
Syntax	[:SOURce]:CURRent:PROTection:STATe {<bool> OFF ON}	
Query Syntax	[:SOURce]:CURRent:PROTection:STATe?	

Parameter	OFF 0 ON 1	Turns the OCP off. Turns the OCP on.
Return parameter	<bool>	Returns the over current protection state in <bool> format.
Example	SOUR:CURRE:PROT:STAT OFF Turns OCP off.	

[[:SOURce]:CURRent:PROTection:TRIPped → Query

Description	Returns the state of the current protection circuits.	
Query Syntax	[:SOURce]:CURRent:PROTection:TRIPped?	
Return parameter	<bool>	Returns protection status.
Example	SOUR:CURRE:PROT:TRIP? >0 The protection circuit has not been tripped.	

Set →

[[:SOURce]:CURRent:SLEW:RISing → Query

Description	Sets or queries the rising current slew rate. This is only applicable for CC slew rate priority mode.	
Syntax	[:SOURce]:CURRent:SLEW:RISing {<NR2>(A) MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:SLEW:RISing?	
Parameter	<NR2>	Per step is Rated Current divided by 100 ms.
	MIN	Minimum rising current slew rate.
	MAX	Maximum rising current slew rate.
Return parameter	<NR2>	Returns the step current in amps.
Example	SOUR:CURRE:SLEW:RIS? 0.950 Sets the rising current slew rate to 0.950 A/ms.	

[[:SOURce]:CURRent:SLEW:FALLing (Set) →
→ (Query)

Description	Sets or queries the falling current slew rate. This is only applicable for CC slew rate priority mode.	
Syntax	[:SOURce]:CURRent:SLEW:FALLing {<NR2>(A) MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:SLEW:FALLing?	
Parameter	<NR2>	Per-Step is Rated Current divided by 100msec
	MIN	Minimum falling current slew rate
	MAX	Maximum falling current slew rate
Return Parameter	<NR2>	Returns the step current
Example	SOUR:CURR:SLEW:FALL MAX Sets the falling current slew rate to the maximum.	

[[:SOURce]:MODE? → (Query)

Description	Returns the status of the output mode (CC, CV, Off) of the power supply. The interface will return "CV" if the supply is in Constant Voltage Mode, "CC" if the supply is in Constant Current Mode or "OFF" if the supply output is off.	
Query Syntax	[:SOURce]:MODE?	
Return parameter	<string>	Returns the output state as a string, "CC", "CV", "OFF"
Example	:SOUR:MODE? >CC The power supply is currently in CC mode.	

[[:SOURce]:RESistance[:LEVel][:IMMediate] [[:AMPLitude] (Set) →
→ (Query)

Description	Sets or queries the internal resistance in ohms.	
-------------	--	--

Syntax	[:SOURce]:RESistance[:LEVel][:IMMEDIATE][:AMPLitude] {<NR2>(OHM) MINimum MAXimum}	
Query Syntax	[:SOURce]:RESistance[:LEVel][:IMMEDIATE][:AMPLitude]?	
Parameter	<NR2>	Resistance in ohms: 0 ohm ~ Rrated = Vrated/Irated
	MIN	Minimum internal resistance in ohms
	MAX	Maximum internal resistance in ohms
Return parameter	<NR2>	Returns the internal resistance in ohms.
Example	SOUR:RES:LEV:IMM:AMPL 0.1 Sets the internal resistance to 100mΩ.	

Set →
 → Query

Description	Sets or queries the CC or CV control range that is used during external control. Note: the setting will only be valid after the power has been cycled.	
Syntax	[:SOURce] :VOLTage[0]:EXTernal:RANGe {LOW HIGH}	
Query Syntax	[:SOURce] :VOLTage[0]:EXTernal:RANGe?	
Parameter/Return parameter	LOW	A range of 0 V to 5 V is used.
	HIGH	A range of 0 V to 10 V is used.
Example	VOLT:EXT:RANG? LOW Returns LOW range.	

Set →
 → Query

Description	Sets whether constant current will be controlled externally or not. Note: the setting will only be valid after the power has been cycled.	
Syntax	[:SOURce]:VOLTage[0]:EXTernal:SOURce {NONE VOLTage}	
Query Syntax	[:SOURce]:VOLTage[0]:EXTernal:SOURce?	
Parameter/Return parameter	NONE	External control is not used.
	VOLTage	External control is used.

Set →
 → Query

[:SOURce]:VOLTage[0]:LIMit:AUTO

Description	<p>Sets whether to limit the voltage setting so that it does not exceed the OVP setting or become lower than the UVP setting.</p> <p>If you enable the limit when the OVP setting is lower than the voltage setting, the OVP setting will be set to 105 % of the voltage setting.</p> <p>If you enable the limit when the UVP setting is higher than the voltage setting, the UVP setting will be set equal to the voltage setting.</p>				
Syntax	<code>[:SOURce]:VOLTage[0]:LIMit:AUTO {<bool> OFF ON}</code>				
Query Syntax	<code>[:SOURce]:VOLTage[0]:LIMit:AUTO?</code>				
Parameter	<table border="0" style="width: 100%;"> <tr> <td style="width: 10%;"><code>OFF 0</code></td> <td>Disable the limit setting</td> </tr> <tr> <td><code>ON 1</code></td> <td>Enable the limit setting</td> </tr> </table>	<code>OFF 0</code>	Disable the limit setting	<code>ON 1</code>	Enable the limit setting
<code>OFF 0</code>	Disable the limit setting				
<code>ON 1</code>	Enable the limit setting				
Return parameter	<code><bool></code> Returns the setting in <code><bool></code> format.				
Example	<p><code>SOUR:VOLT:LIM:AUTO 0</code></p> <p>Disables the limit setting.</p>				

Set →
 → Query

[:SOURce]:VOLTage[0]:LIMit:LOW

Description	Sets or queries the under voltage (UVL) trip point.						
Syntax	<code>[:SOURce]:VOLTage[0]:LIMit:LOW <NR2>(V) MINimum MAXimum</code>						
Query Syntax	<code>[:SOURce]:VOLTage[0]:LIMit:LOW?</code>						
Parameter/Return	<table border="0" style="width: 100%;"> <tr> <td style="width: 10%;"><code><NR2></code></td> <td>0 ~ the present setting voltage</td> </tr> <tr> <td><code>MIN</code></td> <td>Minimum allowed voltage level</td> </tr> <tr> <td><code>MAX</code></td> <td>Maximum allowed voltage level</td> </tr> </table>	<code><NR2></code>	0 ~ the present setting voltage	<code>MIN</code>	Minimum allowed voltage level	<code>MAX</code>	Maximum allowed voltage level
<code><NR2></code>	0 ~ the present setting voltage						
<code>MIN</code>	Minimum allowed voltage level						
<code>MAX</code>	Maximum allowed voltage level						
Example	<p><code>SOUR:VOLT:LIM:LOW MAX</code></p> <p>Sets the UV> level to its maximum.</p>						

`[:SOURce]:VOLTage[0]:PROTection[:LEVel]`  

Description	Sets or queries the overvoltage protection level.	
Syntax	[:SOURce]:VOLTage[0]:PROTection[:LEVel] {<NR2>(V) MINimum MAXimum}	
Query Syntax	[:SOURce]:VOLTage[0]:PROTection[:LEVel]?	
Parameter/Return	<NR2>	Minimum: Depends on the unit type: if Vrated * 0.1 > 5V, then Minimum = 5V, else Minimum = Vrated * 0.1 Maximum: Vrated * 1.1
	MIN	Minimum OVP level
	MAX	Maximum OVP level
Example	SOUR:VOLT:PROT:LEV MAX Sets the OVP level to its maximum.	

`[:SOURce]:VOLTage[0]:PROTection:TRIPped` 

Description	Sets or queries the overvoltage protection level.	
Query Syntax	[:SOURce]:VOLTage[0]:PROTection:TRIPped?	
Return parameter	<bool>	
	0	Protection not tripped
	1	Protection tripped
Example	SOUR:VOLT:PROT:TRIP? >0 Indicates that the OVP protection has not been tripped.	

Set →
 → Query

[[:SOURce]:VOLTage[0]:SLEW:RISing

Description	Sets or queries the rising voltage slew rate. This is only applicable for CV slew rate priority mode.
Syntax	[[:SOURce]:VOLTage[0]:SLEW:RISing
Query Syntax	{<NR2>(V) MINimum MAXimum} [[:SOURce]:VOLTage[0]:SLEW:RISing?
Parameter	<NR2> 0 ~ Vrated/100msec MIN Minimum rising voltage slew rate MAX Maximum rising voltage slew rate
Return parameter	<NR2> Returns the slew rate in A/ms.
Example	SOUR:VOLT:SLEW:RIS MAX Sets the rising voltage slew rate to its maximum.

Set →
 → Query

[[:SOURce]:VOLTage[0]:SLEW:FALLing

Description	Sets or queries the falling voltage slew rate. This is only applicable for CV slew rate priority mode.
Syntax	[[:SOURce]:VOLTage[0]:SLEW:FALLing
Query Syntax	{<NR2>(V) MINimum MAXimum} [[:SOURce]:VOLTage[0]:SLEW:FALLing?
Parameter	<NR2> 0 ~ Vrated/100msec MIN Minimum voltage falling slew rate MAX Maximum voltage falling slew rate
Return parameter	<NR2> Returns the voltage slew rate in A/ms
Example	SOUR:VOLT:SLEW:FALL MIN Sets the falling voltage slew rate to its minimum.


System Function Command


:SYSTem:CONFigure:BEEPer[:STATe].....	88
:SYSTem:CONFigure:BLEeder[:STATe].....	88
:SYSTem:CONFigure:CURREnt:CONTRol.....	88
:SYSTem:CONFigure:VOLTAge:CONTRol.....	89
:SYSTem:CONFigure:OUTPut:PON[:STATe].....	89
:SYSTem:CONFigure:PROTEction:RECOvery.....	90
:SYSTem:CONFigure:MSLave.....	90
:SYSTem:CONFigure:OUTPut:EXTernal[:MODE].....	90
:SYSTem:COMMunicate:ENABle.....	91
:SYSTem:COMMunicate:GPIB[:SELF]:ADDRess.....	91
:SYSTem:COMMunicate:LAN:IPADdress.....	92
:SYSTem:COMMunicate:LAN:GATEway.....	92
:SYSTem:COMMunicate:LAN:SMASK.....	93
:SYSTem:COMMunicate:LAN:MAC.....	93
:SYSTem:COMMunicate:LAN:DHCP.....	93
:SYSTem:COMMunicate:LAN:DNS.....	94
:SYSTem:COMMunicate:TCPip:CONTRol.....	94
:SYSTem:COMMunicate:SERial:LANGUage[:SELEct]....	94
:SYSTem:COMMunicate:SERial[:RECEive]	
:TRANsmit:BAUD.....	95
:SYSTem:COMMunicate:SERial[:RECEive]	
:TRANsmit:BITS.....	95
:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit	
:PARity.....	96
:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit	
:SBITs.....	96
:SYSTem:COMMunicate:USB:FRONt:STATe.....	97
:SYSTem:COMMunicate:USB:REAR:MODE.....	97
:SYSTem:COMMunicate:USB:REAR:STATe.....	97
:SYSTem:ERRor.....	98
:SYSTem:KLOCK.....	98
:SYSTem:KEYLOCK:MODE.....	98
:SYSTem:ERRor:ENABle.....	98
:SYSTem:LANGUage:EMULation.....	99
:SYSTem:LANGUage[:SELEct].....	99
:SYSTem:PREset.....	99
:SYSTem:VERSion.....	99
:SYSTem:REBoot.....	100

:SYSTem:CONFigure:BEEPer[:STATe]






Description	Sets or queries the buzzer state on/off.	
Syntax	:SYSTem:CONFigure:BEEPer[:STATe] {<bool> OFF ON}	
Query Syntax	:SYSTem:CONFigure:BEEPer[:STATe]?	
Parameter	OFF 0	Turns the buzzer off.
	ON 1	Turns the buzzer on.
Return parameter	<bool>	Returns the buzzer status.

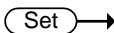:SYSTem:CONFigure:BLEEder[:STATe]

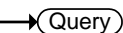


Description	Sets or queries the status of the bleeder resistor.	
Syntax	:SYSTem:CONFigure:BLEEder[:STATe] {<bool> OFF ON}	
Query Syntax	:SYSTem:CONFigure:BLEEder[:STATe]?	
Parameter	OFF 0	Turns the bleeder resistor off.
	ON 1	Turns the bleeder resistor on.
Return parameter	<bool>	Returns bleeder resistor status.

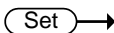:SYSTem:CONFigure:CURRent:CONTRol

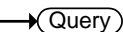


Description	Sets or queries the CC control mode (local control (panel), external voltage control, external resistance control). This setting is applied only after the unit is reset.	
Syntax	:SYSTem:CONFigure:CURRent:CONTRol { <NR1> }	
Query Syntax	:SYSTem:CONFigure:CURRent:CONTRol?	
Parameter/Return	<NR1>	Description
	0	Local (Panel) control
	1	External voltage control
	2	External resistance control; 10kΩ = Io max, 0kΩ = Io min.

3 External resistance control; 10kΩ = Io min, 0kΩ = Io max.

Set →

:SYSTem:CONFigure:VOLTage:CONTRol

→ Query

Description Sets or queries the CV control mode (local control (panel), external voltage control, external resistance control). This setting is applied only after the unit is reset.

Syntax :SYSTem:CONFigure:VOLTage:CONTRol { <NR1> }

Query Syntax :SYSTem:CONFigure:VOLTage:CONTRol?

Parameter/Return	<NR1>	Description
	0	Local (Panel) control
	1	External voltage control
	2	External resistance control; 10kΩ = Io max, 0kΩ = Io min.
	3	External resistance control; 10kΩ = Io min, 0kΩ = Io max.

Set →

:SYSTem:CONFigure:OUTPut:PON[:STATe]

→ Query

Description Sets the output state at power-on. This is the equivalent to the F-92 (Output Status when Power ON) power on configuration settings.

Syntax :SYSTem:CONFigure:OUTPut:PON[:STATe]

Return Syntax {<NR1>|SAFE|FORCe|AUTO}

:SYSTem:CONFigure:OUTPut:PON[:STATe]?

Parameter	SAFE 0	FORCe 1	AUTO 2
	The PSU turns on in the same state the unit was in prior to the previous shut down. The output is set to off (default).		
	The PSU turns on in the same state the unit was in prior to the previous shut down. The output is set to on.		
	The PSU turns on in the same state the unit was in prior to the previous shut down, but with the same output on/off setting.		
Return parameter	0	1	2
	The power on output setting is "SAFE".		
	The power on output setting is "FORCe".		
	The power on output setting is "AUTO".		

Set →

:SYSTem:CONFigure:PROTection:RECOvery → Query

Description	Sets or queries how the OHP, FAN, AC-FAIL, and SD alarms are cleared.	
Syntax	:SYSTem:CONFigure:PROTection:RECOvery {SAFE AUTO}	
Return Syntax	:SYSTem:CONFigure:PROTection:RECOvery?	
Parameter	SAFE	The output is not turned on automatically when the cause of the alarm is fixed.
	AUTO	The output is turned on automatically when the cause of the alarm is fixed.

Set →

:SYSTem:CONFigure:MSLave → Query

Description	Sets or queries the unit operation mode. This setting is only applied after the unit has been reset.	
Syntax	:SYSTem:CONFigure:MSLave { <NR1> }	
Query Syntax	:SYSTem:CONFigure:MSLave?	
Parameter/Return	<NR1>	Description
	0	Master/Local
	1	Master/with 1 unit in Parallel (total:2 units)
	2	Master/with 2 units in Parallel (total: 3 units)
	3	Master/with 3 units in Parallel (total: 4 units)
	4	Slave

Set →

:SYSTem:CONFigure:OUTPut:EXTernal
[:MODE] → Query

Description	Sets the external logic as active high or active low. This setting is only applied after the unit has been reset.	
Syntax	:SYSTem:CONFigure:OUTPut:EXTernal[:MODE]	
Query Syntax	{<NR1> LOW HIGH}	
	:SYSTem:CONFigure:OUTPut:EXTernal[:MODE]?	

Parameter	HIGH 0 Active high LOW 1 Active low
Return Parameter	<NR1> Returns the logic setting.

Set →

:SYSTem:COMMunicate:ENABLE

→ Query

Description	Enables/Disables GPIB, USB or other remote interfaces such as Sockets and the Web Server.	
Syntax	:SYSTem:COMMunicate:ENABLE {<bool> OFF ON,GPIB USB SOCKets WEB SERial}	
Query Syntax	:SYSTem:COMMunicate:ENABLE? {GPIB USB SOCKets WEB SERial}	
Parameter 1	OFF 0 ON 1	Disables the selected interface. Enables the selected interface.
Parameter 2	GPIB USB SOCKets WEB SERial	Select GPIB Select USB Select Sockets Select the web server Selected Serial (UART)
Return Parameter	<bool>	Returns the status of the selected mode.

Example SYST:COMM:ENAB 1,USB
Turns the USB interface on.

Query Example SYST:COMM:ENAB? USB
1
Queries the USB state, returns 1 (USB is on).

:SYSTem:COMMunicate:GPIB[:SELF]:ADDR Set →
ess → Query

Description	Sets or queries the GPIB address. Note: the setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:GPIB[:SELF]:ADDRess <NR1>	
Query Syntax	:SYSTem:COMMunicate:GPIB[:SELF]:ADDRess?	
Parameter/Return	<NR1>	0~30

Example SYST:COMM:GPIB:SELF:ADDR 15
Sets the GPIB address to 15.

:SYSTem:COMMunicate:LAN:IPADdress (Set) →
→ (Query)

Description Sets or queries LAN IP address. Note: the setting will only be valid after the power has been cycled.

Syntax :SYSTem:COMMunicate:LAN:IPADdress <string>

Query Syntax :SYSTem:COMMunicate:LAN:IPADdress?

Parameter/Return <string> LAN IP address in string format ("address")
Applicable ASCII characters: 20H to 7EH

Example SYST:COMM:LAN:IPAD "172.16.5.111"
Sets the IP address to 172.16.5.111.

:SYSTem:COMMunicate:LAN:GATEway (Set) →
→ (Query)

Description Sets or queries the Gateway address. Note: the setting will only be valid after the power has been cycled.

Syntax :SYSTem:COMMunicate:LAN:GATEway <string>

Query Syntax :SYSTem:COMMunicate:LAN:GATEway?

Parameter/Return <string> Gateway address in string format ("address")
Applicable ASCII characters: 20H to 7EH

Example SYST:COMM:LAN:GATE "172.16.0.254"
Sets the LAN gateway to 172.16.0.254.

:SYSTem:COMMunicate:LAN:SMASk



Description	Sets or queries the LAN subnet mask. Note: the setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:SMASk <string>
Query Syntax	:SYSTem:COMMunicate:LAN:SMASk?
Parameter/Return	<string> Subnet mask in string format ("mask") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:SMASK "255.255.0.0" Sets the LAN mask to 255.255.0.0.

:SYSTem:COMMunicate:LAN:MAC 

Description	Returns the unit MAC address as a string. The MAC address cannot be changed.
Query Syntax	:SYSTem:COMMunicate:LAN:MAC?
Return parameter	<string> Returns the MAC address in the following format "FF-FF-FF-FF-FF-FF"
Example	SYST:COMM:LAN:MAC? 02-80-AD-20-31-B1 Returns the MAC address.

:SYSTem:COMMunicate:LAN:DHCP



Description	Turns DHCP on/off. Queries the DHCP status. Note: the setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:DHCP {<bool> OFF ON}
Query Syntax	:SYSTem:COMMunicate:LAN:DHCP?
Parameter	OFF 0 DHCP off ON 1 DHCP on
Return parameter	<bool> Returns the DHCP status.

		(Set) →
		→ (Query)
:SYSTem:COMMunicate:LAN:DNS		
Description	Sets or queries the DNS address. Note: the setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:LAN:DNS <string>	
Query Syntax	:SYSTem:COMMunicate:LAN:DNS?	
Parameter/Return	<string> DNS in string format ("mask") Applicable ASCII characters: 20H to 7EH	
Example	SYST:COMM:LAN:DNS "172.16.1.252" Sets the DNS to 172.16.1.252.	

		→ (Query)
:SYSTem:COMMunicate:TCPIp:CONTRol		
Description	Queries the socket port number.	
Query Syntax	:SYSTem:COMMunicate:TCPIp:CONTRol?	
Return parameter	<NR1> 0000 ~ 9999	
Example	SYST:COMM:TCP:CONTRol? >2268 Returns the socket port number.	

		(Set) →
		→ (Query)
:SYSTem:COMMunicate:SERial:LANGuage[:SElect]		
Description	Sets or queries the communication protocol for the serial port.	
Syntax	:SYSTem:COMMunicate:SERial:LANGuage[:SElect] {"SCPI" "LEGACY"}	
Query Syntax	:SYSTem:COMMunicate:SERial:LANGuage[:SElect]?	
Parameter/Return parameter	"SCPI"	Sets the communication protocol to SCPI.
	"LEGACY"	Sets the communication protocol to legacy mode. (Emulate TDK Genesys)
Example	SYST:COMM:SER:LANG? >SCPI Indicates that the communication protocol is set to SCPI.	

:SYSTem:COMMunicate:SERial[:RECeive]:T Set →
RANsmit:PARity →Query

Description	Sets or queries the parity of the UART connection. Note: the setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit
Query Syntax	:PARity <NR1> :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :PARity?
Parameter/Return parameter	0 None 1 Odd 2 Even
Example	SYST:COMM:SER:TRAN:PARity? >1 Indicates that odd parity is used for the UART connection.

:SYSTem:COMMunicate:SERial[:RECeive]:T Set →
RANsmit:SBITs →Query

Description	Sets or queries the number of stop bits used for the UART connection. Note: the setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit
Query Syntax	:SBITs<NR1> :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :SBITs?
Parameter/Return parameter	0 1 stop bit 1 2 stop bits
Example	SYST:COMM:SER:TRAN:SBITs? >1 Indicates that one stop bit is used for the UART connection.

:SYSTem:COMMunicate:USB:FRONT:STATe → **Query**

Description	Queries the front panel USB-A port state.	
Query Syntax	:SYSTem:COMMunicate:USB:FRONT:STATe?	
Return parameter	0	<NR1>Absent
	1	<NR1>Mass Storage

Set →

:SYSTem:COMMunicate:USB:REAR:MODE → **Query**

Description	Sets or queries the speed of the rear panel USB B port. This setting is applied only after the unit is reset.	
Syntax	:SYSTem:COMMunicate:USB:REAR:MODE {<NR1> DISable AUTO FULL}	
Query Syntax	:SYSTem:COMMunicate:USB:REAR:MODE?	
Parameter	0 DISable	Disable
	1 AUTO	Auto detect speed
	2 FULL	Full speed
Return parameter	<NR1>	
	0	Disable
	1	Auto detect speed
	2	Full speed

:SYSTem:COMMunicate:USB:REAR:STATe → **Query**

Description	Queries the rear panel USB-B port state.	
Query Syntax	:SYSTem:COMMunicate:USB:REAR:STATe?	

Return parameter	0	<NR1>Absent
	1	<NR1>Connected to the PC

:SYSTem:ERRor → **Query**

Description Queries the error queue. The last error message is returned. A maximum of 32 errors are stored in the error queue.

Query Syntax :SYSTem:ERRor?

Return parameter <string> Returns an error code followed by an error message as a single string.

Example SYSTem:ERRor?
-100, "Command error"

Set →

:SYSTem:KLOCK → **Query**

Description Enables or disables the front panel key lock.

Syntax :SYSTem:KLOCK {<bool>|OFF|ON }

Query Syntax :SYSTem:KLOCK?

Parameter OFF | 0 Panel keys unlocked
ON | 1 Panel keys locked

Return parameter <bool> Returns the key lock status.

Set →

:SYSTem:KEYLock:MODE → **Query**

Description Sets or queries the keylock mode. This setting is the equivalent to the F-19 function setting.

Syntax :SYSTem:KEYLock { 0|1 }

Query Syntax :SYSTem:KEYLock?

Parameter/Return parameter 0 Panel lock: allow output off.
1 Panel lock: allow output on/off.

:SYSTem:ERRor:ENABLE Set →

Description Clears the Error Queue and enables all error messages to be placed in the System Error Queue.

Syntax :SYSTem:ERRor:ENABle

Set →

:SYSTem:LANGUage:EMULation

→ Query

Description Sets or queries the command language.

Syntax :SYSTem:LANGUage:EMULation
NONE|N5700|GEN|PWX

Query Syntax :SYSTem:LANGUage:EMULation?

Parameter/ Return parameter	NONE	Emulation is not used. This is the default setting
	N5700	N5700/N8700 emulation is used.
	GEN	GENESYS emulation is used.
	PWX	PAG emulation is used.

Set →

:SYSTem:LANGUage[:SElect]

→ Query

Description Sets or queries the command language.

Syntax :SYSTem:LANGUage[:SElect] SCPI|GEN

Query Syntax :SYSTem:LANGUage[:SElect]?

Parameter/ Return parameter	SCPI	Use the SCPI command language. This the default language
	GEN	Use the GEN command language.

:SYSTem:PREset

Set →

Description Presets all the Operation Enable and Questionable Enable registers.

Syntax :SYSTem:PREset

:SYSTem:VERSion

→ Query

Description Returns the version of the PSU SCPI version.

Query Syntax :SYSTem:VERSion?

Return <string> Returns the SCPI version as a string.

Query Example SYST:VERS?
>1999.9

:SYSTem:REBoot

Set →

Description Reboots the PSU system.

Syntax :SYSTem:REBoot

IEEE 488.2 Common Commands

*CLS.....	100
*ESE.....	100
*ESR.....	101
*IDN.....	101
*OPC.....	101
*RCL.....	102
*RST.....	102
*SAV.....	102
*SRE.....	102
*STB.....	103
*TRG.....	103
*TST.....	103
*WAI.....	103

***CLS**

Set →

Description The *CLS command clears all the event registers, including the status byte, event status and error queue.

Syntax *CLS

***ESE**

Set →

→ Query

Description Sets or queries the Standard Event Status Enable register.

Syntax	*ESE <NR1>
Query Syntax	*ESE?
Parameter	<NR1> 0~255
Return parameter	<NR1> Returns the bit sum of the Standard Event Status Enable register.

***ESR** → Query

Description	Queries the Standard Event Status (Event) register. The Event Status register is cleared after it is read.
Query Syntax	*ESR?
Return parameter	<NR1> Returns the bit sum of the Standard Event Status (Event) register and clears the register.

***IDN** → Query

Description	Queries the manufacturer, model name, serial number, and firmware version of the PSU.
Query Syntax	*IDN?
Return parameter	<string> Returns the instrument identification as a string in the following format: GW-INSTEK,PSU-2076,TW123456,01.00.20110101 Manufacturer: GW-INSTEK Model number : PSU-3036 Serial number : TW123456 Firmware version : 01.00.20110101

Set →

***OPC** → Query

Description	The *OPC command sets the OPC bit (bit0) of the Standard Event Status Register when all current commands have been processed. The *OPC? Query returns 1 when all the outstanding commands have completed.
-------------	--

Syntax	*OPC
Query Syntax	*OPC?

Return parameter 1 Returns 1 when all the outstanding commands have completed.

***RCL**



Description Recalls the contents stored in memory slot M1, M2 or M3.

Syntax *RCL {<NR1>|MAX|MIN}

Parameter <NR1> 0, 1, 2 (as memory M1 , M2, M3)
 MIN Recalls the M1 memory contents.
 MAX Recalls the M3 memory contents.

***RST**



Description Performs a device reset. Configures the unit to a known configuration (default settings). This known configuration is independent of the usage history.

Syntax *RST

***SAV**




Description Saves the settings into memory slot M1, M2 or M3.

Syntax *SAV {<NR1>|MIN|MAX}

Return parameter <NR1> 0, 1, 2 (as memory M1 , M2, M3)
 MIN Saves the M1 memory contents.
 MAX Saves the M3 memory contents.

***SRE**



Description Sets or queries the Service Request Enable register. The Service Request Enable register determines which registers of the Status Byte register are able to generate service requests.

Syntax *SRE <NR1>

Query Syntax *SRE?

Parameter	<NR1>	0~255
Return parameter	<NR1>	Returns the bit sum of the Service Request Enable register.

***STB** → Query

Description Queries the bit sum of the Status Byte register with MSS (Master summary Status) replacing the RQS bit (bit 6).

Query Syntax *STB?

Return parameter <NR1> Returns the bit sum of the Status Byte register with the MSS bit (bit 6).

***TRG** Set →

Description The *TRG command is able to generate a “get” (Group Execute Trigger). If the PSU cannot accept a trigger at the time of the command, an error message is generated (-211, “Trigger ignored”).

Syntax *TRG

***TST** → Query

Description Executes a self test.

Query Syntax *TST?

Return parameter 0 Returns “0” if there are no errors.
 <NR1> Returns an error code <NR1> if there is an error.

***WAI** Set →

Description Prevents any other commands or queries from being executed until all outstanding commands have completed.

Syntax *WAI

Status Register Overview

To program the PSU power supply effectively, the Status registers need to be understood. This chapter explains in detail how the Status registers are used and how to configure them.

Introduction to the Status Registers.....	104
The Status Registers	105
Questionable Status Register Group.....	106
Operation Status Register Group	108
Standard Event Status Register Group.....	111
Status Byte Register & Service Request Enable Register	113

Introduction to the Status Registers

Overview


The status registers are used to determine the status of the power supply. The status registers maintain the status of the protection conditions, operation conditions and instrument errors.

The PSU Series have a number of register groups:

- Questionable Status Register Group
- Standard Event Status Register Group
- Operation Status Register Group
- Status Byte Register
- Service Request Enable Register
- Service Request Generation
- Error Queue
- Output Buffer

The next page shows the structure of the Status registers.


The Status Registers

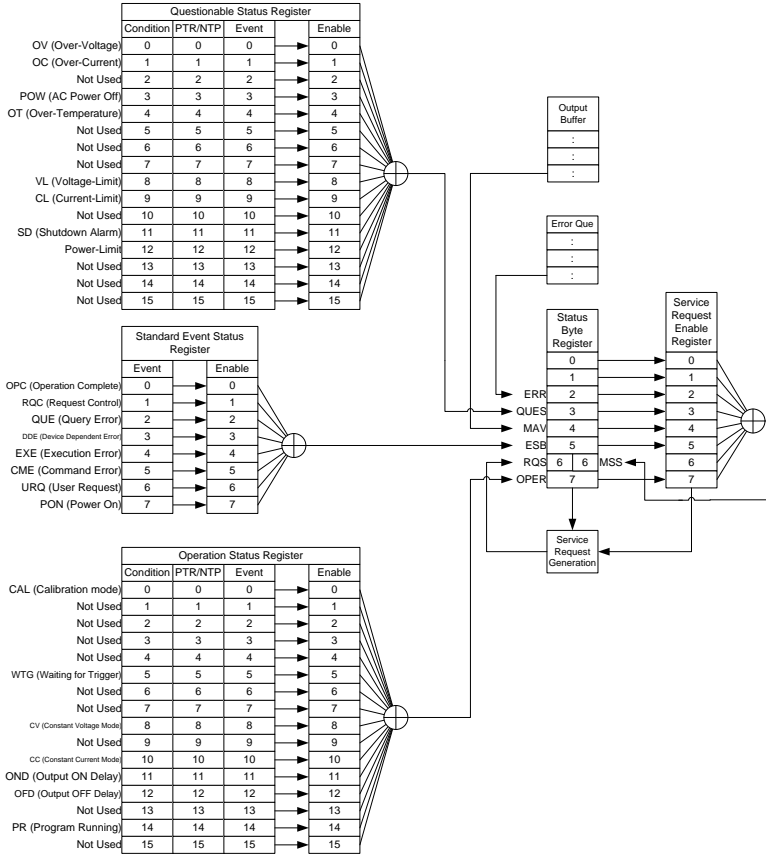

Questionable Status Register Group

Overview

The Questionable Status Register Group indicates if any protection modes or limits have been tripped.

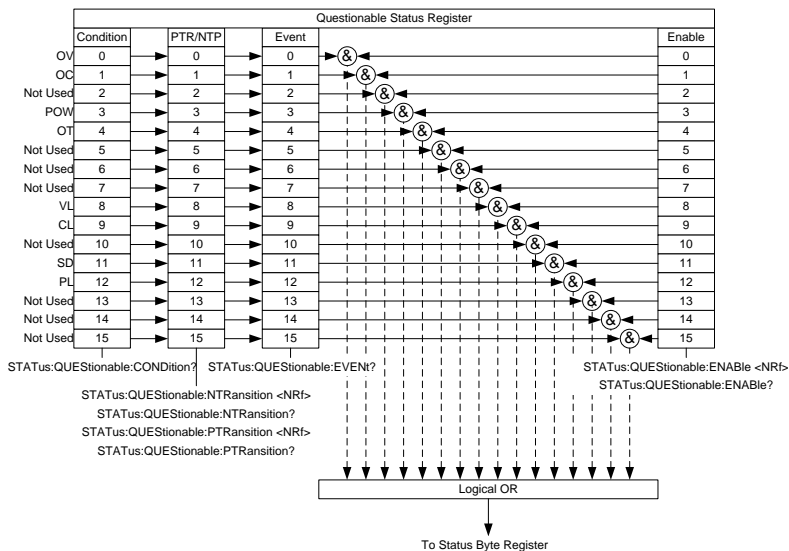

Bit Summary


Event	Bit #	Bit Weight
OV (Over-Voltage)	0	1
Over voltage protection has been tripped		
OC (Over-Current)	1	2
Over current protection has been tripped		
POW (AC Power Off)	3	8
AC power switch is off		

	OT (Over Temperature)	4	16
	Over temperature protection has been tripped		
	VL (Voltage Limit)	8	256
	Voltage limit has been reached		
	CL (Current Limit)	9	512
	Current limit has been reached		
	SD (Shutdown Alarm)	11	2048
	PL (Power-Limit)	12	4096
Condition Register	The Questionable Status Condition Register indicates the status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.		
PTR/NTR Filters	The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.		
	Positive Transition	0→1	
	Negative Transition	1→0	
Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.		
Enable Register	The Enable register determines which Events in the Event Register will be used to set the QUES bit in the Status Byte Register.		

Operation Status Register Group

Overview

The Operation Status Register Group indicates the operating status of the power supply.

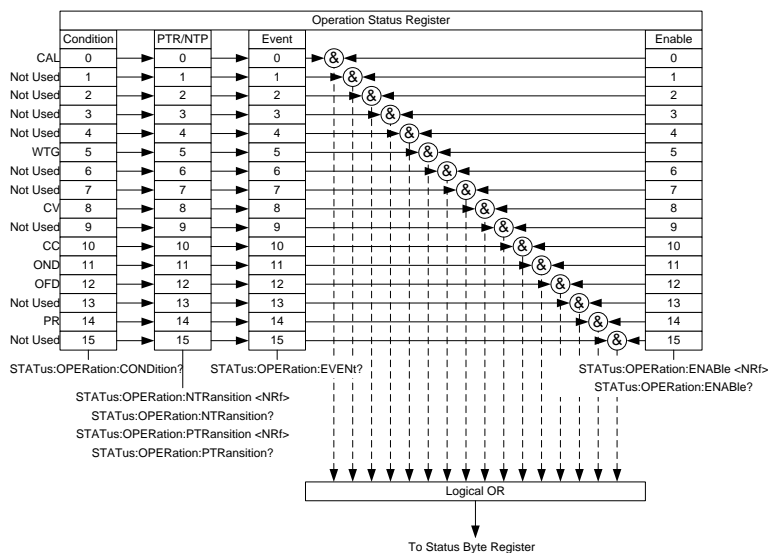

Bit Summary

Event	Bit #	Bit Weight
CAL (Calibration mode)	0	1
Indicates if the PSU is in calibration mode.		
WTG (Waiting for trigger)	5	32
Indicates if the PSU is waiting for a trigger.		

	CV (Constant voltage mode)	8	256
	Indicates if the PSU is in CV mode.		
	CC (Constant current mode)	10	1024
	Indicates if the PSU is in CC mode.		
	OND (Output ON Delay)	11	2048
	Indicates if Output ON delay time is active		
	OFD (Output OFF Delay)	12	4096
	Indicates if Output OFF delay time is active		
	PR (Program Running)	14	16384
	Indicates if a Test is running		
Condition Register	The Operation Status Condition Register indicates the operating status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.		
PTR/NTR Filters	The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.		
	Positive Transition	0→1	
	Negative Transition	1→0	


Event Register The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.

Enable Register The Enable register determines which registered Events in the Event Register will be used to set the OPER bit in the Status Byte Register.

Standard Event Status Register Group

Overview

The Standard Event Status Register Group indicates if any errors have occurred. The bits of the Event register are set by the error event queue.

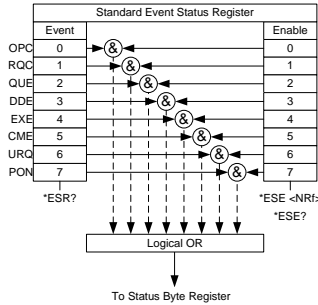

Bit Summary

Event	Bit #	Bit Weight
OPC (Operation complete)	0	1
The OCP bit is set when all selected pending operations are complete. This bit is set in response to the *OPC command.		
RQC (Request control)	1	2
QUE (Query Error)	2	4
The Query Error bit is set in response to an error reading the Output Queue. This can be caused by trying to read the Output Queue when there is no data present.		
DDE (Device Dependent Error)	3	8
Device specific error.		

EXE (Execution Error)	4	16
-----------------------	---	----

The EXE bit indicates an execution error due to one of the following: illegal command parameter, parameter out of range, invalid parameter, the command didn't execute due to an overriding operation condition.

CME (Command Error)	5	32
---------------------	---	----

The CME bit is set when a syntax error has occurred. The CME bit can also be set when a <GET> command is received within a program message.

URQ (User Request)	6	64
--------------------	---	----

PON (Power On)	7	128
----------------	---	-----

Indicates the power is turned on.


Event Register	Any bits set in the event register indicate that an error has occurred. Reading the Event register will reset the register to 0.
----------------	--

Enable Register	The Enable register determines which Events in the Event Register will be used to set the ESB bit in the Status Byte Register.
-----------------	--

Status Byte Register & Service Request Enable Register

Overview

The Status Byte register consolidates the status events of all the status registers. The Status Byte register can be read with the *STB? query and can be cleared with the *CLS command.

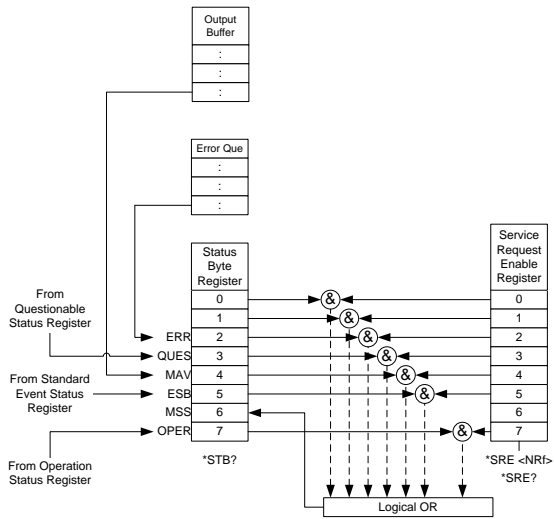

Bit Summary

Event	Bit #	Bit Weight
ERR (Error Event/Queue)	2	4
If data is present in the Error queue, the ERR bit will be set.		
QUES (Questionable Status Register)	3	8
The summary bit for the Questionable Status Register group.		
MAV (Message Available) This is set when there is data in the Output Queue waiting to be read.	4	16

	(ESB) Event Summary Bit. The ESB is the summary bit for the Standard Event Status Register group.	5	32
	MSS Bit The MSS Bit is the summary of the Status Byte Register and Service Request register (bits 1-5, 7). This will be set to 1.	6	64
	OPER (Operation Status Register) OPER bit is the summary bit for the Operation Status Register Group.	7	128
Status Byte Register	Any bits set in the Status byte register acts as a summary register for all the three other status registers and indicates if there is a service request, an error in the Error Queue or data in the Output Queue. Reading the Status Byte register will reset the register to 0.		
Service Request Enable Register	The Service Request Enable Register controls which bits in the Status Byte Register are able to generate service requests.		

Error List

Command Errors.....	115
Execution Errors	119
Device Specific Errors	121
Query Errors	122

Command Errors

Overview

An <error/event number> in the range [-199 , -100] indicates that an IEEE 488.2 syntax error has been detected by the instrument's parser. The occurrence of any error in this class shall cause the command error bit (bit 5) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- An IEEE 488.2 syntax error has been detected by the parser. That is, a controller-to-device message was received which is in violation of the IEEE 488.2 standard. Possible violations include a data element which violates the device listening formats or whose type is unacceptable to the device.
- An unrecognized header was received. Unrecognized headers include incorrect device-specific headers and incorrect or unimplemented IEEE 488.2 common commands.

Events that generate command errors shall not generate execution errors, device-specific errors, or query errors; see the other error definitions in this chapter.

Error Code	Description
-100 Command Error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that a Command Error as defined in IEEE 488.2,11.5.1.1.4 has occurred.
-102 Syntax error	An unrecognized command or data type was encountered; for example, a string was received when the device does not accept strings.
-103 Invalid separator	The parser was expecting a separator and encountered an illegal character; for example, the semicolon was omitted after a program message unit, MEAS:VOLT:DC?:MEASCURR:DC?
-104 Data type error	The parser recognized a data element different than one allowed; for example, numeric or string data was expected but block data was encountered.
-108 Parameter not allowed	More parameters were received than expected for the header; for example, the KLOCK command only accepts one parameter, so receiving SYSTem:KLOCK 1,0 is not allowed.
-109 Missing parameter	Fewer parameters were received than required for the header; for example, the KLOCK command requires one parameter, so receiving KLOCK is not allowed.
-111 Header separator error	A character which is not a legal header separator was encountered while parsing the header; for example, no white space followed the header, thus *SRE2 is an error.

-112 Program mnemonic too long	The header contains more than twelve characters (see IEEE 488.2, 7.6.1.4.1).
-113 Undefined header	The header is syntactically correct, but it is undefined for this specific device; for example, *XYZ is not defined for any device.
-114 Header suffix out of range	The value of a numeric suffix attached to a program mnemonic, see Syntax and Style section 6.2.5.2, makes the header invalid.
-115 Unexpected number of parameters	The number of parameters received does not correspond to the number of parameters expected. This is typically due to an inconsistency with the number of instruments in the selected group.
-120 Numeric data error	This error, as well as errors -121 through -129, are generated when parsing a data element which appears to be numeric, including the nondecimal numeric types. This particular error message should be used if the device cannot detect a more specific error.
-121 Invalid character in number	An invalid character for the data type being parsed was encountered; for example, an alpha in a decimal numeric or a "9" in octal data.
-128 Numeric data not allowed	A legal numeric data element was received, but the device does not accept one in this position for the header.
-131 Invalid suffix	The suffix does not follow the syntax described in IEEE 488.2, 7.7.3.2, or the suffix is inappropriate for this device.

-141 Invalid character data	Either the character data element contains an invalid character or the particular element received is not valid for the header.
-148 Character data not allowed	A legal character data element was encountered where prohibited by the device.
-151 Invalid string data	A string data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.5.2); for example, an END message was received before the terminal quote character.
-158 String data not allowed	A string data element was encountered but was not allowed by the device at this point in parsing.
-160 Block data error	This error, as well as errors -161 through -169, are generated when parsing a block data element. This particular error message should be used if the device cannot detect a more specific error.
-161 Invalid block data	A block data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.6.2); for example, an END message was received before the length was satisfied.
-168 Block data not allowed	A legal block data element was encountered but was not allowed by the device at this point in parsing.
-178 Expression data not allowed	A legal expression data was encountered but was not allowed by the device at this point in parsing.

Execution Errors

Overview An <error/event number> in the range [-299 , -200] indicates that an error has been detected by the instrument's execution control block. The occurrence of any error in this class shall cause the execution error bit (bit 4) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- A <PROGRAM DATA> element following a header was evaluated by the device as outside of its legal input range or is otherwise inconsistent with the device's capabilities.
- A valid program message could not be properly executed due to some device condition.

Execution errors shall be reported by the device after rounding and expression evaluation operations have taken place. Rounding a numeric data element, for example, shall not be reported as an execution error. Events that generate execution errors shall not generate Command Errors, device-specific errors, or Query Errors; see the other error definitions in this section.

Error Code	Description
-200 Execution error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that an Execution Error as defined in IEEE 488.2, 11.5.1.1.5 has occurred.

-201 Invalid while in local	Indicates that a command is not executable while the device is in local due to a hard local control (see IEEE 488.2, 5.6.1.5); for example, a device with a rotary switch receives a message which would change the switches state, but the device is in local so the message cannot be executed.
-203 Command protected	Indicates that a legal password-protected program command or query could not be executed because the command was disabled.
-211 Trigger ignored	Indicates that a GET, *TRG, or triggering signal was received and recognized by the device but was ignored because of device timing considerations; for example, the device was not ready to respond. Note: a DT0 device always ignores GET and treats *TRG as a Command Error.
-213 Init ignored	Indicates that a request for a measurement initiation was ignored as another measurement was already in progress.
-220 Parameter error	Indicates that a program data element related error occurred. This error message should be used when the device cannot detect the more specific errors described for errors -221 through -229.
-221 Settings conflict	Indicates that a legal program data element was parsed but could not be executed due to the current device state (see IEEE 488.2, 6.4.5.3 and 11.5.1.1.5.).

-222 Data out of range	Indicates that a legal program data element was parsed but could not be executed because the interpreted value was outside the legal range as defined by the device (see IEEE 488.2, 11.5.1.1.5.).
-224 Illegal parameter value	Used where exact value, from a list of possibles, was expected.

Device Specific Errors

Overview An <error/event number> in the range [-399 , -300] or [1 , 32767] indicates that the instrument has detected an error which is not a command error, a query error, or an execution error; some device operations did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. The meaning of positive error codes is device-dependent and may be enumerated or bit mapped; the <error message>string for positive error codes is not defined by SCPI and available to the device designer.

Note that the string is not optional; if the designer does not wish to implement a string for a particular error, the null string should be sent (for example, 42,""). The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. Events that generate device-specific errors shall not generate command errors, execution errors,

or query errors; see the other error definitions in this section.

Error Code	Description
-310 System error	Indicates that some error, termed “system error” by the device, has occurred. This code is device-dependent.
-320 Storage fault	Indicates that the firmware detected a fault when using data storage. This error is not an indication of physical damage or failure of any mass storage element.

Query Errors

Overview

An <error/event number> in the range [-499 , -400] indicates that the output queue control of the instrument has detected a problem with the message exchange protocol described in IEEE 488.2, chapter 6. The occurrence of any error in this class shall cause the query error bit (bit 2) in the event status register (IEEE 488.2, section 11.5.1) to be set. These errors correspond to message exchange protocol errors described in IEEE 488.2, section 6.5. One of the following is true:

- An attempt is being made to read data from the output queue when no output is either present or pending;
- Data in the output queue has been lost.

Events that generate query errors shall not generate command errors, execution errors, or device-specific errors; see the other error definitions in this section.

Error Code	Description
-400 Query error	This is the generic query error for devices that cannot detect more specific errors. This code indicates only that a Query Error as defined in IEEE 488.2, 11.5.1.1.7 and 6.3 has occurred.

A PPENDIX

PSU Default Settings

The following default settings are the factory configuration settings for the power supply (Function settings/Test settings).

Initial Settings	Default Setting	
Output	Off	
LOCK	0 (Disabled)	
Voltage	0V	
Current	0A	
OVP	1.1 X Vrate	
OCP	1.1 X Irate	
Normal Function Settings	Setting	Default Setting
Output ON delay time	F-01	0.00s
Output OFF delay time	F-02	0.00s
V-I mode slew rate select	F-03	0 = CV high speed priority
Internal resistance setting	F-08	0.000Ω
Bleeder circuit control	F-09	1 = ON
Buzzer ON/OFF control	F-10	1 = ON
OCP Delay Time	F-12	0.1 (seconds)
Current Setting Limit	F-13	0 = OFF
Voltage Setting Limit	F-14	0 = OFF
Display Memory parameter when recalling	F-15	0 = OFF
Auto parallel Control	F-16	0 = OFF
Measurement Average Setting	F-17	0 = Low
Alarm Recovery and Output Status	F-18	0 = Safe Mode

Lock Mode	F-19	0:Lock Panel, Allow Output OFF
Setup Rear USB Speed	F-22	2 = Auto detect
GPIB address	F-23	8
GPIB Enable/Disable	F-24	1 = Enable
SCPI Emulation	F-26	0 = GW Instek
LAN setting		
LAN	F-36	1 = Enable
DHCP	F-37	1 = Enable
Power On Configuration		
Socket Server Enable/Disable	F-57	1 = Enable
Web Server Enable/Disable	F-59	1 = Enable
Web Password Enable/Disable	F-60	1 = Enable
UART Mode	F-70	1 = Enable
UART Baudrate	F-71	7 = 115200
UART Data Bits	F-72	1 = 8 bits
UART Parity	F-73	0 = None
UART Stop Bit	F-74	0 = 1 bit
UART Transmission Control Protocol	F-75	0 = SCPI
UART Address	F-76	31
CV Control	F-90	0= Panel control (local)
CC Control	F-91	0= Panel control (local)
Output Status when Power ON	F-92	0 = Safe Mode
Master/Slave	F-93	0 = Independent
External Out Logic	F-94	0= High ON
Monitor Voltage Select	F-96	0 = 5V
Control Range	F-97	0 = 5V[5kΩ]
External Output Control Function	F-98	0 = OFF

Error Messages & Messages

The following error messages or messages may appear on the PSU screen during operation.

Error Messages	Description
OHP	Master & slave board over temperature protection in PSU
OHP1	Master board over temperature protection in PSU
OHP2	Slave board over temperature protection in PSU
ALM SENS	Sense Alarm
HW OVP	Hardware over voltage protection
AC	AC fail
OVP	Over voltage protection
OCP	Over current protection
FAN FAIL	Fan failure
SHUT DOWN	Force shutdown
Err 001	USB mass storage is not present
Err 002	No (such) file in USB mass storage
Err 003	Empty memory location
Err 004	Slave PSU error status

Normal Messages	Description
MSG 001	External control of output. Output off (F-94=0, High=on)
MSG 002	External control of output. Output off (F-94=1, Low=on)

Communication Interface Messages	Description
USB ON	Rear USB port connected to PC
USB OFF	Rear USB port disconnected from PC
MS ON	Mass storage plugged into front USB port
MS OFF	Mass storage removed from front USB port

LED ASCII Table Character Set

Use the following table to read the LCD display messages.

0	1	2	3	4	5	6	7	8	9	A	B	C	D
0	1	2	3	4	5	6	7	8	9	A	b	C	d
E	F	G	H	I	J	K	L	M	N	O	P	Q	R
E	F	G	H	I	J	K	L	M	N	O	P	Q	R
S	T	U	V	W	X	Y	Z	()	+	-	,	
S	T	U	V	W	X	Y	Z	()	+	-	,	

INDEX

Accessories	11	Optional accessories	11
Caution symbol.....	4	Package contents.....	11
Cleaning the instrument.....	6	Power on/off	
Configuration		safety instruction	5
normal function settings		Rear panel diagram	18
operation.....	21	Remote control.....	30
power on configuration operation	23	Command list.....	58
table	25	Command syntax	55
Default settings.....	124	Error list	115
Display diagram	16	Ethernet configuration.....	46
Display format	127	Ethernet function check.....	47
Disposal instructions.....	6	GPIB configuration.....	33
EN61010		GPIB function check.....	34
measurement category	5	interface configuration	31
pollution degree.....	6	local bus configuration.....	42
Environment		multi-unit configuration.....	42
safety instruction	6	multi-unit function check.....	44
Error messages.....	126	sockets configuration.....	49
Ethernet		sockets function check	50
interface.....	46	Status registers	104
sockets	49	UART configuration	38
web server.....	46	UART function check.....	41
Front panel diagram	13	USB configuration.....	31
Ground		USB function check	32
symbol	4	Service operation	
LED conversion	127	about disassembly	5
List of features	10	Socket server function check	50
Messages.....	126	UK power cord.....	7
Model differences.....	9	Warning symbol	4
		Web server function check	47