

Arbitrary Function Generator

AFG-2000 Series

QUICK START GUIDE

GW INSTEK PART NO. 82AF-21200MC1



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will Corporation.

The information in this manual was correct at the time of printing. However, Good Will continues to improve its products and therefore reserves the right to change the specifications, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Table of Contents

| | |
|--------------------------------------|----|
| S AFETY INSTRUCTIONS..... | 2 |
| G ETTING STARTED | 6 |
| Main Features | 6 |
| Panel Overview..... | 8 |
| Selecting a Waveform | 14 |
| ARB..... | 15 |
| Modulation..... | 15 |
| Sweep (2100 series only) | 17 |
| Counter (2100 series only) | 17 |
| Save/Recall..... | 18 |
| AFG-2000 Series Specifications | 19 |
| EC Declaration of Conformity | 23 |

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that should be followed when operating and storing the function generator. Read the following before any operation to ensure your safety and to keep the function generator in the best condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.



Warning: Identifies conditions or practices that could result in injury or loss of life.



Caution: Identifies conditions or practices that could result in damage to the function generator or to other objects or property.



DANGER High Voltage



Attention: Refer to the Manual



Protective Conductor Terminal



Earth (Ground) Terminal



DANGER Hot Surface



Double Insulated



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



CAUTION

- Do not place heavy objects on the instrument.
- Do not place flammable objects on the instrument.
- Avoid severe impact or rough handling that may damage the function generator.
- Avoid discharges of static electricity on or near the function generator.
- Use only mating connectors, not bare wires, for the terminals.
- The instrument should only be disassembled by a qualified technician.

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The instrument falls under category II.

- Measurement category IV is for measurement performed at the source of a low-voltage installation.
- Measurement category III is for measurement performed in a building installation.
- Measurement category II is for measurement performed on circuits directly connected to a low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage: 100 ~ 240V AC, 50 ~ 60Hz.
 - Connect the protective grounding conductor of the AC power cord to an earth ground to prevent electric shock.
-

Fuse



WARNING

- Fuse type: F1A/250V.
- Only qualified technicians should replace the fuse.
- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord and all test leads before replacing the fuse.
- Make sure the cause of fuse blowout is fixed before replacing the fuse.

Cleaning the function generator

- Disconnect the power cord before cleaning the function generator.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into the function generator.
- Do not use chemicals containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below) and avoid strong magnetic fields.
- Relative Humidity: < 80%
- Altitude: < 2000m
- Temperature: 0°C to 40°C

(Pollution Degree) EN 61010-1:2010 specifies pollution degrees and their requirements as follows. The function generator falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight,

precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Relative Humidity: < 70%
- Temperature: -10°C to 70°C

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the function generator in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons



WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

| | |
|----------------|--------------|
| Green/ Yellow: | Earth |
| Blue: | Neutral |
| Brown: | Live (Phase) |



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol (⊕) or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

The Getting started chapter introduces the function generator’s main features, appearance and introduces a quick instructional summary of some of the basic functions. For comprehensive operation instructions, please see the user manual.

Main Features

| Model name | AFG-2005 | AFG-2105 | AFG-2012 | AFG-2112 | AFG-2025 | AFG-2125 |
|-------------------|---|----------|-------------|----------|-------------|----------|
| Frequency Range | 0.1Hz~5MHz | | 0.1Hz~12MHz | | 0.1Hz~25MHz | |
| Output waveform | Sine, Square, Ramp, Noise, ARB | | | | | |
| Amplitude range | 0.1Hz~20MHz | | | | | |
| | 1 mVpp to 10 Vpp(into 50Ω) 2 mVpp to 20 Vpp(open-circuit) | | | | | |
| | 20MHz~25MHz | | | | | |
| | 1 mVpp to 5 Vpp(into 50Ω) 2 mVpp to 10 Vpp(open-circuit) | | | | | |
| Variable Offset | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Variable Duty | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| SYNC (TTL) output | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Save/Recall | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Sweep operation | — | ✓ | — | ✓ | — | ✓ |
| AM | — | ✓ | — | ✓ | — | ✓ |
| FM | — | ✓ | — | ✓ | — | ✓ |
| FSK | — | ✓ | — | ✓ | — | ✓ |
| Frequency Counter | — | ✓ | — | ✓ | — | ✓ |

| | | | | | | |
|---------------|---|---|---|---|---|---|
| ARB | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| USB Interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |


- Performance
- DDS technology using an FPGA provides high resolution waveforms
 - 25MHz DDS (Direct Digital Synthesis) signal output series
 - 0.1Hz resolution
 - Full Function Arbitrary Waveform Capability
 - 20 MSa/s sample rate
 - 10 MHz repetition rate
 - 4 k-point waveform length
 - 10-bit amplitude resolution
 - Ten 4k waveform memories
-

- Features
- Sine, Square, Ramp, Noise
 - Int/Ext AM, FM, FSK modulation
 - Modulation/sweep signal output
 - Save/recall 10 groups of setting memories
 - Output overload protection
 - ARB (Arbitrary Waveform) can be edited with PC software
-


- Interface
- USB interface as standard
 - 3.5 inch LCD



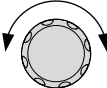

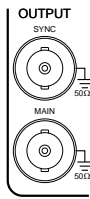



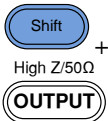
Panel Overview

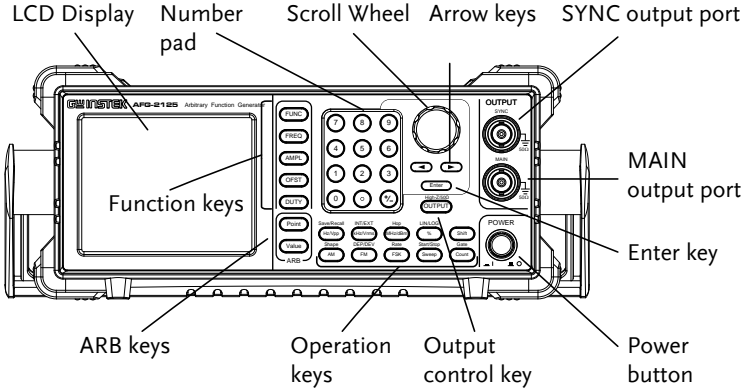




















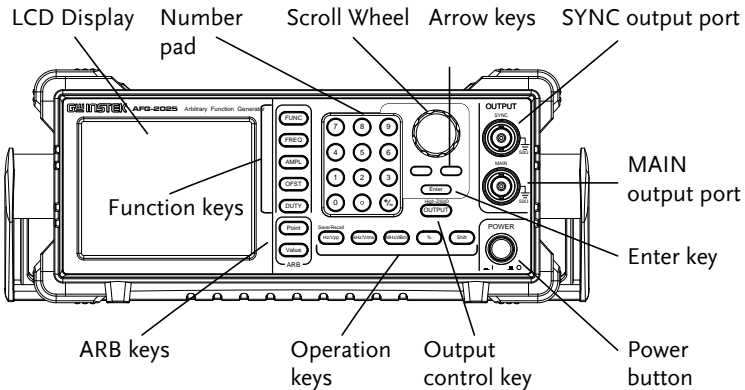
AFG-2105/2112/2125 Front Panel


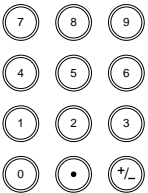

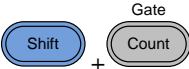


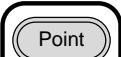





AFG-2005/2012/2025 Front Panel




| | |
|--------------------|--|
| LCD display | 3.5 inch, 3 color LCD display. |
| Keypad |  <p>The digital keypad is used to enter values and parameters. The keypad is often used in conjunction with the selection keys and variable knob.</p> |
| Scroll Wheel |  <p>The scroll wheel is used to edit values and parameters in steps of 1 digit. Used in conjunction with the arrow keys.</p> <div style="text-align: center;">  <p>Decrease Increase</p> </div> |
| Arrow keys |  <p>Used to select digits when editing parameters.</p> |
| Output ports |  <p>SYNC output port (50Ω impedance). Main output port (50Ω impedance).</p> |
| Enter key |  <p>Used to confirm input values.</p> |
| Power button |  <p>Turns the instrument power on/off.</p> |
| Output control key |  <p>Turns the output on/off.</p> |
| Output Impedance |  <p>Toggles the output impedance between 50Ω and High-Z.</p> |
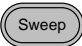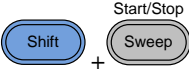
| | | |
|----------------|---|--|
| Operation keys |  | Selects Hz or Vpp units. |
| |  +  | Saves or recalls waveforms from memory. |
| |  | Selects kHz or Vrms units. |
| |  +  | Sets the source to internal or external for the modulation and FSK functions*. |
| |  | Selects MHz or dBm units. |
| |  +  | Sets the "Hop" frequency for FSK modulation*. |
| |  | Selects % units. |
| |  +  | Sets the sweep to linear or logarithmic*. |
| |  | The shift key is used to select the secondary functions on the operation keys. |
| |  | The AM key is used to turn AM modulation on/off*. |
| |  +  | Selects the modulation waveform*. |
| |  | The FM key is used to turn FM modulation on/off*. |
| |  +  | Selects the modulation depth or the frequency deviation*. |
| |  | Selects FSK modulation*. |
| |  +  | Sets the AM, FM, FSK modulation and sweep function (Rate)* |


| | | |
|---------------|---|--|
| |  | Selects the Sweep function*. |
| |  | Sets the Start or Stop frequency*. |
| |  | Turns the frequency counter on/off*. |
| |  | Sets the frequency counter gate time*. |
| ARB edit keys |  | Arbitrary waveform editing keys. The point key sets the ARB point numbers. The Value key sets the amplitude value of the selected point. |
| Function keys |  | The FUNC key is used to select the output waveform type, Sine, Square, Ramp, Noise, ARB. |
| |  | Sets the frequency of the selected waveform. |
| |  | Sets the amplitude of the selected waveform. |
| |  | The OFST sets the DC offset for the selected waveform. |
| |  | The DUTY key sets the duty cycle of square and ramp waveforms. |

*indicates functions/features for the AFG-2105/2112/2125 only.

AFG-2105/2112/2125 Rear Panel

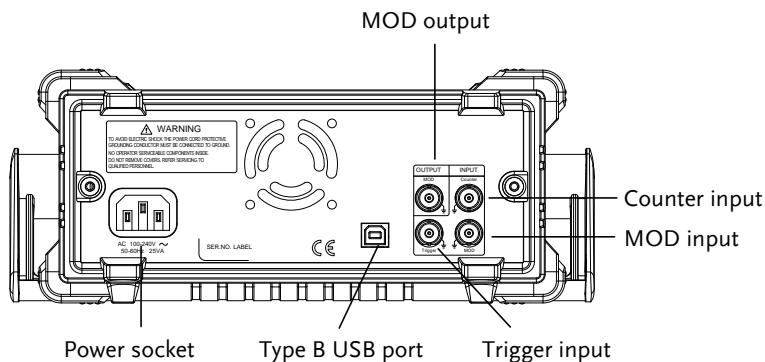


AFG-2005/2012/2025 Rear Panel

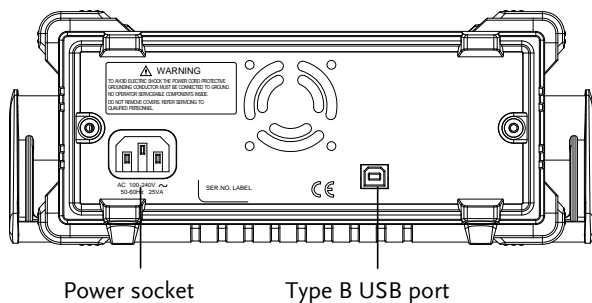

| | | |
|--------------------|--|---|
| MOD output | | Modulation output port. |
| Counter input | | Counter input port. |
| MOD input | | Modulation input port. |
| Trigger input | | Trigger input port. |
| Type B USB port | | The type B USB port is used to connect the function generator to a PC for remote control. |
| Power Socket Input | | Power input: 100~240V AC 50~60Hz. |

Display

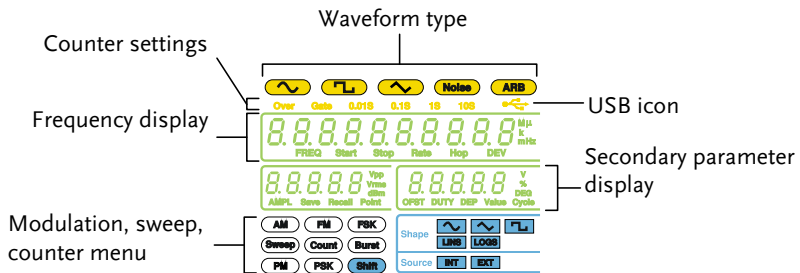

Waveform type    **Noise** **ARB**

Press the function key to cycle through different output waveforms.

Counter settings **Over** **Gate** **0.01S** **0.1S** **1S** **10S**

Gate time counter settings*.

USB icon  Shows the USB interface status.

Frequency Display 

Displays the main waveform frequency settings.

Secondary parameter display 

Displays secondary waveform parameters and settings.

Modulation, sweep, counter menu 

Displays the modulation, sweep and counter functions as well as the modulating waveform and source*.


*indicates functions/features for the AFG-2105/2112/2125 only.

Selecting a Waveform

Sine Wave

Example: Sine Wave, 10kHz, 1Vpp, 2Vdc

Output

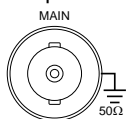


1. Press **FUNC**>select the sine wave
2. Press **FREQ**>1>0>kHz
3. Press **AMPL**>1>Vpp
4. Press **OFST**>2>Vpp
5. Press **OUTPUT**

Square Wave

Example: Square Wave, 10kHz, 3Vpp, 75% duty cycle

Output

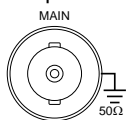


1. Press **FUNC**>select the square wave
2. Press **FREQ**>1>0>kHz
3. Press **AMPL**>3>Vpp
4. Press **DUTY**>7>5>%
5. Press **OUTPUT**

Ramp Wave

Example: Ramp Wave, 10kHz, 3Vpp, 25% symmetry

Output

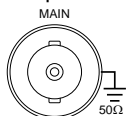


1. Press **FUNC**>select the ramp wave
2. Press **FREQ**>1>0>kHz
3. Press **AMPL**>3>Vpp
4. Press **DUTY**>2>5>%
5. Press **OUTPUT**

ARB

ARB – Enter Points

Example: ARB Ramp, 10 kHz, 1Vpp, 2 points.

Output

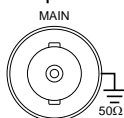


1. Press **FUNC**>select the ARB wave
2. Press **FREQ**>1>0>kHz
3. Press **AMPL**>1>Vpp
4. Press **Point**>0>Enter
5. Press **Value**>5>1>1>Enter. (+511 amplitude)
6. Press **Point**>1>Enter
7. Press **Value**>+/->5>1>1>Enter. (-511 amplitude)
8. Press **OUTPUT**

Modulation

AM (2100 series only)

Example: AM modulation. 100Hz modulating square wave. 1 Vpp, 1kHz Sine wave carrier. 70% modulation depth. Internal source signal.

Output

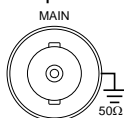


1. Press **FUNC**>select the sine wave
2. Press **FREQ**>1>kHz
3. Press **AMPL**>1>Vpp
4. Press **AM**
5. Press **Shift**>INT/EXT>select INT source
6. Press **Shift**>Shape>select the square wave
7. Press **Shift**>Rate>1>0>0>Hz
8. Press **Shift**>DEP/DEV>7>0>%
9. Press **Output**
10. Press **AM** to deselect the AM function

FM (2100 series only)

Example: FM modulation. 100Hz modulating square wave. 1Vpp, 1kHz Sine wave carrier. 100 Hz frequency deviation. Internal Source.

Output

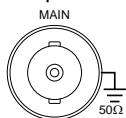


1. Press **FUNC**>select the sine wave
2. Press **FREQ**>1>kHz
3. Press **AMPL**>1>Vpp
4. Press **FM**
5. Press **Shift**>INT/EXT>select INT
6. Press **Shift**>Shape>select square
7. Press **Shift**>Rate>1>0>0>Hz
8. Press **Shift**>DEP/DEV>1>0>0>Hz
9. Press **Output**
10. Press **FM** to deselect the FM function

FSK Modulation (2100 series only)

Example: FSK modulation. 100Hz Hop frequency. 1Vpp, 1kHz Ramp carrier wave. 10 Hz Rate (modulation frequency). Internal Source.

Output

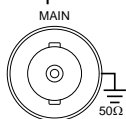


1. Press **FUNC**>select the ramp wave
2. Press **FREQ**>1>kHz
3. Press **AMPL**>1>Vpp
4. Press **FSK**
5. Press **Shift**>INT/EXT>Select INT
6. Press **Shift**>Rate>1>0>Hz
7. Press **Shift**>HOP>1>0>0>Hz
8. Press **Output**
9. Press **FSK** to deselect the FSK function

Sweep (2100 series only)

Example: Frequency Sweep. Start Frequency 1Hz, Stop Frequency 1MHz. 1Hz Rate. 1Vpp. Lins Sweep.

Output




1. Press **FUNC**>select the ramp wave
2. Press **AMPL**>1>Vpp
3. Press **Sweep**
4. Press **Shift**>INT/EXT>select INT
5. Press **Shift**>Start/Stop>select Start>1>Hz
6. Press **Shift**>Start/Stop>select Stop>1>MHz
7. Press **Shift**>Rate>1>Hz
8. Press **Shift**>LIN/LOG>Select LINS
9. Press **Output**
10. Press **Sweep** to deselect the sweep function

Counter (2100 series only)

Example: Frequency counter function, gate time 1s.

Input

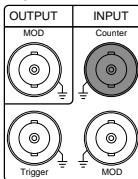

1. Press **Count**
2. Press **Shift**>Gate>select 1S gate time
3. Connect the signal to the counter input terminal.
4. Press **Count** to deselect the counter function.

Save/Recall

Save

Example: Save waveform to memory.

1. Press **Shift>Save/Recall>Select Save**
2. Turn the **Scroll knob>select a file number>Enter**

Recall

Example: Recall waveform from memory.

1. Press **Shift>Save/Recall>Select Recall**
2. Turn the **Scroll knob>select a file number>Enter**

AFG-2000 Series Specifications

The specifications apply when the function generator is powered on for at least 30 minutes under +20°C~+30°C.

| AFG-2000 models | | 2005 | 2012 | 2025 | 2105 | 2112 | 2125 |
|---------------------------|----------------------|--|-------------|-------------|------------|-------------|-------------|
| Waveforms | | Sine, Square, Ramp, Noise, ARB | | | | | |
| Arbitrary Functions | | | | | | | |
| | Sample Rate | 20 MSa/s | | | | | |
| | Repetition Rate | 10MHz | | | | | |
| | Waveform Length | 4k points | | | | | |
| | Amplitude Resolution | 10 bits | | | | | |
| | Non-Volatile Memory | 4k points | | | | | |
| Frequency Characteristics | | | | | | | |
| Range | Sine | 0.1Hz~5MHz | 0.1Hz~12MHz | 0.1Hz~25MHz | 0.1Hz~5MHz | 0.1Hz~12MHz | 0.1Hz~25MHz |
| | Square | 0.1Hz~5MHz | 0.1Hz~12MHz | 0.1Hz~25MHz | 0.1Hz~5MHz | 0.1Hz~12MHz | 0.1Hz~25MHz |
| | Triangle, Ramp | 1MHz | | | | | |
| Resolution | | 0.1Hz | | | | | |
| Accuracy | Stability | ±20 ppm | | | | | |
| | Aging | ±1 ppm, per 1 year | | | | | |
| | Tolerance | ≤ 1 mHz | | | | | |
| Output Characteristics | | | | | | | |
| Amplitude | Range | 1 mVpp to 10 Vpp(into 50Ω) | | | | | |
| | | 2 mVpp to 20 Vpp(open-circuit) | | | | | |
| | | 1 mVpp to 5 Vpp(into 50Ω) for 20MHz-25MHz | | | | | |
| | | 2 mVpp to 10 Vpp(open-circuit) for 20MHz-25MHz | | | | | |
| | Accuracy | ± 2% of setting ±1 mVpp (at 1 kHz) | | | | | |
| | Resolution | 1 mV or 3 digits | | | | | |
| | Flatness | ± 1% (0.1dB) ≤100kHz | | | | | |
| | | ± 3% (0.3 dB) ≤5MHz | | | | | |
| | | ± 5% (0.4 dB) ≤12MHz | | | | | |
| | | ±20%(2dB)≤20MHz | | | | | |
| | | ± 5% (0.4 dB) ≤25MHz | | | | | |
| | | (sine wave relative to 1 kHz) | | | | | |
| | Units | Vpp, Vrms, dBm | | | | | |

| | | |
|------------------------------------|---|---|
| Offset | Range | ±5 Vpk ac +dc (into 50Ω) ±10Vpk ac +dc (Open circuit) ±2.5 Vpk ac +dc (into 50Ω) for 20MHz-25MHz ±5Vpk ac +dc (Open circuit) for 20MHz-25MHz |
| | Accuracy | 2% of setting + 5 mV+ 0.5% of amplitude |
| Waveform Output | Impedance | 50Ω typical (fixed) > 300kΩ (output disabled) |
| | Attenuator | — |
| SYNC Output | Protection | Short-circuit protected Overload relay automatically disables main output |
| | Level | TTL-compatible into>1kΩ |
| | Impedance | 50Ω nominal |
| | Fan Out | — |
| | Rise of Fall Time | ≤ 25ns |
| Sine wave Characteristics | | |
| Harmonic distortion(5) | -55 dBc | DC ~ 200kHz, Ampl > 0.1Vpp |
| | -50 dBc | 200kHz ~ 1MHz, Ampl > 0.1Vpp |
| | -35 dBc | 1MHz ~ 5MHz, Ampl > 0.1Vpp |
| | -30 dBc | 5MHz ~ 25MHz, Ampl > 0.1Vpp |
| Square wave Characteristics | | |
| Rise/Fall Time | ≤25ns at maximum output. (into 50 Ω load) | |
| Overshoot | <5% | |
| Asymmetry | 1% of period +1 ns | |
| Variable duty Cycle | 1.0% to 99.0% ≤100kHz 20.0% to 80.0% ≤ 5MHz 40.0% to 60.0% ≤ 10MHz 50% ≤ 25MHz | |
| Ramp Characteristics | | |
| Linearity | < 0.1% of peak output | |
| Variable Symmetry | 0% to 100% (0.1% Resolution) | |

| AM Modulation | | | |
|----------------------|---|--|--|
| Carrier Waveforms | — | | Sine, Square, Triangle |
| Modulating Waveforms | — | | Sine, Square, Triangle |
| Modulating Frequency | — | | 2mHz to 20kHz (Int) DC to 20kHz (Ext) |
| Depth | — | | 0% to 120.0% |
| Source | — | | Internal / External |
| FM Modulation | | | |
| Carrier Waveforms | — | | Sine, Square, Triangle |
| Modulating Waveforms | — | | Sine, Square, Triangle |
| Modulating Frequency | — | | 2mHz to 20kHz (Int) DC to 20kHz (Ext) |
| Peak Deviation | — | | DC to Max Frequency |
| Source | — | | Internal / External |
| Sweep | | | |
| Waveforms | — | | Sine, Square, Triangle |
| Type | — | | Linear or Logarithmic |
| Start/Stop Freq | — | | 0.1Hz to Max Frequency |
| Sweep Time | — | | 1ms to 500s |
| Source | — | | Internal / External |
| FSK | | | |
| Carrier Waveforms | — | | Sine, Square, Triangle |
| Modulating Waveforms | — | | 50% duty cycle square |
| Modulation Rate | — | | 2mHz to 100kHz (INT) DC to 100kHz (Ext) |
| Frequency Range | — | | 0.1Hz to Max Frequency |
| Source | — | | Internal / External |

| | |
|-------------------------------|--|
| Frequency Counter | |
| Range | — 5Hz to 150MHz |
| Accuracy | — Time Base accuracy±1 count |
| Time Base | — ±20ppm (23°C ±5°C) after 30 minutes warm up |
| Resolution | — The maximum resolution is: 100nHz for 1Hz, 0.1Hz for 100MHz. |
| Input Impedance | — 1kΩ/1pf |
| Sensitivity | — 35mVrms ~ 30Vms (5Hz to 150MHz) |
| Save/Recall | 10 Groups of Setting Memories (Locations 0~9 only for instrument state, Locations 10~19 only for ARB data) |
| Interface | USB (Device) |
| Display | LCD |
| General Specifications | |
| Power Source | AC100~240V, 50~60Hz |
| Power Consumption | 25 VA (Max) |
| Operating Environment | Temperature to satisfy the specification : 18 ~ 28°C Operating temperature : 0 ~ 40°C Relative Humidity: ≤ 80%, 0 ~ 40°C ≤ 70%, 35 ~ 40°C Installation category : CAT II |
| Operating Altitude | 2000 Meters |
| Storage Temperature | -10~70°C, Humidity: ≤70% |
| Dimensions (WxHxD) | 266(W) x 107(H) x 293(D) mm |
| Weight | Approx. 2.5kg |
| Accessories | GTL-101× 1 GTL-101× 2 Quick Start Guide ×1 CD (user manual + software) ×1 Power cord×1 |

EC Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

No.7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan

GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.

No. 69, Lushan Road, Suzhou New District Jiangsu, China

declares that the below mentioned product

AFG-2005, AFG-2105, AFG-2012, AFG-2112, AFG-2025, AFG-2125

Are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2004/108/EC) and Low Voltage Equipment Directive (2006/95/EC). For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Equipment Directive, the following standards were applied:

© EMC

| EN 61326-1 : | Electrical equipment for measurement, control and laboratory use — EMC requirements (2006) | |
|--|--|--|
| Conducted and Radiated Emissions EN 55011: 2009+A1:2010 | Electrostatic Discharge EN 61000-4-2: 2008 | |
| Current Harmonic EN 61000-3-2: 2006+A2:2009 | Radiated Immunity EN 61000-4-3: 2006+ A2:2010 | |
| Voltage Fluctuation EN 61000-3-3: 2008 | Electrical Fast Transients EN 61000-4-4: 2004+A1:2010 | |
| ----- | Surge Immunity EN 61000-4-5: 2005 | |
| ----- | Conducted Susceptibility EN 61000-4-6: 2008 | |
| ----- | Power Frequency Magnetic Field EN 61000-4-8: 2009 | |
| ----- | Voltage Dips/ Interrupts EN 61000-4-11: 2004 | |

© Safety

| Low Voltage Equipment Directive 2006/95/EC |
|--|
| Safety Requirements EN 61010-1: 2010 |