

Anleitung | Manual | Mode d'emploi | Handleiding

Schaltverstärker SV-2

Art. 72-0065 | 72-0066



Schaltverstärker für Weichen
mit Doppelspulenantrieb

Switching amplifier for points
with double solenoids

Module de puissance pour des aiguillages
à double solénoïde

Schakelversterker voor wissels
met dubbelspoel

tams elektronik



© 12/2011 Tams Elektronik GmbH

Alle Rechte, insbesondere das Recht der Vervielfältigung und Verbreitung sowie der Übersetzung vorbehalten. Vervielfältigungen und Reproduktionen in jeglicher Form bedürfen der schriftlichen Genehmigung durch die Tams Elektronik GmbH.

Technische Änderungen vorbehalten.

All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, without prior permission in writing from Tams Elektronik GmbH.

Subject to technical modification.

Tout droits réservés, en particulier les droits de reproduction et de diffusion ainsi que le traduction. Toute duplication ou reproduction sous quelque forme que ce soit nécessite l'accord écrit de la société Tams Elektronik GmbH.

Sous réserve de modifications techniques.

Alle rechten voorbehouden. Niets uit deze publicatie mag worden vermenig-vuldigd opgeslagen of openbaar gemaakt, zonder voorafgaande schriftelijke toestemming van Tams Elektronik GmbH.

Technische wijzigingen voorbehouden.



Deutsch	3
English	19
Français	35
Nederlands	51

Table of contents

1. Getting started	20
2. Safety instructions.....	21
3. Safe and correct soldering.....	24
4. Operation overview.....	25
5. Technical specifications.....	26
6. Assembling the kit	27
7. Connecting the SV-2	30
8. Check list for troubleshooting.....	32
9. Guarantee bond.....	33
10. EU declaration of conformity.....	34
11. Declarations conforming to RoHs and WEEE directives	34
Parts list.....	I
Printed Circuit Board (PCB) layout (Fig. 1).....	I
Connections diagram 1 (Fig. 2).....	II
Connections diagram 2 (Fig. 3).....	III
Circuit Diagram (Fig. 4).....	IV

Pages I to IV in the centre of this handbook are removable.

1. Getting started

How to use this manual

This manual gives step-by-step instructions for safe and correct assembly of the kit and fitting and connecting of the ready-built module, and operation. Before you start, we advise you to read the whole manual, particularly the chapter on safety instructions and the Checklist for trouble shooting. You will then know where to take care and how to prevent mistakes which take a lot of effort to correct.

Keep this manual safely so that you can solve problems in the future. If you pass the kit or the ready-built module on to another person, please pass on the manual with it.

Intended use

The SV-2 is designed to be operated according to the instructions in this manual with model railways. Any other use is inappropriate and invalidates any guarantees.

The SV-2 should not be assembled or mounted by children under the age of 14.

Reading, understanding and following the instructions in this manual are mandatory for the user.

Checking the package contents

Please make sure that your package contains:

- one kit, containing the components listed in the parts list and one PCB or
- one ready-built module,
- one manual.

Required materials

For assembling the kit you need:

- an electronic soldering iron (max. 30 Watt) or a or a regulated soldering iron with a fine tip and a soldering iron stand,
- a tip-cleaning sponge,
- a heat-resistant mat,
- a small side cutter and wire stripper,
- as necessary a pair of tweezers and long nose pliers,
- electronic tin solder (0,5 mm. diameter).

For testing the module you need points.

In order to connect the module you need wire. Recommended diameter: $\geq 0,5 \text{ mm}^2$ for all connections.

2. Safety instructions

Mechanical hazards

Cut wires can have sharp ends and can cause serious injuries. Watch out for sharp edges when you pick up the PCB.

Visibly damaged parts can cause unpredictable danger. Do not use damaged parts: recycle and replace them with new ones.

Electrical hazards

- Touching powered, live components,
 - touching conducting components which are live due to malfunction,
 - short circuits and connecting the circuit to another voltage than specified,
 - impermissibly high humidity and condensation build up
- can cause serious injury due to electrical shock. Take the following precautions to prevent this danger:
- Never perform wiring on a powered module.

- Assembling and mounting the kit should only be done in closed, clean, dry rooms. Beware of humidity.
- Only use low power for this module as described in this manual and only use certified transformers.
- Connect transformers and soldering irons only in approved mains sockets installed by an authorised electrician.
- Observe cable diameter requirements.
- After condensation build up, allow a minimum of 2 hours for dispersion.
- Use only original spare parts if you have to repair the kit or the ready-built module.

Fire risk

Touching flammable material with a hot soldering iron can cause fire, which can result in injury or death through burns or suffocation. Connect your soldering iron or soldering station only when actually needed. Always keep the soldering iron away from inflammable materials. Use a suitable soldering iron stand. Never leave a hot soldering iron or station unattended.

Thermal danger

A hot soldering iron or liquid solder accidentally touching your skin can cause skin burns. As a precaution:

- use a heat-resistant mat during soldering,
- always put the hot soldering iron in the soldering iron stand,
- point the soldering iron tip carefully when soldering, and
- remove liquid solder with a thick wet rag or wet sponge from the soldering tip.

Dangerous environments

A working area that is too small or cramped is unsuitable and can cause accidents, fires and injury. Prevent this by working in a clean, dry room with enough freedom of movement.

Other dangers

Children can cause any of the accidents mentioned above because they are inattentive and not responsible enough. Children under the age of 14 should not be allowed to work with this kit or the ready-built module.

**Caution:**

Little children can swallow small components with sharp edges, with fatal results! Do not allow components to reach small children.

In schools, training centres, clubs and workshops, assembly must be supervised by qualified personnel.

In industrial institutions, health and safety regulations applying to electronic work must be adhered to.

3. Safe and correct soldering

**Caution:**

Incorrect soldering can cause dangers through fires and heat. Avoid these dangers by reading and following the directions given in the chapter **Safety instructions**.

- Use a small soldering iron with max. 30 Watt or a regulated soldering iron.
- Only use electronic tin solder with flux.
- When soldering electronic circuits never use soldering-water or soldering grease. They contain acids that can corrode components and copper tracks.
- Insert the component connecting pins into the PCB's holes as far as possible without force. The components should be close to the PCB's surface.
- Observe correct polarity orientation of the parts before soldering.
- Solder quickly: holding the iron on the joints longer than necessary can destroy components and can damage copper tracks or soldering eyes.
- Apply the soldering tip to the soldering spot in such a way that the part and the soldering eye are heated at the same time. Simultaneously add solder (not too much). As soon as the solder becomes liquid take it away. Hold the soldering tip at the spot for a few seconds so that the solder flows into the joint, then remove the soldering iron.
- Do not move the component for about 5 seconds after soldering.
- To make a good soldering joint you must use a clean and unoxidised soldering tip. Clean the soldering tip with a damp piece of cloth, a damp sponge or a piece of silicon cloth.
- Cut the wires after soldering directly above the soldering joint with a side cutter.

- After placing the parts, please double check for correct polarity. Check the PCB tracks for solder bridges and short circuits created by accident. This would cause faulty operation or, in the worst case, damage. You can remove excess solder by putting a clean soldering tip on the spot. The solder will become liquid again and flow from the soldering spot to the soldering tip.

4. Operation overview

The switching amplifier provides the energy to switch points with double solenoids. Applications:

- Switching stiff points. It is possible to switch stiff points independent of the power of the transformer.
- Simultaneously switching several points. Each of them has to be connected to a switching amplifier of its own and then all points can be switched simultaneously via one impulse.

The switching amplifier works, drastically simplified, like a flash gun. The electric charge which is necessary to switch points is stored in an electrolytic capacitor.

The switching operation is activated via a transistor, by connecting one of the inputs shortly with earth. To make the earth contact, a push button, a control panel, a circuit track or similar can be used. Turnout decoders are not suitable to activate the switching operation.

5. Technical specifications

Supply voltage	16 – 22 Volt a.c. or d.c. voltage
Current consumption (without connected devices) max.	100 mA
Max. current per output	1.000 mA
Protected to	IP 00
Ambient temperature in use	0 ... +60 °C
Ambient temperature in storage	-10 ... +80 °C
Comparative humidity allowed	max. 85 %
Dimensions of the PCB (approx.)	31 x 27 mm
Weight of the circuit (approx.)	10,5 gg

6. Assembling the kit


You can skip this part if you have purchased a ready-built module or device.

Preparation

Put the sorted components in front of you on your workbench.

The separate electronic components have the following special features you should take into account in assembling:


Resistors



Resistors reduce current. Their mounting orientation is of no importance. The value of resistors for smaller power ratings (beneath 0,5 W) is indicated through colour rings. Every colour stands for another figure. The colour ring in brackets indicates the tolerance of the resistor which here is of no importance.

Value:	Colour ring:
120 Ω	brown - red - brown (gold)
1 k Ω	brown - black - red (gold)


Diodes



Diodes allow the current to pass through in one direction only (forward direction), simultaneously the voltage is reduced by 0,3 to 0,8 V. Exceeding of the limit voltage always will destroy the diode, and allow current to flow in the reverse direction.

The diode type is printed on the body. Diodes must be mounted in a given direction. The negative end is marked with a ring. This is shown in the PCB layout.

Electrolytic capacitors




Electrolytic capacitors are often used to store energy. In contrast to ceramic capacitors they are polarized. One of the two leads is marked with a minus sign which indicates the mounting orientation. The value is given on the casing.

Electrolytic capacitors are available with different voltage sustaining capabilities. Using an electrolytic capacitor with a voltage sustaining capability higher than required is always possible.

Transistors

Transistors are current amplifiers which convert low signals into stronger ones. They have three contacts. As they are polarized, they have to be mounted in a certain direction.



The BD-types have a flat housing (TO-housing) with the type designation printed on the front side. The metallic rear is unlabelled, on the PCB layout the rear is marked by a thick line.

PCB sockets

The widely spread 2,6 mm model railway connectors fit exactly to the sockets. These are used for the connection to the voltage supply and to connected modules or components.

Assembly



Caution:

Diodes, electrolytic capacitors and transistors should be inserted in the right direction! If you solder them the wrong way around the affected parts can be damaged when you connect the power. In the worst case the whole circuit can be damaged. At the best, a wrongly connected part will not function.

Start the assembly with the resistors and the diodes. First solder the components on the solder side of the PCB and then cut the excess wires with the side cutter.

Proceed with the PCB sockets.

Continue the assembly with the transistors and the electrolytic capacitor.

Performing a visual check

Perform a visual check after the assembly of the module and remove faults if necessary:

- Remove all loose parts, wire ends or drops of solder from the PCB. Remove all sharp wire ends.
- Check that solder contacts which are close to each other are not unintentionally connected to each other. Risk of short circuit!
- Check that all components are polarised correctly.

When you have remedied all faults, go on to the next part.

7. Connecting the SV-2

Do not mount the switching amplifier in your model railroad layout yet. Perform a functional test with the test points. It is recommended to perform the functional test even if you have purchased a ready-built module.

Connecting the switching amplifier

Connect the switching amplifier according to the connections diagram 1 (fig. 2) and the following list.

W1	Coil 1 of the points	
W2	Common connection of the coils	
W3	Coil 2 of the points	
GND	With connection to a.c. voltage: polarity of the connections not relevant	With connection to d.c. voltage: "- " of the power supply
VCC	With connection to a.c. voltage: polarity of the connections not relevant	With connection to d.c. voltage: "+ " of the power supply
S1, S2	Push button, control panel, circuit track or similar	



Caution: No further loads should be connected to the switching amplifier. For that reason you must disconnect the lighting in the points and supply it separately, if necessary. If not the switching amplifier will be destroyed when put into operation.

Testing the switching amplifier

Connect temporarily the sockets "GND" and "S1" with one another. The points should switch now. If the points do not switch they are possibly in the corresponding position. Switch the points by hand in the other position and try to switch the points again. Then connect "GND" to "S2". The points should switch again. Please note: You have to wait for a moment (approx. 2 sec.) between the two switching operations in order to get the capacitor reloaded.



Caution: If a component gets too hot, disconnect the module and power supply from the mains immediately. Possible short circuit! Check the assembly.

After a successful function test, disconnect the switching amplifier from the power supply. Mount the module as desired in your model railroad layout.

Simultaneous switching of several points

You can switch several points simultaneously if each is connected to its' own switching amplifier. Switch the switching amplifiers' inputs commonly via a push button, control panel, circuit track or similar.

Follow the connections diagram 2 (Fig. 3)!

8. Check list for troubleshooting

- Parts are getting too hot and/or start to smoke.



Disconnect the system from the mains immediately!

Possible cause: one or more components are soldered incorrectly.

→ In case you have mounted the module from a kit, perform a visual check (→ section 6.) and if necessary, remedy the faults. Otherwise send in the module for repair.

- The points connected for the test cannot be switched.

Possible cause: The power supply is not connected correctly.

→ Check the connections.

Possible cause: The connected points are faulty. → Check the points.

Hotline: If problems with your module occur, our hotline is pleased to help you (mail address on the cover page).

Repairs: You can send in a defective module for repair (address on the cover page). In case of guarantee the repair is free of charge for you. With damages not covered by guarantee, the maximum fee for the repair is the difference between the price for the ready-built module and the kit according to our valid price list. We reserve the right to reject the repairing of a module when the repair is impossible for technical or economic reasons.

Please do not send in modules for repair charged to us. In case of warranty we will reimburse the forwarding expenses up to the flat rate we charge according to our valid price list for the delivery of the product. With repairs not covered by guarantee you have to bear the expenses for sending back and forth.

9. Guarantee bond

For this product we issue voluntarily a guarantee of 2 years from the date of purchase by the first customer, but in maximum 3 years after the end of series production. The first customer is the consumer first purchasing the product from us, a dealer or another natural or juristic person reselling or mounting the product on the basis of self-employment. The guarantee exists supplementary to the legal warranty of merchantability due to the consumer by the seller.

The warranty includes the free correction of faults which can be proved to be due to material failure or factory flaw. With kits we guarantee the completeness and quality of the components as well as the function of the parts according to the parameters in not mounted state. We guarantee the adherence to the technical specifications when the kit has been assembled and the ready-built circuit connected according to the manual and when start and mode of operation follow the instructions.

We retain the right to repair, make improvements, to deliver spares or to return the purchase price. Other claims are excluded. Claims for secondary damages or product liability consist only according to legal requirements.

Condition for this guarantee to be valid, is the adherence to the manual. In addition, the guarantee claim is excluded in the following cases:

- if arbitrary changes in the circuit are made,
- if repair attempts have failed with a ready-built module or device,
- if damaged by other persons,
- if damaged by faulty operation or by careless use or abuse.

10. EU declaration of conformity



This product conforms with the EC-directive 2004/108/EG on electromagnetic compatibility and is therefore CE certified.

It is developed and tested in accordance with the harmonised European standards EN 55014-1 and EN 61000-6-3.

To guarantee the electromagnetic tolerance in operation you must take the following precautions:

- Connect the transformer only to an approved mains socket installed by an authorised electrician.
- Make no changes to the original parts and accurately follow the instructions, connection diagrams and PCB layout included with this manual.
- Use only original spare parts for repairs.

11. Declarations conforming to RoHs and WEEE directives



This product conforms with the EC-directives 2002/96/EG on waste electrical and electronic equipment (WEEE) and 2002/95/EG on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).



DE 37847206

The Tams Elektronik GmbH is registered with the WEEE-no. DE 37847206, according to. § 6 sect. 2 of the German electro regulations from the responsible authority for the disposal of used electro equipment.

Don't dispose of this product in the house refuse, bring it to the next recycling bay.

Stückliste | Parts list | Nomenclature | Stuklijst

Widerstände Resistors	R1	120 Ω
Résistances Weerstanden	R2, R3, R4, R5	1 k Ω
Dioden Diodes	D1	1N400x, x=2...7
	D2, D3	1N4148
Elkos Electrolytic capacitors Condensateurs électrolytiques Elco 's	C1	2200 μ F, \geq 25 V
Transistoren Transistors	Q1, Q2	BD 680
Platinenbuchsen PCB sockets Douilles pour circuits imprimés Printbusjes	GND, S1, S2, VCC, W1, W2, W3	2,6 mm

Fig. 1: Bestückungsplan | PCB layout
Plan d'implantation | Printplan


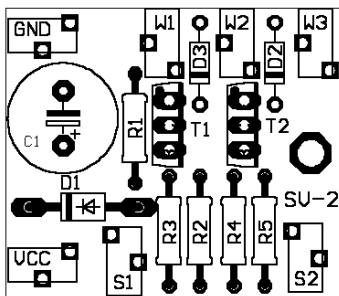


Fig. 2: Anschlussplan 1 | Connections 1
Schéma de branchement 1 | Aansluit plan 1

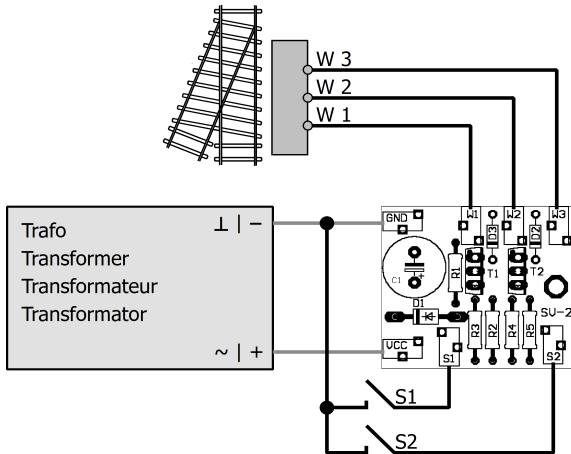

W1	Spule 1	Coil 1	Solénoïde 1	Wisselspoel 1
W2	Gemeinsamer Leiter	Common connection	Contact commun	Gemeenschappelijke aansluiting
W3	Spule 2	Coil 2	Solénoïde 2	Wisselspoel 2
S1 S2	Taster, Schaltpult, Schaltgleis oder ähnlich	Push button, control panel, circuit track or similar	Bouton poussoir, pupitre de commande à contacts fugitifs, rail de télécommande, etc.	Drukknop, schakelblok, schakelrail, enz.

Fig. 3: Anschlussplan 2 | Connections 2
Schéma de branchement 2 | Aansluit plan 2


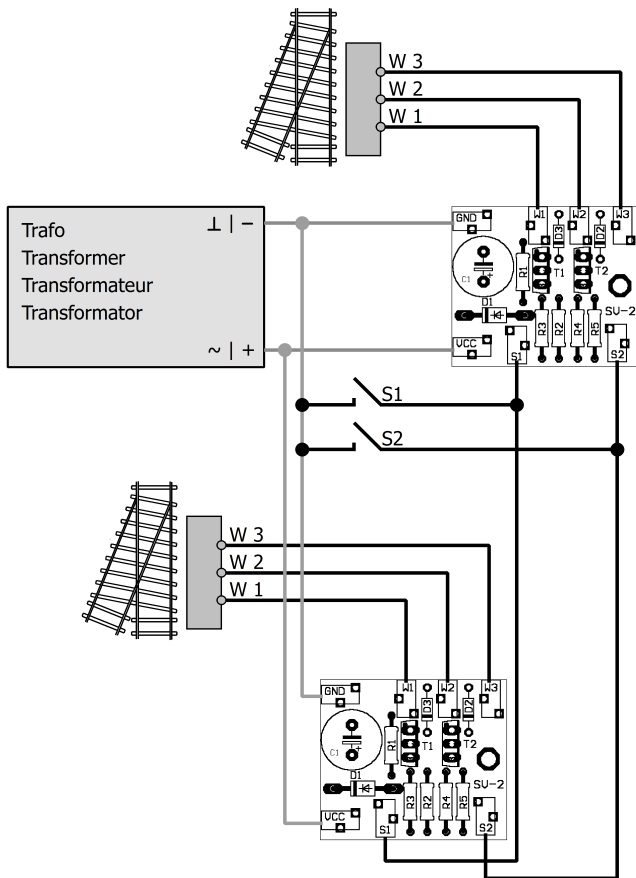


Fig. 4: Schaltplan | Circuit diagram
Schéma de principe | Schakelschema

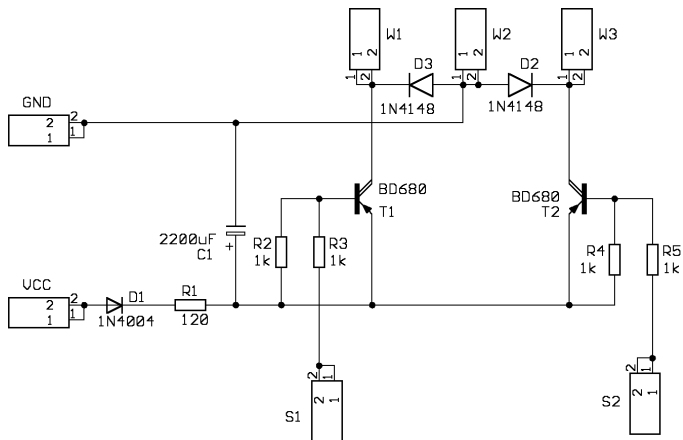

Aktuelle Informationen und Tipps:

Information and tips:

Informations et conseils:

Actuele informatie en tips:

<http://www.tams-online.de>

Garantie und Service:

Warranty and service:

Garantie et service:

Garantie en service:

Tams Elektronik GmbH

Fuhrberger Straße 4

DE-30625 Hannover

fon: +49 (0)511 / 55 60 60

fax: +49 (0)511 / 55 61 61

e-mail: modellbahn@tams-online.de



DE 37847206