

Module for emergency stop, gate monitoring, Electro-sensitive protection devices (ESPE) and magnetic safety sensor

Main functions

- · Single or dual channel input circuit
- · Choice between automatic start, manual start (CS AR-05 only) or monitored start (CS AR-06 only)
- Connectible to ESPE, to electromechanical contacts or to magnetic safety sensor
- Output contacts:
- 3 NO safety contacts,
- 1 NC auxiliary contact
- Supply voltages

24 VAC/DC, 120 VAC, 230 VAC

Utilization categories

Alternate current: AC15 (50...60 Hz)

Ue (V) 230 le (A)

Direct current: DC13 (6 operations/minute)

Ue (V) 24 le (A)

Markings, quality marks and certificates:





Approval UL: E131787

Complying with the requirements requested by:

Low Voltage Directive 2006/95/EC Machinery Directive 2006/42/EC,

Electromagnetic Compatibility 2004/108/EC

Technical data

Made of polyamide PA 6.6 self-extinguishing, class V0 (UL94)

Protection degree: IP40 (housing), IP20 (terminals) Dimensions: see page 4/141, shape A

General data

category 4 according to EN 954-1 Safety category: -25°C...+55°C Ambient temperature:

Mechanical endurance: >10 millions of operations >100.000 operations Electrical endurance: Pollution degree: outside 3, inside 2

Rated impulse with stand voltage (Uimp): 4 KV Rated insulation voltage (Ui): 250 V Over-voltage category: Ш 0,3 Kg Weight:

Power supply

24 VAC/DC; 50...60 Hz Rated operating voltage (Un):

120 VAC; 50...60 Hz 230 VAC; 50...60 Hz

Max residual ripple in DC: 10%

Supply voltage tolerance: ±15% of Un Rated power consumption AC: < 5 VA < 2 W Rated power consumption DC:

Control circuit

resistance PTC, Ih=0,5 A Protection against short circuits:

Operating time of PTC: intervention > 100 ms, reset > 3 s

Max input resistance: Current for each input: 30 mA Min. period of start impulse t_{MIN} 250 ms 200 ms Operating time t_a: Releasing time t_{R1} : Releasing time in absence of power supply t_{R1} : 15 ms 70 ms infinite Simultaneity time t_c:

In conformity with standards:

IEC 60947-1, EN 60947-1, IEC 60204-1, EN 60204-1, EN ISO 13849-1, EN 999, EN 1037, EN ISO 12100-1, EN ISO 12100-2, EN ISO 13850, IEC 529, EN 60529, EN 61000-6-2, EN 61000-6-3, EN 62326-1, EN 60664-1, UL 508, CSA C22.2 n° 14-95

Output circuit

3 NO safety contacts Output contacts: 1 NC auxiliary contact

Contacts type: forced guided contacts Contacts material: silver alloy, gold plated Max switching voltage: 230/240 VAC; 300 VDC

Max switching current per contact: 6 A Conventional free air thermal current Ith: 6 A Contacts resistance: ≤ 100 mΩ Contact protection fuse: 6 A

The number and the load capacity of output contacts can

see page 4/135 - 4/139 be increased by using expansion modules or contactors:

Code structure

CS AR-05V024

Kind of start

05 manual or automatic start	
111anual of automatic Start	
06 monitored start	

Kind of connection

screw terminals M connector with screw terminals **X** connector with spring terminals Supply voltage

024	24 VAC/DC	± 15%
120	120 VAC	± 15%
230	230 VAC	±15%

Data type approved by UL

24 VAC/DC; 50...60 Hz Rated operating voltage (Un): 120 VAC; 50...60 Hz 230 VAC; 50...60 Hz


Rated power consumption AC: < 5 VA Rated power consumption DC: < 2 W Max switching voltage: 230 VAC Max switching current per contact: 6 A C300

Utilization category


Notes:
- Use 60° or 75°C copper (Cu) conductor and wire size No. 30-12 AWG.
- Terminal tightening torque of 5-7 Lb-In.
- Only for 24 VAC/DC version, supply from remote class 2 source or limited voltage and limited energy.

Safety module CS AR-05-06

Terminals layout

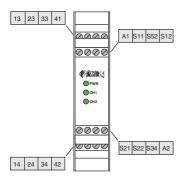


Internal wiring diagram

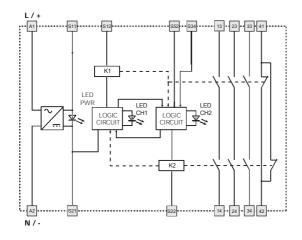


Operation diagrams


Configuration with automatic start

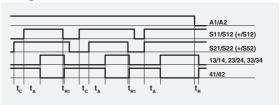

Configuration with monitored start

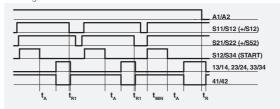

Configuration with manual start

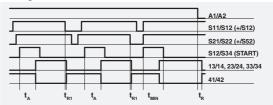



t_{MIN}: Min. period of start impulse
 t_c: Simultaneity time
 t_A: Operating time

Releasing time Releasing time in absence of power supply

The configurations with one channel are obtained taking into consideration only the CH1 input. In this case it is necessary to consider the $\mathbf{t_{R1}}$ time referred to CH1 input, the $\mathbf{t_{R}}$ time referred to the supply, the $\mathbf{t_{A}}$ time referred to CH1 input and to the start, and the t_{MIN} time referred to the start.

Inputs configuration

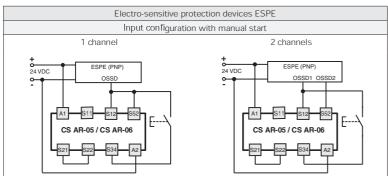

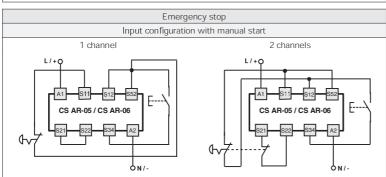

The diagram does not show the exact position of clamps in the product

Automatic start (CS AR-05 only)

As regards the indicated diagrams, in order to activate the module with the automatic start, it is necessary to short the start button between S12 and S34 terminals



Monitored start

Use the CS AR-06 module following the diagram for the manual start.

Gate monitoring and safety magnetic sensors.

The safety module can control both emergency stop circuits, gate monitoring circuits or safety magnetic sensors. Replace the emergency contacts switches contacts or with the sensors contacts.



