

Cordless Staple Gun

Item No. 17050

Instruction Manual



Always read and observe the safety instructions included and this manual before using electrical tools!

Additional safety instructions for cordless staple guns

This staple gun is used for stapling or nailing wooden strips, films, sheets of material, paper, cardboard, wire mesh and so onto wood or other suitable base materials.

- Never point the tool at animals or people.
- Always check the tool before use, and have any damaged parts replaced by a qualified specialist.
- Never use different types of fastening material at the same time. Always make sure that fastening materials in the magazine are of the same type.
- Never push the trigger lever down on an empty magazine.
- Wear eye protection when working with the electric staple gun.
- Remove all nails or staples from the magazine during longer work breaks or after finishing work.
- Do not use this staple gun for fastening electrical cables. It is not designed for electric cable installation and may damage the insulation of electric cables thereby causing electric shock or fire hazards.
- Immediately stop using the staple gun if it is either faulty or not working properly, and bring it to an expert to be checked over.
- Use the staple gun away from children, and keep it out of children's reach.

Tool description (Fig. 1)

1. Battery charge indicator
2. Trigger
3. Handle
4. Loading socket
5. Magazine release button
6. Battery charger
7. Paper tacker
8. Refill indicator
9. Contact switch

Technical data

Voltage	Li-Ion battery 3,6 V, 1300 mAh
Magazine capacity	50 nails/staples
Stapling/nailing rate	30 shots per minute
Suitable staple sizes	4-10 mm
Suitable nail size	10 mm
Sound pressure level (LPA) (Uncertainty K = 3 dB)	65,4 dB(A)
Sound power level (LWA) (Uncertainty K = 3 dB)	76,4 dB(A)
Vibration data (Uncertainty K = 1,5 m/s ²)	3,675 m/s ²

Charger:

Pri.: 100-240V~ 50/60 Hz

Sec.: 5 V = / 600 mA



Always wear eye protection during use!


Vibration data

- The vibration emission level given in this information sheet has been measured in accordance with a standardized test given in EN 60745 and may be used to compare one tool with another.
- The vibration emission level will vary because of the ways in which a power tool can be used and may increase above the level given in this information sheet. This could lead to a significant underestimate of exposure when the tool is used regularly in such a way.
- Note: To be accurate, an estimation of the level of exposure to vibration experienced during a given period of work should also take into account the times when the tool is switched off and when it is running but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Suitable nails and staples:

You can use staples with a length of 4-10 mm or nails with a length of 10 mm (e.g. Brüder Mannesmann item-no. 48413) with this cordless staple gun.

Staples - RB 11,3	Staples - RB 10,6
Bosch Typ 53	Bosch Typ 57
KWB Typ 053	KWB Typ 057
Novus A	Novus G
Prebena Typ VX	Prebena Typ PF
Rapid Nr. 3/53/530	Rapid No. 4/11/140
LUX 40-43	LUX 80-82

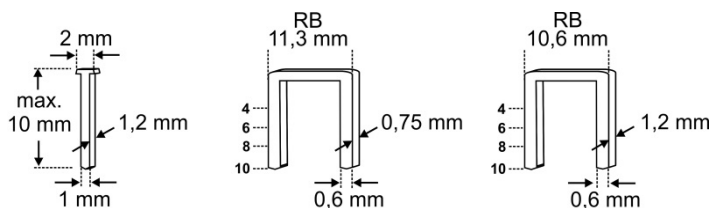

Loading of staples (Fig. 2) or nails (Fig. 3)

- Push the staple feeder catch (5) at the back of the tool towards the magazine, and pull out the staple feeder. Warning: Once the staple or nail strip has been placed in the feeder, it will be spring-loaded. Hold the catch firmly to prevent the feeder from suddenly being ejecting from the tool.
- Place the staple strip (Fig. 2) or nail strip (Fig. 3) into the magazine.
- Place the nail strip on that side of the magazine, which is marked with the according symbol (Fig.3)
- Push the staple feeder back to the front and secure by hitching the catch (5) behind the opening in the housing.

Charging the battery

- Before being used for the first time, the electric screwdriver must be charged.
- Only use the provided charger to charge the battery..
- Only use the battery charger in enclosed areas, and do not use in rain or high humidity.
- Should the housing of the battery charger appear damaged, remove this from the electrical socket, check it and if necessary get it repaired.
- Only charge the battery at an ambient temperature between 10°-40°C.
- Only connect the battery charger (6) to a 230 V AC power socket using the charging socket (4).
- The battery should only be charged for 2-3 hours. Overcharging the battery (for longer than 4 hours) can damage the battery cells and the battery charger.

Battery indicator

When the battery charge-control indicator (1) lights up **RED** during operation, the battery capacity is below 30% and the battery should be charged.

- Plug the battery charger (6) into a socket outlet and the charger plug into the socket **4** on the rear side of the handle.
- The battery charge-control indicator (1) indicates the charging progress.
- The indicator lights up **RED** during the charging procedure.
- When the indicator lights up **GREEN**, the battery is completely charged

Note: The power tool cannot be used during the charging procedure! It is normal that the handle of the staple gun warms up during the charging procedure.

Disconnect the battery charger from the mains supply when not using it for longer periods.

Usage

The tool has protection against inadvertent operation:

- The contact switch (9) ensures that the staple gun is only triggered on contact with a material surface.
- Place the opening of the electric staple gun firmly onto the material and squeeze the trigger (2).
- Additional pressure applied to the front of the tool will prevent recoil and increase the force applied to the nails or staples. This is especially important for ensuring that the nail or staple is driven the whole way into a hard surface.

Accessories for tacking paper

With the attached accessory (7) the cordless tacker can be used for tacking paper.

Note: Tack staples are stronger than standard staples and are therefore more difficult to remove from the paper. For tacking paper it is recommended to use staples of 0,75 mm thickness.

Tack paper

- Insert a suitable staple strip.
- Click the lugs of the paper tacker (7) one by one into the side slots of the power tool. (Fig.4)
- Insert the stack of paper into the paper tacker (7) and position the tacker head over the paper surface to be tacked.
- Firmly push the power tool down until the tacker head (9) is pushed in and briefly press the trigger (2).
- Once the staple has been completely driven in, release the trigger and lift the tacker head from the stack of paper.

To load the magazine, you have to dismount the paper tacker from the cordless tacker.

Troubleshooting

A staple or nail may jam in the magazine when stapling onto hard surfaces. If this happens, stop work and do not attempt to drive in any more staples or nails.

- Press release buttons (5) and pull out the magazine toward the rear.
- Remove the jammed staple. For this, use a pair of pliers, if required.
- Insert the magazine again until the magazine lock (5) is engaged.

Load the magazine in good time. If the staple strip is too short, this may cause staples to jam

Maintenance and care

The tool is virtually maintenance-free.

- Occasionally clean the housing with a dry cloth.
- Keep the hand grip and trigger dry and free of oil and grease.
- Do not use solvents, as they might damage the housing.
- Only have repairs carried out by an authorised repair workshop using original parts.

Full two-year guarantee

The guarantee period for your wall chasing machine begins on the day of purchase. Please supply proof of the day of purchase by sending in the original receipt.

The guaranteed period covers the following:

- Free removal of any faults.
- Free replacement of defective parts.
- Including free expert service (free assembly by our experts)


This guarantee is conditional upon the fault not being the result of improper handling. If you have any queries or problems concerning quality, please contact the manufacturer:

Brüder Mannesmann Werkzeuge GmbH
Abt. Reparatur-Service
Lempstr. 24

42859 Remscheid, Germany

Tel.: +49 (2191) 37 14 71
Fax: +49 (2191) 38 64 77
Email: service@br-mannesmann.de

Discarding old electrical tools—environmental protection

- If your tool has been so heavily used that it has become worn out and has to be replaced, or you have no further use for it, you must turn the electrical tool in at a central recycling centre for disposal.
- Please contact your community waste collection service or local authority to find out where you can hand in your tool for recycling.
- Electric tools contain valuable raw materials that can be recycled. You will contribute to recycling valuable raw materials by handing your tool in at a central waste disposal centre.
- Electric tools also contain substances that may be harmful to the environment and humans if disposed of inappropriately.
-  The no-go sign with the dustbin means that you have a duty to take that article with the sign to be recycled by a separate waste collection facility for electrical and electronic equipment.

