


# MINI WIRELESS BARCODE READER Quick Guide

For full user's manual, please contact  
your local distributor.

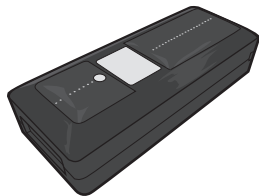

## FCC WARNING STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CANADIAN DOC STATEMENT

This digital apparatus does not exceed the Class B limits for radio noise for digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

## CE MARKING AND EUROPEAN UNION COMPLIANCE

Testing for compliance to CE requirements was performed by an independent laboratory. The unit under test was found compliant with all the applicable Directives, 2004/108/EC and 2006/95/EC.

## WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT

The WEEE directive places an obligation on all EU-based manufacturers and importers to take-back electronic products at the end of their useful life.

## ROHS STATEMENT OF COMPLIANCE

This product is compliant to Directive 2002/95/EC.

## NON-MODIFICATION STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance



## WARNING AND CAUTION



1. Take any metals into contact with the terminals in connectors.
2. Use the scanner where any inflammable gases.



If following condition occur, immediately power off the host computer, disconnect the interface cable, and contact your nearest dealer.

1. Smoke, abnormal odors or noises come from the scanner.
2. Drop the scanner so as to affect the operation or damage its housing.

Do not do behavior below.

1. Put the scanner in places excessively high temperatures such as expose under direct sunlight.
2. Use the scanner in extremely humid area or drastic temperature changes.
3. Place the scanner in oily smoke or steam environment such as cooking range.
4. Be covered or wrapped up the scanner in bad-ventilated area such as under cloth or blanket.
5. Insert or drop foreign materials or water into scanning window or vents.
6. Using the scanner while hand is wet or damp.
7. Use the scanner with anti-slip gloves containing plasticizer and chemicals or organic solvents such as benzene, thinner, insecticide etc to clean the housing. Otherwise, it could not result fire and electrical shock but housing may be broken and injured.
8. Scratch or modify the scanner and bend, twist, pull or heat its interface cable.
9. Put heavy objects on interface cable.



Do Not

Do not stare the light source from the scanning window or do not point the scanning window at other people's eyes or eyesight may be damaged by direct exposure under the light.



Do not put the scanner on an unstable or inclined plane.  
The scanner may drop, creating injuries.



Once the interface cable is damaged such as exposed or broken copper wires, stop using immediately and contact your dealer. Otherwise, it could result fire or electrical shock.

## OUT OF THE BOX

---



Mini Wireless  
Barcode Reader



Quick Guide



Quick Connection Card




USB Charger Cable



Hand Strap

## INTRODUCTION

---

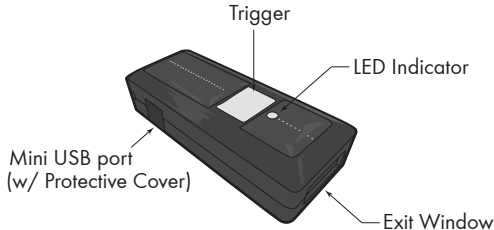


## SPECIFICATIONS

---


Sensor	Linear CMOS sensor
Resolution	4mil/ 0.1mm
Indicator	LED, Buzzer
PCS	30%
Housing	Plastic(PC)
Profile	SPP, HID
Battery Life	6000 scans (1 scan/ 5 sec)
Charge Time	2 hours (fully charged)
Radio	Bluetooth 2.1 + EDR (Class2)
Coverage	10M/33ft. (line of sight)
Symbologies	All major 1D barcodes incl. GS1 Databar

## GETTING STARTED

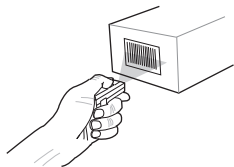

To scan a barcode, make sure the aiming beam crosses every bar and space of the barcode.

## CHARGING THE BATTERY

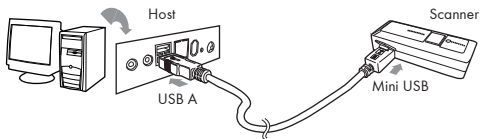

1. Flip open the mini USB port on the scanner.
2. Insert the mini USB connector into the port on the scanner and USB A connector into a USB port on the host PC.

## BEEPER INDICATION

Single long beep	Power up
Single beep	Good read
Single short beep	The scanner reads a Code39 of ASCII in configuration procedure
Two beeps	i. Wireless connection ii. The scanner successfully reads a configuration barcode
Two short beeps	Good read (Batch mode/Memory mode)
Four beeps (Hi-Lo-Hi-Lo)	Out of range/Poor connection
Five beeps	Low power
Three beeps	Wireless disconnection
Three short beeps	i. The scanner reads a barcodes while disconnected. ii. The scanner reads an unexpected barcode during configuration procedure. (scan [ABORT] to abort and start over)
Several short beeps	The scanner switches from one communication mode to another

## LED INDICATION

Off	Standby or Power off
Flashing Green	Disconnected or Discoverable
Green for 2 sec	Good Read
Flashing Red	Low power
Solid Red	Charging

## GETTING CONNECTED


There are two modes of wireless communication:

• EO43\$



[ Recommended ]

**BT mode - HID**

1. Press the trigger for 1 second to activate the scanner.
2. Scan [DISCONNECT]
3. Scan [BT mode - HID]; the scanner will emit several beeps.
4. Select "Wireless Scanner" from discovered device list.
5. The Bluetooth application may prompt you to scan a pincode (see PINCODE SETUP  section) it generated.
6. The scanner will beep twice to verify the connection.

• EO42\$



**BT mode - SPP**

1. Press the trigger for 1 second to activate the scanner.
2. Scan [DISCONNECT]
3. Scan [BT mode - SPP]; the scanner will emit several beeps.
4. Select "Wireless Scanner" from discovered device list.  
The default pincode is "1234".
5. Open serial communication software with com port (see Device Manager) properly set up.
6. The scanner will beep twice to verify the connection.

• EO31\$



**Disconnect**

## PINCODE SETUP


STEP 1

**Pincode Start**

• EO32\$



STEP 2

Scan numeric barcodes (see **NUMERIC BARCODES**  section on the next pages) based on the pincode generated by the Bluetooth application.

STEP 3

**Enter**

\$TX



STEP 4

**Pincode Stop**

• EO33\$



# NUMERIC BARCODES

---



**1**



**2**



**3**



**4**



**5**

**6**



**7**



**8**



**9**



**0**



## POWER OFF TIMEOUT

The period of inactivity before auto power-off.

### Variable Timeout

. B030\$



SET MINUTE  
(Range: 00 ~ 60)

. B029\$



SET SECOND  
(Range: 00 ~ 60)

The default timeout is 3 minutes 0 second.

For example, to set the timeout as 5 minutes 30 seconds:

1. Scan [Set Minute]
2. Scan [0] & [5] on page 9 & 10.
3. Scan [Set Minute]
4. Scan [Set Second]
5. Scan [3] & [0] on page 9 & 10.
6. Scan [Set Second]

### No Timeout (Scanner Always On)

. B021\$



DISABLE  
TIMEOUT

## SMARTPHONE/TABLET CONNECTION

### Getting Connected - iOS & Android

Simply follow instruction in [BT mode - HID] (page 7), in which step 5 can be skipped since iOS & Android will not require pin-code for connection.

### Touch Keyboard - iOS

. E047\$



ENABLE iOS HOTKEY

After enabling iOS Hotkey(disabled by default), you may simply double-click the trigger to toggle the iPhone/iPad Touch Keyboard.

### Touch Keyboard - Android

Please follow below steps to toggle Android virtual keyboard:

1. Enter "Settings"
2. Enter "Language & input"
3. In Keyboard & input window, tap "Default" to continue.
4. Turn off "Hardware - Physical keyboard", and the Touch Keyboard will function properly again.

## INTERFACE SELECTION

---

. E043\$



BT HID

. E042\$



BT SPP

. C008\$



USB HID

. C006\$



USB VCP

1. **BT HID** - Emulates a **Bluetooth HID keyboard** that transmits each barcode data to the host. (see page 9 for details)
2. **BT SPP** - Emulates a **Bluetooth SPP device** that transmits each barcode data to the host. (see page 9 for details)
3. **USB HID** - Emulates a **USB keyboard** that transmits each barcode data to the host.
4. **USB VCP** - Emulates a **USB virtual com device** that transmits each barcode data to the host.

## BATCH MODE

---

. E054\$



ENABLE

. E053\$



**DISABLE**

In Batch Mode, data will be temporarily stored in memory buffer (2KB RAM) when the scanner is out of range or in poor connection quality. Once the scanner gets back in range, the stored data will be sent back to the host immediately, which will also be erased in memory buffer at the same time.

Batch Mode can only function in the following conditions:

1. The scanner has been connected to a host device.
2. The scanner is NOT in Memory Mode.



## GENERAL SETTINGS

. A001\$



DEFAULT

. P023\$



ABORT

. A007\$



CHECK  
VERSION

## BEEPER

. F012\$



BEEP OFF

. F018\$



**BEEP ON**

## READING MODE

**TRIGGER**

TOGGLE

FLASH

CONTINUOUS

CONTINUOUS  
AUTO OFF

. F002\$



. F003\$



. F001\$



. F005\$



. F006\$



# KEYBOARD LAYOUT

---

. C010\$



**ENGLISH**  
**(USA)**

. C018\$



ENGLISH  
(UK)

. C012\$



FRENCH

. C011\$



GERMAN

. C014\$



ITALIAN

. C013\$



SPANISH

JAPAN  
(106 key)

. C009\$



CANADIAN  
(FRENCH)

. C025\$



CANADIAN  
(TRADITIONAL)

. C034\$



NORWEGIAN

. C029\$



SWEDISH

. C026\$



PORTUGUESE

. C031\$



# KEYBOARD LAYOUT

---

. C017\$



CZECH  
(QWERTY)

. C022\$



CZECH  
(QWERTZ)

. C021\$



HUNGARIAN  
(QWERTZ)

. C024\$



HUNGARIAN  
(101 KEY)

. C016\$



SWISS  
(GERMAN)

. C023\$



SWISS  
(FRENCH)

BELGIAN  
(AZERTY)

DUTCH

DANISH

SLOVAK

BRAZILIAN  
(PORTUGUESE)

ALT CODE

. C030\$



. C028\$



. C027\$



. C032\$



. C033\$



. C015\$



# ENABLE SYMBOLOGIES

---

. A002\$



ENABLE  
ALL CODE

. K010\$



CODE 32

. L010\$



UK PLESSEY

. L001\$



MSI

. N001\$



INDUSTRIAL  
2 OF 5

. M010\$



MATRIX  
2 OF 5

. G010\$



CODE 93

. N017\$



IATA

. L014\$



TELEPEN

. N032\$



GS1 DATABAR

. N010\$



GS1 DATABAR  
LIMITED

. N026\$



GS1 DATABAR  
EXPANDED

# TERMINATOR

---

. D012\$



CR

The following pages only apply to the memory version mini wireless scanner.

. D011\$



LF

The firmware version with suffix "MEM" supports memory function.  
e.g. SM3-c-X.XX.BTA.MEM

. D013\$



CR + LF

The firmware version can be found either on the scanner box or by scanning below barcode.

. D010\$



NONE

. D015\$



SPACE

. D014\$



TAB

. A007\$



CHECK VERSION

## MEMORY MODE

For memory version only

. C035\$



### MEMORY MODE

After scanning the above barcode, the scanner will be able to collect barcode data off-line. The barcode data will be stored in the format of:

< Date >, < Time >, < Barcode Data > < CR >

To retrieve stored data, please connect the scanner to the host with cable, access removable storage device "MiniScan" from which you may open or copy the file "BARCODE.txt" to your computer.

To delete ONE stored data, please scan below barcode :

. R005\$



### DELETE LAST DATA

To delete ALL stored data, simply delete the file "BARCODE.txt" in the removable storage device "MiniScan" until you hear two beeps.

## DATA FORMAT

For memory version only

. R011\$



### DATA FORMAT

The default Data Format is <Barcode Data> only below are all items available for display and their codes:

Code	Item	Code	Item
2	Date	3	Time
4	Barcode Data		

Example:

To change Data Format to <Barcode Data>, <Date>, <Time>

1. Scan [Data Format]
2. Scan [4], [2], [3] on page 9.
3. Scan [Data Format]

. R010\$



### FIELD SEPARATOR

Default is comma ( , ). You may replace it with any alphanumeric characters from the full ASCII table in Full User's Manual.

Example: To change Field Separator to Semicolon ( ; )

1. Scan [Field Separator]
2. Scan [ ; ] from the full ASCII table.
3. Scan [Field Separator]

## DATE FORMAT

For memory version only

. R008\$



### DATE FORMAT

The default Date Format is DD/MM/YYYY (Code = 09), below is full list of available formats and their setup codes:

Code	Format	Code	Format
01	DD-MM-YYYY	09	DD/MM/YYYY
02	MM-DD-YYYY	10	MM/DD/YYYY
03	DD-MM-YY	11	DD/MM/YY
04	MM-DD-YY	12	MM/DD/YY
05	YYYY-MM-DD	13	YYYY/MM/DD
06	YY-MM-DD	14	YY/MM/DD
07	DD-MM	15	DD/MM
08	MM-DD	16	MM/DD

Example:

To set Date Format to MM/DD/YY (Code =12)

1. Scan [Date Format]
2. Scan [1], [2] on page 9.
3. Scan [Date Format]

## TIME FORMAT

For memory version only

. R009\$



### TIME FORMAT

The default Time Format is HH:MM:SS (Code = 01), below are available formats and their setup codes:

Code	Format	Code	Format
01	HH:MM:SS	02	HH:MM

Example:

To set Time Format to HH:MM (Code = 02)

1. Scan [Time Format]
2. Scan [0], [2] on page 9 & 10
3. Scan [TimeFormat]



. R006\$



SET DATE

Example: To set Date to 2012-08-01 (Year-Month-Day):

1. Scan [Set Date]
2. Scan [1], [2], [0], [8], [0], [1] on page 9 & 10.
3. Scan [Set Date]

. R007\$



SET TIME

Example: To set Time to 08:10:30 am (Hr:Min:Sec)

1. Scan [Set Time]
2. Scan [0], [8], [1], [0], [3], [0] on page 9 & 10.
3. Scan [Set Time]

\* To avoid Time and Date being reset to factory default due to running low on battery, please fully charge the scanner for at least 2 hours before use.

**Code 39**



CODE-39 TEST

**Interleaved 2 of 5**



9876543210

**Code 128**



12345678

**EAN**



4 716415 942052