


MAKEVMA301

DS1302 REAL-TIME CLOCK MODULE



USER MANUAL

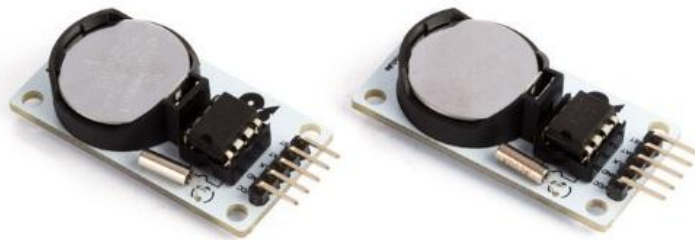


USER MANUAL

1. Introduction

To all residents of the European Union

Important environmental information about this product

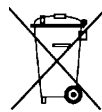

This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

■ If in doubt, contact your local waste disposal authorities.

Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

2. Safety Instructions



- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.



- Indoor use only.
Keep away from rain, moisture, splashing and dripping liquids.

3. General Guidelines



- Familiarise yourself with the functions of the device before actually using it.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- The dealers cannot be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Due to constant product improvements, the actual product appearance might differ from the shown images.
- Product images are for illustrative purposes only.
- Do not switch the device on immediately after it has been exposed to changes in temperature. Protect the device against damage by leaving it switched off until it has reached room temperature.
- Keep this manual for future reference.

4. What is Arduino®

Arduino® is an open-source prototyping platform based in easy-to-use hardware and software. Arduino® boards are able to read inputs – light-on sensor, a finger on a button or a Twitter message – and turn it into an output – activating of a motor, turning on an LED, publishing something online. You can tell your board what to do by sending a set of instructions to the microcontroller on the board. To do so, you use the Arduino programming language (based on Wiring) and the Arduino® software IDE (based on Processing).

Surf to www.arduino.cc and www.arduino.org for more information.


5. Overview

The DS1302 trickle-charge timekeeping chip contains a real-time clock/calendar and 31 bytes of static RAM. It communicates with a microprocessor via a simple serial interface. The real-time clock/calendar provides seconds, minutes, hours, day, date, month, and year information. The end of the month date is automatically adjusted for months with fewer than 31 days, including corrections for leap year. The clock operates in either the 24-hour or 12-hour format with an AM/PM indicator.

Arduino®	▶▶▶▶▶	MAKEVMA301
D27	▶▶▶▶▶	CE
D29	▶▶▶▶▶	I/O
D31	▶▶▶▶▶	SCLK
D33	▶▶▶▶▶	VCC
D35	▶▶▶▶▶	GND

power supply..... 1 x CR2032
 TTL compatible..... VCC = 5 V
 temperature range..... 0 °C to +70 °C

6. Pin Layout

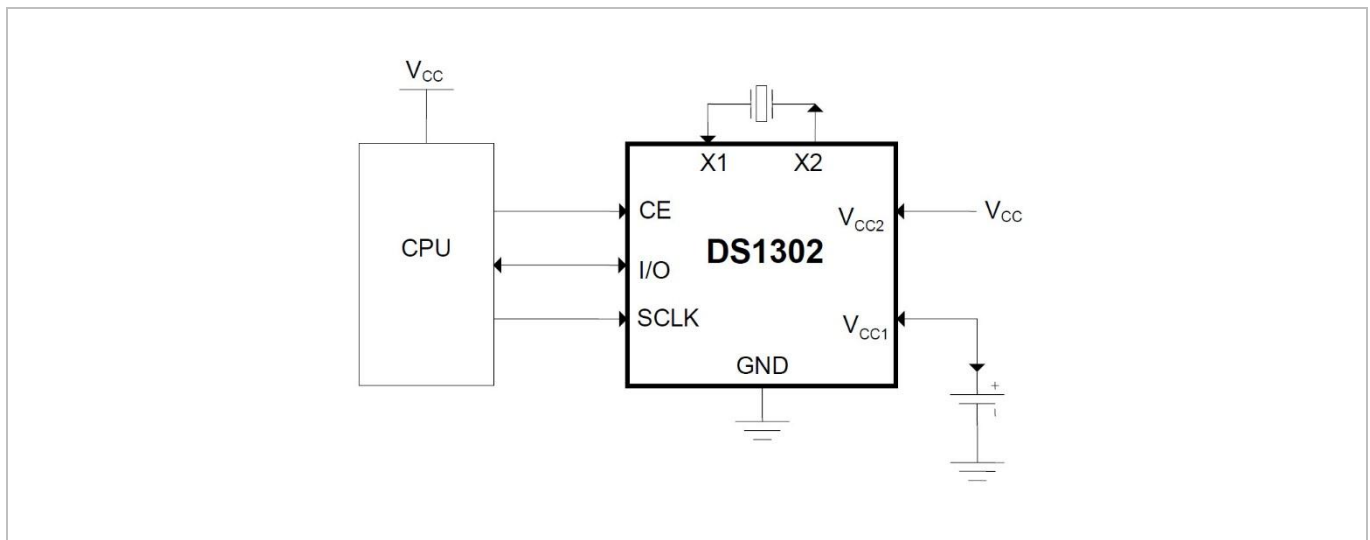

CE	Input. The CE signal must be asserted high during a read or a write. This pin has an internal 40 kΩ (typ) pulldown resistor to ground. Note: Previous data sheet revisions referred to CE as RST. The functionality of the pin has not changed.
I/O	Input/push-pull output. The I/O pin is the bidirectional data pin for the 3-wire interface. This pin has an internal 40 kΩ (typ) pulldown resistor to ground.
SCLK	Input. SCLK is used to synchronize data movement on the serial interface. This pin has an internal 40 kΩ (typ) pulldown resistor to ground.

VCC	Primary power supply pin in dual supply configuration. Vcc1 is connected to a backup source to maintain the time and date in the absence of primary power. The MAKEVMA301 operates from the larger of Vcc1 or Vcc2. When Vcc2 is greater than Vcc1 + 0.2 V, Vcc2 powers the MAKEVMA301. When Vcc2 is less than Vcc1, Vcc1 powers the MAKEVMA301.
GND	Ground.

7. Example

```

#include <LiquidCrystal.h>
#include <DS1302RTC.h>
#include <Time.h>

// Init the DS1302
// Set pins: CE, IO,CLK
DS1302RTC RTC(27, 29, 31);

// Optional connection for RTC module
#define DS1302_GND_PIN 33
#define DS1302_VCC_PIN 35

// Init the LCD
// initialize the library with the numbers of the interface pins
// lcd(RS, E, d4, d5, d6, d7)
LiquidCrystal lcd(8, 9, 4, 5, 6, 7);

void setup()
{
  // Setup LCD to 16x2 characters
  lcd.begin(16, 2);

  // Activate RTC module
  digitalWrite(DS1302_GND_PIN, LOW);
  pinMode(DS1302_GND_PIN, OUTPUT);

  digitalWrite(DS1302_VCC_PIN, HIGH);
  pinMode(DS1302_VCC_PIN, OUTPUT);

  lcd.print("RTC activated");

  delay(500);

  // Check clock oscillation
  lcd.clear();
  if (RTC.haltRTC())
    lcd.print("Clock stopped!");
  else
    lcd.print("Clock working.");

  // Check write-protection
  lcd.setCursor(0,1);
  if (RTC.writeEN())
    lcd.print("Write allowed.");
  else
    lcd.print("Write protected.");

  delay ( 2000 );

  // Setup Time library
  lcd.clear();
  lcd.print("RTC Sync");
  setSyncProvider(RTC.get); // the function to get the time from the RTC
  if(timeStatus() == timeSet)
    lcd.print(" Ok!");
  else
    lcd.print(" FAIL!");

  delay ( 2000 );

  lcd.clear();
}

void loop()
{

```

```
// Display time centered on the upper line
lcd.setCursor(3, 0);
print2digits(hour());
lcd.print(":");
print2digits(minute());
lcd.print(":");
print2digits(second());

// Display abbreviated Day-of-Week in the lower left corner
lcd.setCursor(0, 1);
lcd.print(dayShortStr(weekday()));

// Display date in the lower right corner
lcd.setCursor(5, 1);
lcd.print("/");
print2digits(day());
lcd.print("/");
print2digits(month());
lcd.print("/");
lcd.print(year());

// Warning!
if(timeStatus() != timeSet) {
  lcd.setCursor(0, 1);
  lcd.print(F("RTC ERROR: SYNC!"));
}

delay ( 1000 ); // Wait approx 1 sec
}

void print2digits(int number) {
  // Output leading zero
  if (number >= 0 && number < 10) {
    lcd.write('0');
  }
  lcd.print(number);
}
```

© COPYRIGHT NOTICE

All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.