

GPRS/MMS/SMS Digital Infrared Trail Camera User's Manual WCM-8010



Table of Contents

1.	Instructions	1
1.1	General Description	1
1.2	Camera Body Interface	1
1.3	Camera components and features	1
1.4	Shooting Information Display	2
1.5	Brief Introduction for SIM card and Signal	2
1.6	Supported Format	2
2.	Easy Operation	2
2.1	Power Supply	2
2.2	Insert the MICRO SD-card and the SIM-card	3
2.3	Enter into the TEST Mode	3
2.3.1	User Settings	3
2.3.2	Manual Capturing	3
2.3.3	View Images or Videos	3
2.4	Power on and Enter into the ON Mode	3
2.5	Power Off	3
3.	Advanced Operations	3
3.1	Settings Menu	4
3.1.1	Photo Setting	4
3.1.2	Video Setting	4
3.1.3	System Setting	5
3.1.4	MMS Menu Setting	5
3.1.5	SMTP Menu Setting	5
3.2	MMS/SMTP Settings	6
3.2.1	Preparation	6
3.2.2	MMS setting:	6
3.2.3	SMTP setting	6
3.3	SMS Command Code	7
4.	Cautions	8
Append	ix I : Parts List	8
Append	ix II : Technical Specifications	9

1. Instructions

1.1 General Description

This digital trail camera with MMS function (built-in antenna) can work automatically day and night. It can be triggered by any movement of human (or animals) in a certain region monitored by motion sensor, and then automatically captures pictures (up to 12M pixels) or records 1080p or HD video clips.


During daytime it begins to take color photos and video till light is not enough, then it begins to take monochrome photos and video.

It supports 2G/GSM/MMS/SMTP/SMS. And it is waterproof IP65.

1.2 Camera Body Interface

It has the following interfaces: USB connector, MICRO SD-Card Slot, Miro SIM card slot, TV output and external DC power connector.

1.3 Camera components and features

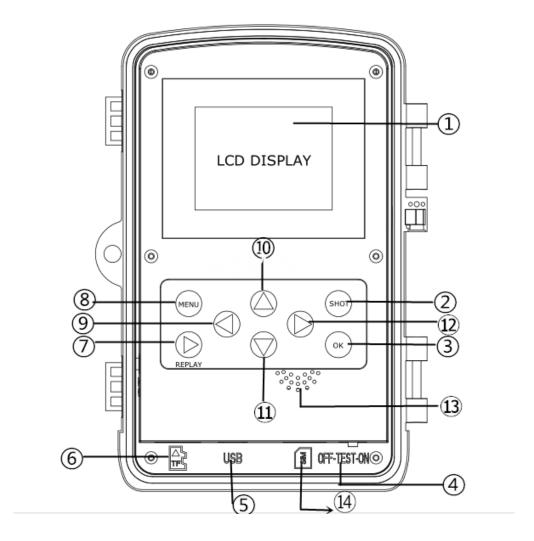


- 1) 2inch color LCD Display
- 2) Shot button
- 3) OK button
- 4) Power Switch
- 5) USB connector
- 6) Micro SD card slot (Card not incl.)
- 7) Replay button

- 8) Menu button
- 9) Left button
- 10) Up button
- 11) Down button
- 12) Right button
- 13) Speaker (Not support)
- 14) SIM card slot (Card not incl.)



1.4 Shooting Information Display

When power switch is turn to TEST position, the shooting information will be displayed in the monitor.

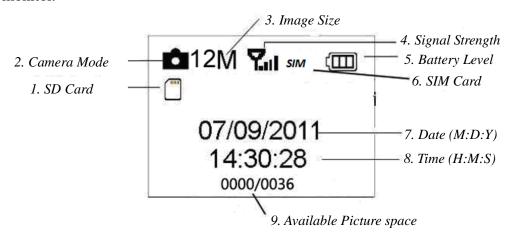

1.5 Brief Introduction for SIM card and Signal

There are two SIM card icons. It means the SIM card is inserted and it can work well. It means the network signal in your local place is very good.

1.6 Supported Format

Item	Format
Photo	JPG
Video	AVI

2. Easy Operation

2.1 Power Supply

To supply power for the camera,4 or 8 AA batteries are needed. (Batteries not incl) The following batteries with 1.5V output can be used:

- 1. High-density and high-performance alkaline batteries (Recommended)
- 2. Rechargeable alkaline batteries
- 3. Rechargeable NiMH batteries

When in Test Mode, camera will be automatically shut down to save power if without any operation within 3 minutes; it could be waked up by any movement detection. When in low power state, camera will also automatically shut down. Please change the batteries in time.

2.2 Insert the MICRO SD-card and the SIM-card

Insert MICRO SD-card and SIM into the card slot. (Card not incl)

When use MMS/E-mail function, be sure to insert SIM-card into the SIM-card slot correctly.









2.3 Enter into the TEST Mode

Turn the power switch to the TEST position to enter into the TEST mode. There are some functions in TEST mode: user settings, manually capture, preview.

2.3.1 User Settings

Press the MENU button. The camera can be set (mode, interval, picture resolution, video resolution& length, etc.) the detailed operations will be described in following chapter.

2.3.2 Manual Capturing

Press Shot to manually capture photos or record video.

2.3.3 View Images or Videos

There are two ways to view the captured images or videos:

- 1. LCD screen on camera
- 2. TV monitors which connects to camera with TV cable

Press REPLAY to view captured files, the latest image will be shown on the LCD screen or TV monitor. Press UP to view the last and press DOWN for the next.

Press Left button to play the video, again to pause. Press OK to exit.

2.4 Power on and Enter into the ON Mode

Before switching on, please pay attention to the following items:

- 1. Do not face light source directly. These may cause false triggers
- 2. The height from ground for placing should be 1-2 meters. For example for deer height is good size appropriately.

After switching on the camera, the red light will blink for about 10s. The 10s is a buffering time before automatic capturing, e.g. for closing and locking the bottom cover, fixing the camera on a tree and walking away.

2.5 Power Off

Slide the power switch to OFF position to turn off the camera.

Therefore, please remove the battery if the camera will not be used for a long time.

3. Advanced Operations

This chapter explains that user settings can only be done in TEST mode and the remote control is needed.

3.1 Settings Menu

Press MENU when camera in the TEST mode. The settings menu will be shown on the LCD or the external TV monitor.


3.1.1 Photo Setting

Camera					
Resolution		12MP 8MP 5MP			
Interval		1 Second 5 Seconds 10 Seconds 30 Seconds 1 Minute 5 Minutes 10 Minutes 30 Minutes			
Multi		Single 3 Pictures 6 Pictures 9 Pictures			
ISO		100 200 400			
ID		CAMO00			


3.1.2 Video Setting




3.1.3 System Setting

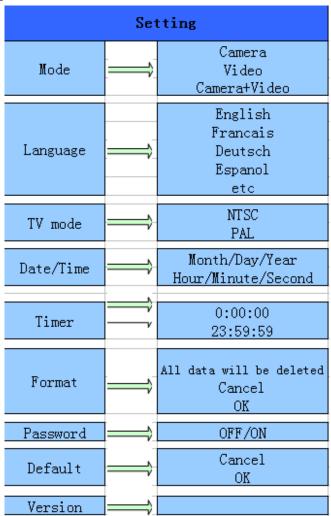

3.1.4 MMS Menu Setting

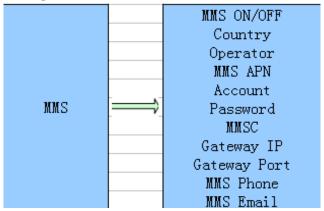

3.1.5 SMTP Menu Setting

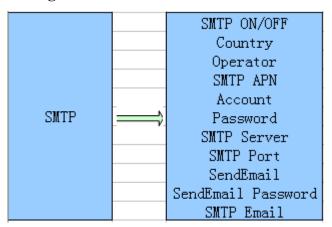

This camera can send pictures instantly to user's mobile via MMS method. So before using this function user needs to finish the settings mms in MMSCONFIG.

3.2 MMS/SMTP Settings


3.2.1 Preparation

- 1.2G/GSM Mobile Operator Service
- 2. format 2GB+ MICROSD or SD card
- 3. computer (Vista, Windows 7, windows 8 system)
- 4. One SIM card without PIN lock
- 5. The SIM card should be able to send images via 2G/GSM/ GPRS/MMS network
- 6.6V power (4 or 8 AA Batteries, or 6V input power supply)
- 7. MMSCONFIG Program in CD
- 8. Users need to ask the provider 2G MMS data (APN+Account+Password, MMSC+IP+PORT), or find this info on providers homepage.
- 9.2G GPRS data for SMTP setting from provider (APN+Account+Password)
- 10. Sender Email server info(server+port+email+password)

3.2.2 MMS setting:

1. Insert card and SIM to camera, put batteries in cam, screw antenna to it then turn camera to test mode, check there are signal bar and "SIM" on the camera screen. Then connect the camera to the PC with the included USB cable insert CD to computer, open

and then double click MMSCONFIG

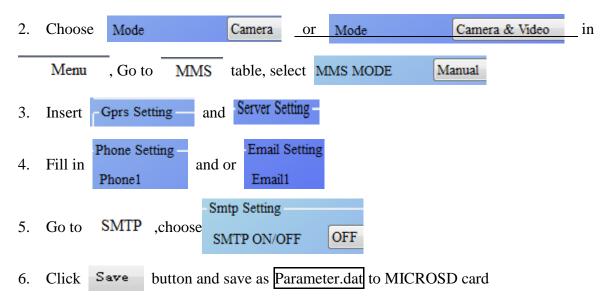

7. Plug USB cable from camera



in camera menu, check the subsetting is the


same with above setting


9. Turn camera to on mode

3.2.3 SMTP setting

1. Insert card and SIM to camera, put batteries in cam, screw antenna to it then turn camera to test mode, check there are signal bar and "SIM" on the camera screen. Then connect the camera to the PC with the included USB cable insert CD to computer, open

and then double click MMSCONFIG

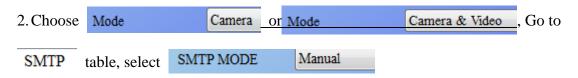


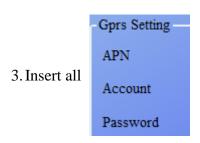

4. Fill in sender email info in



5. Go to MMS table, choose

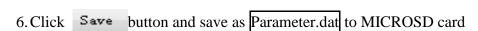

7. Plug USB cable from camera



in cam menu, check the

subsetting is the same with above setting

9. Turn camera to on mode

3.3 SMS Command Code

mms/smtp need to be set 'on' mode well before using thes sms command

500 take picture (Can work in both mms and smtp mode)

505 take picture and send to the mobile who sends sms sim in camera will send picture to mms Mobile or smtp email when got* 505* Command, no matter MMS or smtp mode.

But sim will send mms to the mobile who sends sms when camera only in mms mode

520 check the picture quantity and battery status (Can work in both mms and smtp mode) sim will send Total Jpg: Free Space: Battery Level: when receive *520* command

530 turn on camera (Can work in both mms and smtp mode) sim will send Start OK when receive *530* command

531 turn camera to sleeping mode (Can work in both mms and smtp mode) Sim will send Stop OK when receive *531* command



4. Cautions

The working voltage of the camera is 6.0 V.

Please unlock and format the Micro SD card.

Please insert the Micro SD-card when the power switch is at OFF position.

Please do not insert or take out the Micro SD-card when the power switch is at ON position.

Please ensure full power when having firmware upgrade, otherwise the upgrade process could be stopped.

As communications networks may vary we can't guarantee 100% MMS and GPRS can work fine

Appendix I : Parts List

Part Name	Quantity	
Digital Camera	1	
Wireless controller	1	
Antenna	1	
USB Cable	1	
TV cable	1	
User's Manual	2	
QSG	1	
CD	1	
Wall mount	1	
Solar power supply	Optional	

Appendix II : Technical Specifications

Image Sensor Type	8 Mega Pixels Color CMOS
(True Megapixels)	
Memory	MICRO SD Card 8MB~32GB
Lens	F=3.1; FOV=108°
Size	135mm * 95mm * 85 mm
IR Filter:	Full Automatic IR Filter
TFT Display Screen:	2.0 inch
PIR Sensor Sight Angle	120 Degrees
PIR Sensing Distance	65ft/20m
Number of IR LED	42 LEDs Black or White
Max Night Vision Lighting Distance	65ft/20 meters
Trigger Speed	0.3 second
Triggering Interval :	1 second ~ 30mins (default 1 sec)
Selectable Image Resolution:	12MP/8MP/5MP
Multiple Frame	1/3/6/9
Video Resolution	1080P/720P/WVGA
File Format	JPEG/AVI
Date Time Imprint	Yes
Moon Phase Imprint	Yes
Exposure:	Auto
MMS/EMAIL/	Support
SMS Control	Support
Password Security	4 Digits set by yourself
Universal password	1314
Default camera ID	CAM000
Periodic shot	
1 CHOUIC SHOT	1Second~24Hours
Stand-by current	1Second~24Hours 0.2mA
Stand-by current	0.2mA
Stand-by current Stand-by time	0.2mA 3 Months (4 AA Battery)
Stand-by current Stand-by time	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card
Stand-by current Stand-by time Interface	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External
Stand-by current Stand-by time Interface Fix Method	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External Belt, Tripod Nail
Stand-by current Stand-by time Interface Fix Method Operation Temperature	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External Belt, Tripod Nail -30 ~+70°C/-22~+158°F
Stand-by current Stand-by time Interface Fix Method Operation Temperature Power Supply	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External Belt, Tripod Nail -30 ~+70°C/-22~+158°F 4 or 8×AA battery
Stand-by current Stand-by time Interface Fix Method Operation Temperature Power Supply Camera Socket	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External Belt, Tripod Nail -30 ~+70°C/-22~+158°F 4 or 8×AA battery Yes
Stand-by current Stand-by time Interface Fix Method Operation Temperature Power Supply Camera Socket	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External Belt, Tripod Nail -30 ~+70°C/-22~+158°F 4 or 8×AA battery Yes IP65
Stand-by current Stand-by time Interface Fix Method Operation Temperature Power Supply Camera Socket Water proof	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External Belt, Tripod Nail -30 ~+70°C/-22~+158°F 4 or 8×AA battery Yes IP65 English, French, Germany, Spanish, Danish,
Stand-by current Stand-by time Interface Fix Method Operation Temperature Power Supply Camera Socket Water proof	0.2mA 3 Months (4 AA Battery) TV out (NTSC/PAL); USB; Micro SD Card Holder;6V DC External Belt, Tripod Nail -30 ~+70°C/-22~+158°F 4 or 8×AA battery Yes IP65 English, French, Germany, Spanish, Danish, Dutch, Poland, Portuguese, Swedish, Italian,

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:
DENVER ELECTRONICS A/S
Omega 5A, Soeften
8382 Hinnerup
Denmark
facebook.com/denverelectronics

Hereby, Inter Sales A/S declares that the radio equipment type WCM-8010 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://www.denver-electronics.com/denver-wcm-8010/

Operating frequency rate:850-1900MHz Max output power:2W