

Vor Inbetriebnahme lesen!

Alle Modelle dürfen nur von qualifiziertem Fachpersonal (nach einschlägigen Normen, z. B. IEC 60364, VDE0100, VDE0105) installiert werden! Bei Funktionsstörungen oder Beschädigungen ist die Versorgungsspannung sofort zu unterbrechen und das Gerät zur Überprüfung an den Lieferanten zu senden. Das Gerät ist wartungsfrei und enthält keine Servicebauteile. Die interne Sicherung (sofern vorhanden) löst im Fehlerfall irreversibel aus, andernfalls erfolgt eine Abschaltung.

WARNING

Die Missachtung der in dieser Betriebsanleitung und den Spezifikationen enthaltenen Informationen kann einen elektrischen Schlag, Brände, schwere Unfälle und Schäden an Personen, Haus- und Nutztieren und Gütern zur Folge haben!

- Bei diesem Schaltnetzteil handelt es sich um ein Einbauteil, das in einen Schaltschrank oder ein anderes geeignetes Gehäuse einzubauen ist
- Installations- und Wartungsarbeiten dürfen nur durch eine qualifizierte Fachkraft erfolgen
- Das Berühren von Bauteilen oder freiliegenden Anschlüssen kann einen elektrischen Schlag verursachen! Vor Installations- und Wartungsarbeiten ist die Versorgungsspannung zu unterbrechen, gegen unbeabsichtigtes Wiedereinschalten zu sichern und die Wirksamkeit zu prüfen.
- Aufgrund frei zugänglicher Anschlüsse ist dieses Netzteil im Betriebszustand gegen versehentliches Berühren wirkungsvoll zu sichern. Anschlussklemmen sind mit Berührungsschutz zu versehen. Im Innern herrschen gefährliche Spannungen. Bei Vorhandensein eines Gehäuses darf dieses nicht geöffnet werden
- Die auf dem Typenschild angegebenen Spezifikationen sind einzuhalten. Achten Sie auf die korrekte Spannung und Polarität, sowie die Eignung des Netzteils für die vorgesehene Verwendung. Die angeschlossene Last darf die Nennwerte für Ausgangstrom und -leistung nicht überschreiten. Einschlägige Normen und Unfallverhütungsvorschriften (UVV) zu Einbau, Anschluss und Betrieb sind zu beachten. Bei Vorhandensein eines Erdanschlusses (FG) muss dieser geerdet sein
- Bei Funktionsstörungen oder Beschädigungen umgehend von der Versorgungsspannung trennen und gegen weitere Verwendung sichern
- Das Netzteil darf nur in trockenen Innenräumen verwendet werden, nicht abgedeckt oder direkter Sonneneinstrahlung ausgesetzt werden. Nicht in der Nähe von Wärmequellen betreiben. Die zulässige Umgebungstemperatur ist dem Datenblatt oder den Spezifikationen zu entnehmen
- Dieses Schaltnetzteil ist nach den gültigen EMV-Richtlinien und -Normen entwickelt worden. Es ist als Komponente bewertet und für den Einbau in ein Endgerät entwickelt. Nach dem Einbau müssen die elektromagnetischen Eigenschaften des Endgeräts erneut überprüft werden

Bestimmungsgemäßer Gebrauch

Dieses Schaltnetzteil ist als Stromversorgung von Niederspannungsverbrauchern entwickelt worden und erfüllt die Anforderungen der entsprechenden europäischen Richtlinien. Das Netzteil ist als Komponente für den Einbau in ein Endgerät oder eine elektrische Anlage bestimmt und ist mit einem geeigneten Gehäuse zu versehen

Hinweis

Durch Kombination oder Zusammenstellung von Betriebsmitteln mit CE-Kennzeichnung entsteht nicht zwangsläufig ein konformes System. Eine erneute Bewertung der Einhaltung der vorgeschriebenen Richtlinien durch den Hersteller des Gesamtsystems ist vorzunehmen



Entsorgung

Dieses Gerät darf nicht im Hausmüll entsorgt werden. Entsorgen Sie es über eine Sammelstelle für Elektronik-Altgeräte. Weitere Informationen sowie die nächstgelegene Abgabestelle finden Sie im Internet unter www.ElektroG.de – WEEE-Reg.-Nr.: DE 31358089

User Manual and Safety Information

Read Before Use!

All models must be installed by a qualified technician only! Adhere to relevant industry standards (e.g. IEC 60364, VDE0100, VDE0105). Disconnect from mains supply in case of malfunction or damage and send the unit to the manufacturer for inspection. The unit is maintenance-free and does not contain serviceable parts. In fault condition the internal fuse (if existing) will trip off irreversibly, or the output will be shut down with an LED indicating current state

WARNING

Not adhering to the instructions contained in this manual and the product specifications might cause electric shock, fires, severe accidents, injuries, and damages to persons, animals and property!

- This switching power supply is classified as a component and is to be installed into a control cabinet or an appropriate enclosure
- Installation and maintenance is to be performed by a qualified technician only
- Contact with parts or exposed connections can cause an electric shock! Prior to installation or maintenance disconnect from mains power supply and secure effectively against accidental re-powering. Check effectiveness of measure
- In operating condition an effective protection against accidental contact to live parts is required. Connecting terminal must be outfitted with touch protection. Dangerous voltages occur on the inside of the unit. If existing, the housing must not be opened
- Adhere to the specifications on the nameplate. Check for correct voltage and polarity, as well as the suitability of the power supply for the intended use. Load must not exceed nominal values. Relevant industry standards and accident-prevention regulations for installation, connection and operation must be observed. Ground (FG), if any exists, must be connected to earth ground
- Any defective or faulty unit must not be operated and is to be disconnected from mains power immediately and secured against further use
- For dry indoor environments only. Keep dry and out of direct sunlight, do not cover. Do not operate near heat sources. Retrieve information on permissible ambient conditions from specification or datasheet
- This power supply is designed in accordance with valid EMC regulations and standards. Since being classified as a component for integration into a system, the electromagnetic characteristics of the system are to be re-evaluated

Intended Use

This switching power supply is intended for powering low voltage consuming devices and is in conformance with relevant European Directives. The unit is classified as a component for integration into a device or system and is to be installed into a control cabinet or an appropriate enclosure

Notice

Combination or assembly of different units bearing a CE mark does not necessarily form a compliant system. Re-evaluation of conformity to the mandatory directives is to be performed by the manufacturer of the completed system



Disposal

This device must not be disposed of in domestic waste. Always dispose of electronic appliances at the designated collection facilities. For more information refer to www.ElektroG.de – WEEE-Reg.-Nr.: DE 31358089

Features:


- Universal AC input / Full range
 - Programmable output Voltage (0% ~ 105%)
 - Programmable output Current (0% ~ 105%)
 - Built-in active PFC Function
 - Forced current sharing at parallel operation
(Refer to pg. 5 for connection diagram)
 - Constant current limit
 - Selectable +5V / 0.5A or +9V / 0.3A auxiliary output
 - Global control via RS232
 - Remote setting multiple PSU via RS232, RS485 & I^C
 - Power OK signal
 - Remote ON / OFF, Remote sense function
 - Protection: OVP, OLP, OTP, SCP, Fan failure



1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.
2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uF & 47uF parallel capacitor.
3. Tolerance: includes setup time tolerance, line regulation and load regulation.
4. De-rating may apply in low input voltage. Please check the de-rating curve for more details.
5. In parallel connection only one unit will operate if the total output load is less than 5% of the rated power.
6. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives.
7. This test is done without enclosure: I/P-O/P 4242VDC. If with enclosure: I/P-O/P 2121VDC, I/P-EG:2121VDC, O/P-EG: 70ZVDC

Mechanical Drawings:

Unit:mm / inch

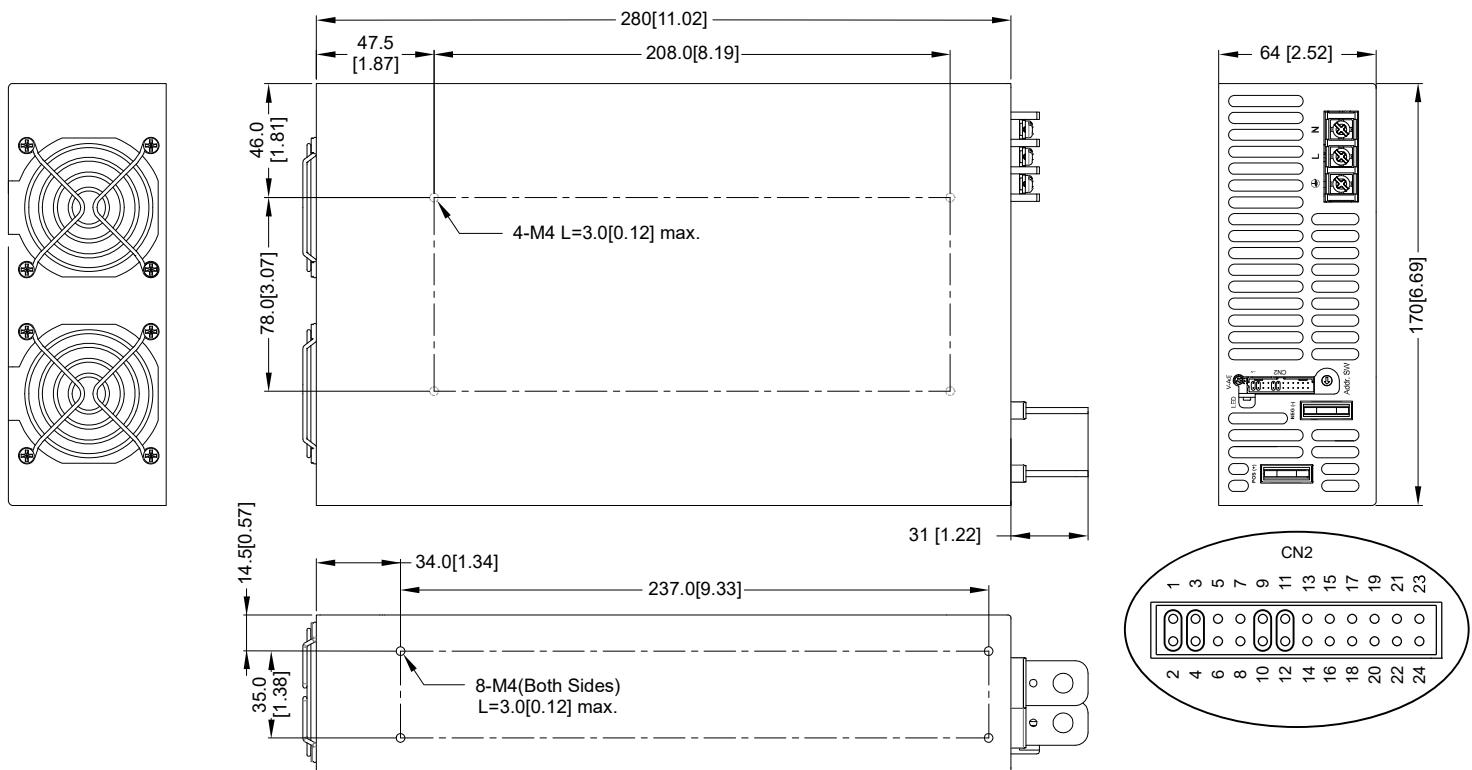

Recommended screw length is measured from the power supply surface

AC Input Terminal Pin No. Assignment

Pin No.	Assignment
L	ACL
N	ACN
±	±

Control pin number assignment (CN2): JST S24B-PHDSS or equivalent

Pin No.	Assignment	Pin No.	Assignment	Pin No.	Assignment	Mating Housing / Contact	
1	VS+	9	EN-	17	AUX	JST PHDR-24VS or equivalent	JST SPHD-002T-P0.5 or equivalent
2	VO+	10	GND	18	GND		
3	VS-	11	EN+	19	SCL		
4	VO-	12	AUX	20	SDA		
5	POK	13	ACI	21	AUX		
6	GND	14	GND	22	GND		
7	PAR	15	VCI	23	RX		
8	VSET	16	GND	24	TX		

CN2 Function Description:

Pin No.	Function	Description	Pin No.	Function	Mating Housing / Contact	
1	VS+	Remote sense (+)	13	ACI	I Program	JST PHDR-24VS or equivalent
2	VO+	Positive output voltage	14	GND	Ground	
3	VS-	Remote sense (-)	15	VCI	V Program	
4	VO-	Negative output voltage	16	GND	Ground	
5	POK	Power OK	17	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power	
6	GND	Ground	18	GND	Ground	
7	PAR	Parallel operation current share	19	SCL	Serial Clock used in the I ² C interface	
8	VSET	Aux output setting	20	SDA	Serial Data used in the I ² C interface	
9	EN-	Inhibit ON/OFF (-)	21	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power	
10	GND	Ground	22	GND	Ground	
11	EN+	Inhibit ON/OFF (+)	23	RX	For RS232 Receiver function	
12	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power	24	TX	For RS232 Transmission function	



■ LED Status:

LED	LED Signal	Status
Solid(Green)	solid green	Power OK (Local mode)
Solid(Orange)	solid orange	Power OK (Remote mode)
Slow Blink(Green)	slow green	Power Standby
Fast Blink(Red)	fast red	Over Voltage Protection (OVP)
Solid(Red)	solid red	Over Load Protection (OLP)
Slow Blink(Red)	slow red	Over Temperature Protection (OTP)
Intermittent Blink(Red)	intermittent red	Fan Failure
Interlace Blink(Red)	interlace red	Power Failure


*Local mode : Use ACI/VCI control output current and voltage.

Remote mode : Use RS-232 or I²C command control output current and voltage.


■ De-rating Curve:

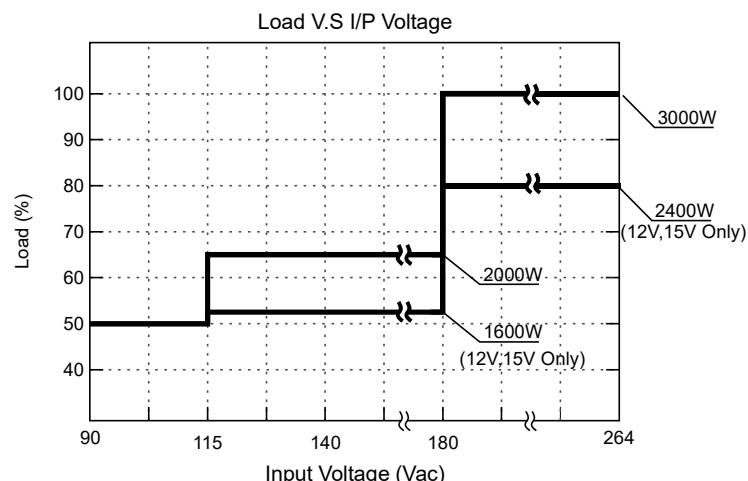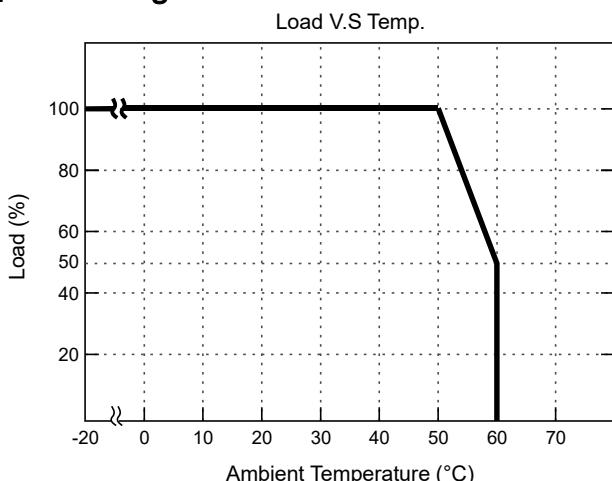


■ CMD VS Output Curve:

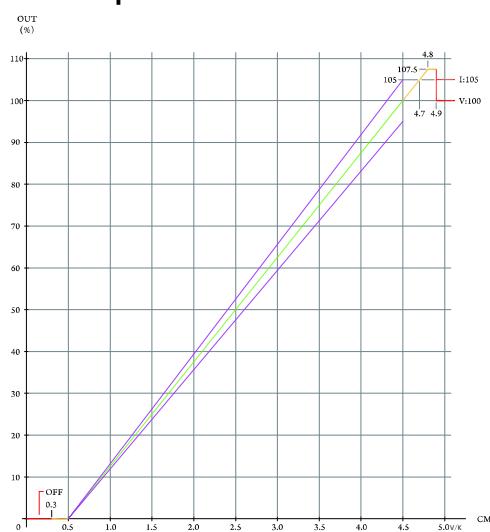


■ VCI VS OVP Curve:

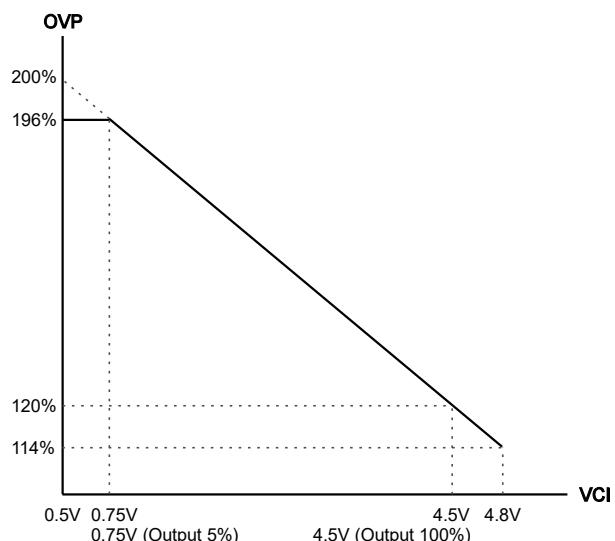




To ensure the power supply output voltage and current could be accurately adjusted, please make sure to adjust the output voltage and current > 10% vs. the rated voltage and current. (e.g. for a 24V unit, please adjust the DC output voltage above 2.4V to ensure accuracy; same applies to the output current)

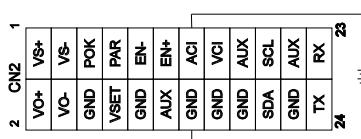

External Voltage (VDC)

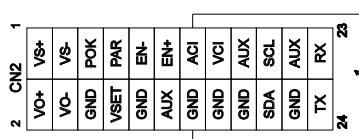


External Resistor (KΩ)

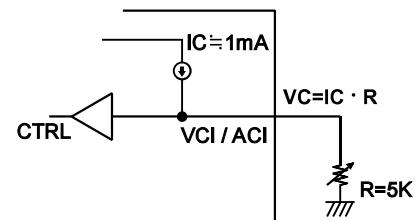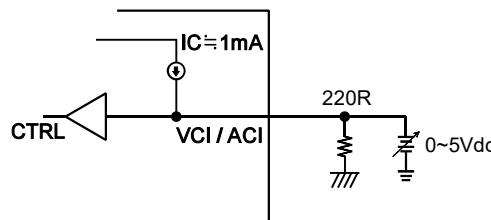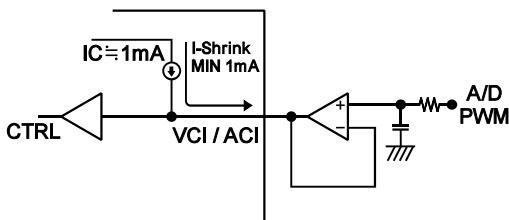


■ Remote ON/OFF:

(A) Default Setting

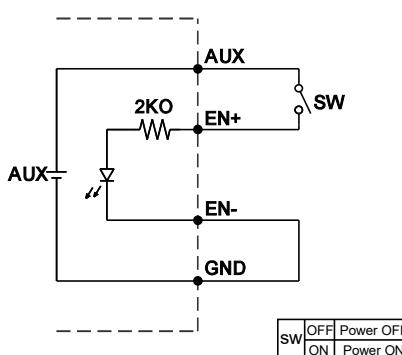


(A) Using internal 5V auxiliary source

(B)

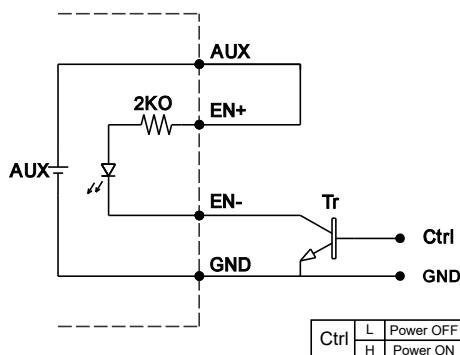

(B) ON / OFF Control by NPN transistor

(C)

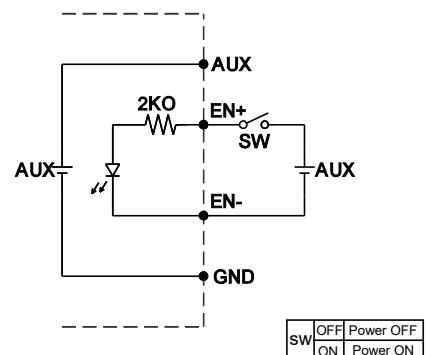


(C) Using external voltage source

GND shown in above diagram is referring to the GND of CN2, not the Grounding from main power(NEG-).

■ Power OK Signal & Auxiliary Power Setting:


*The grounding of "AUX" power and P.OK signal should be connected to "GND" port. If "VO-" is connected as Grounding, make sure to short the GND and VO- ports.

Open drain signal low when PSU turns on, Max. P.OK sink current: 20mA, Max. drain voltage: 40V.

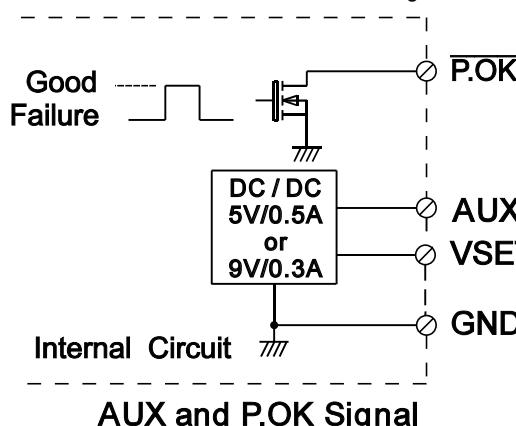


AUX and P.OK Signal

*Place an additional capacitor to have a better performance of auxiliary power operation.

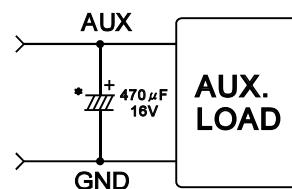


Do NOT exceed 5V/0.5A or 9V/0.3A


1. Remote Sense

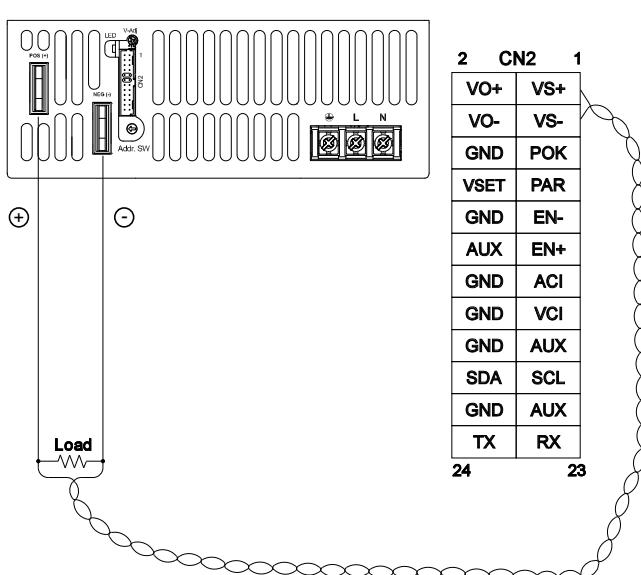

2. Local Sense (Default setting)

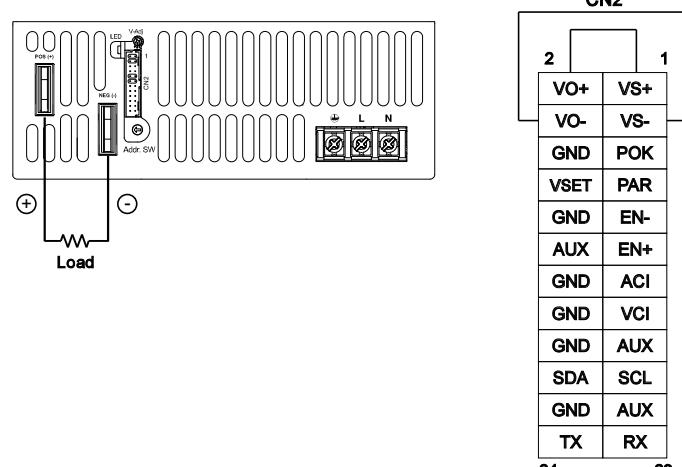


3. Current Sharing with Remote Sensing

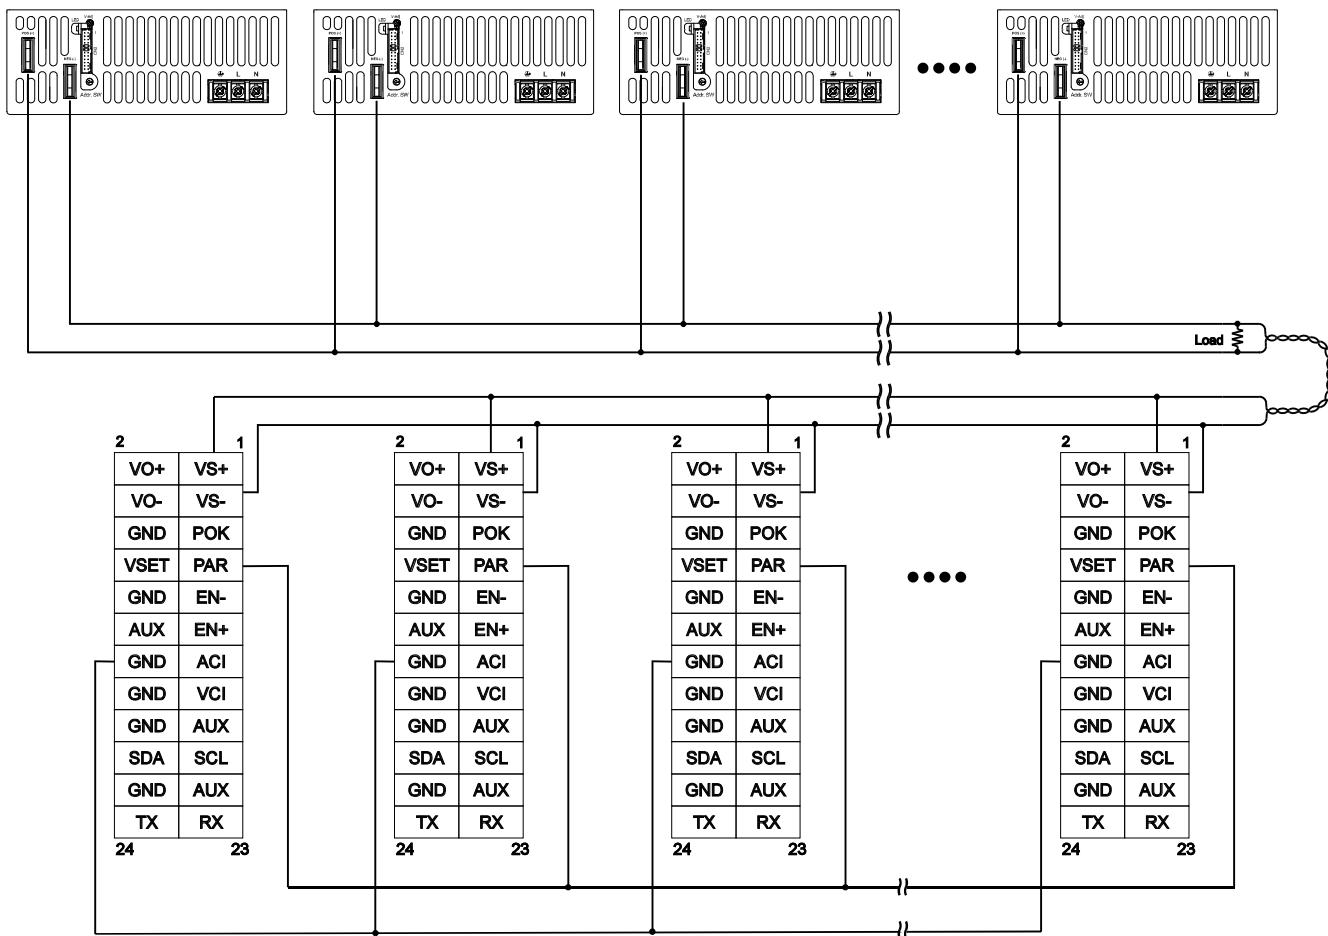

Please connect PAR pins together for current sharing function

For Series connection, make sure to isolate CN2 control signals

4. Current Sharing with Local Sensing

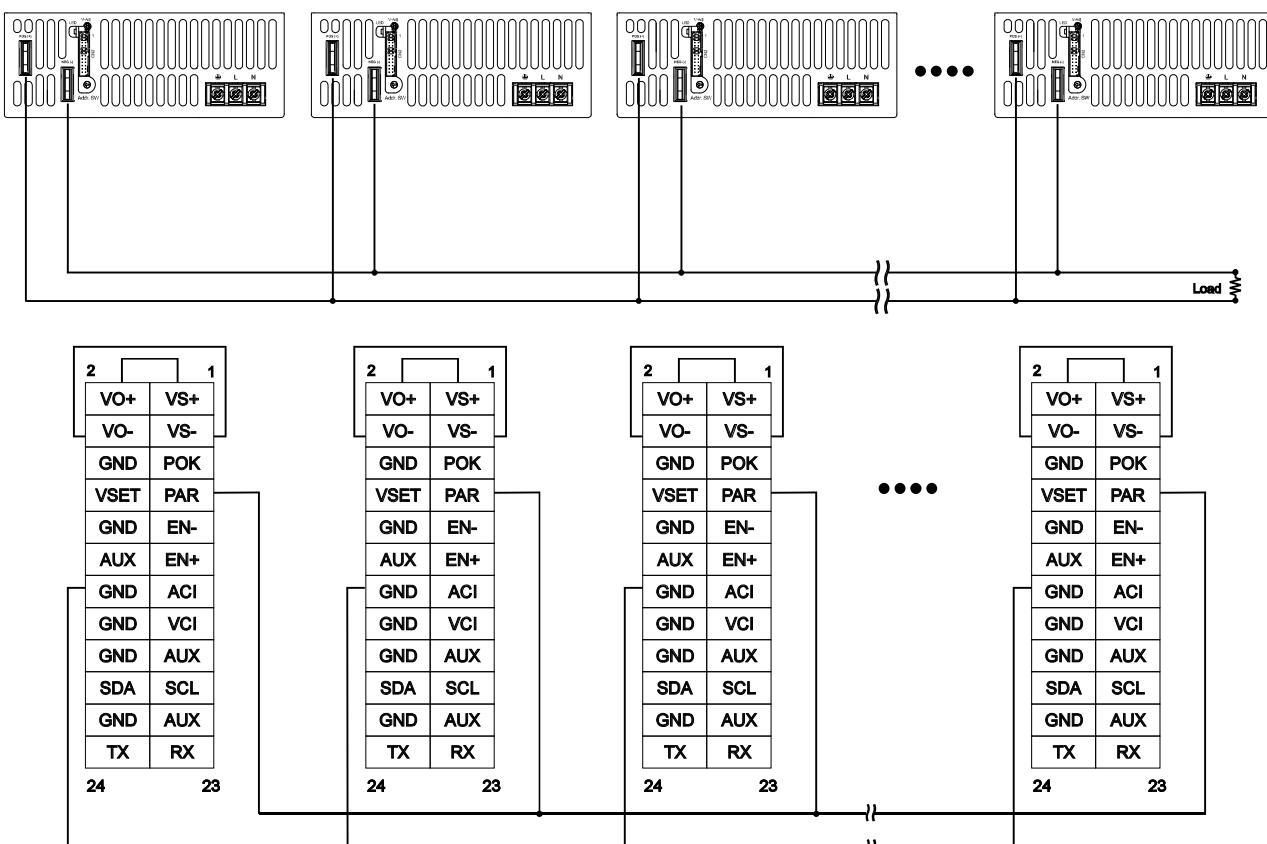


Please connect PAR pins together for current sharing function

For Series connection, make sure to isolate CN2 control signals

■ Installation Instruction:

1. Mounting Directions

1-1 Recommended standard mounting methods:

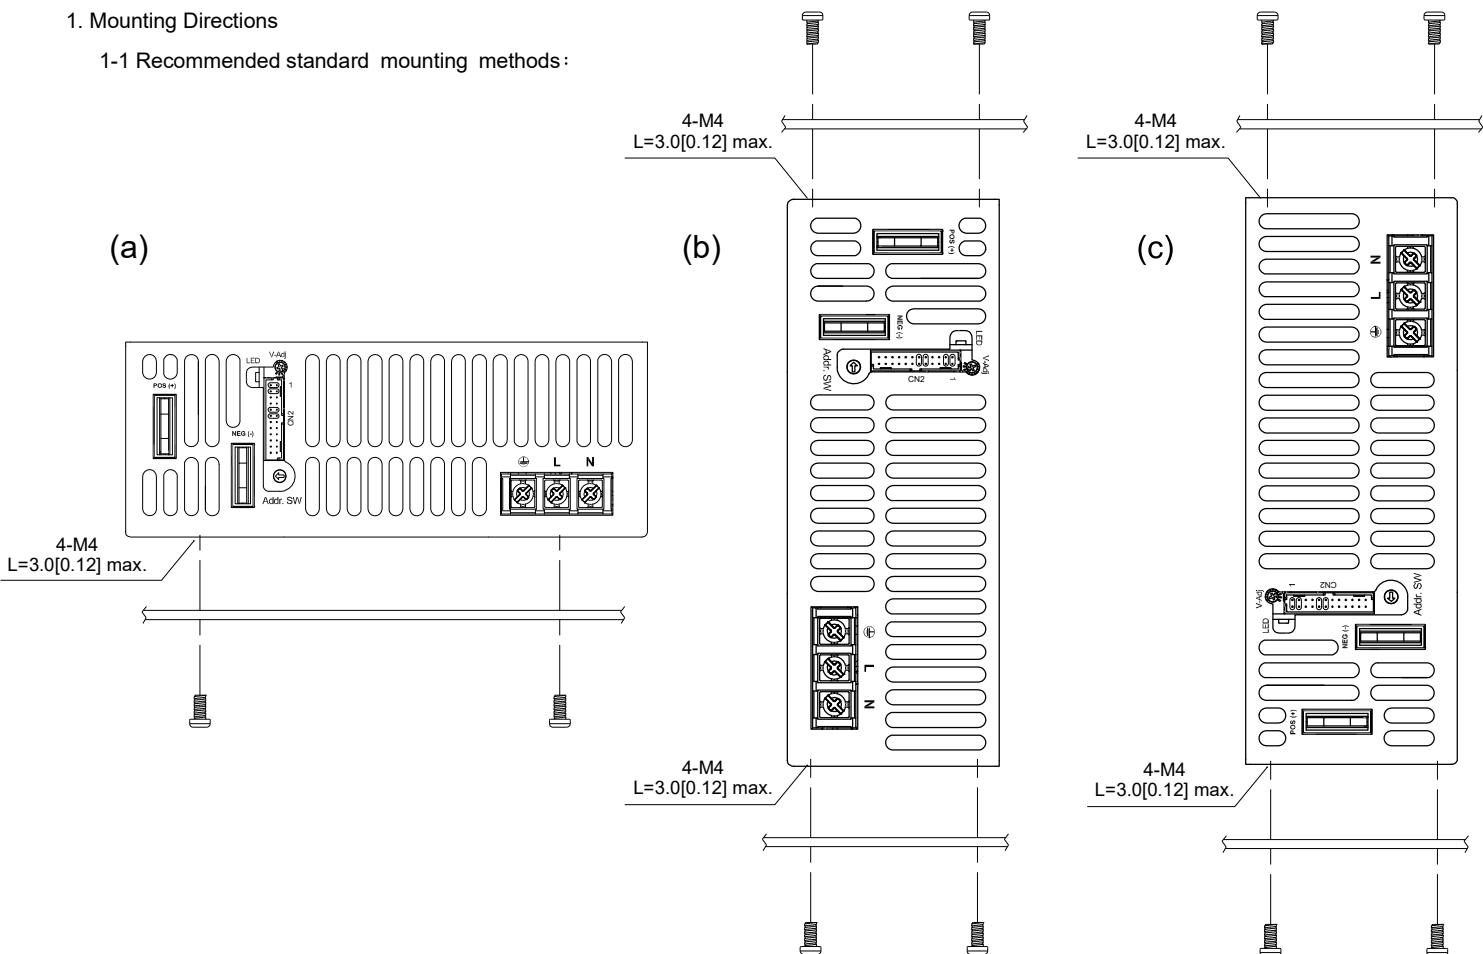

Recommended screw length is measured from the power supply surface

2. Mounting Method

2-1 There are ventilating holes on the front and back side panels, do not obstruct; allow 50mm at least for air flow.


2-2 The Maximum allowable penetration of screw is 4mm.

Incomplete threading should not be penetrated.

2-3 Recommended the torque of mounting screw:

M4 screw: $1.27\text{N} \cdot \text{m}$ ($13.0\text{kgf} \cdot \text{cm}$)

More than 50mm

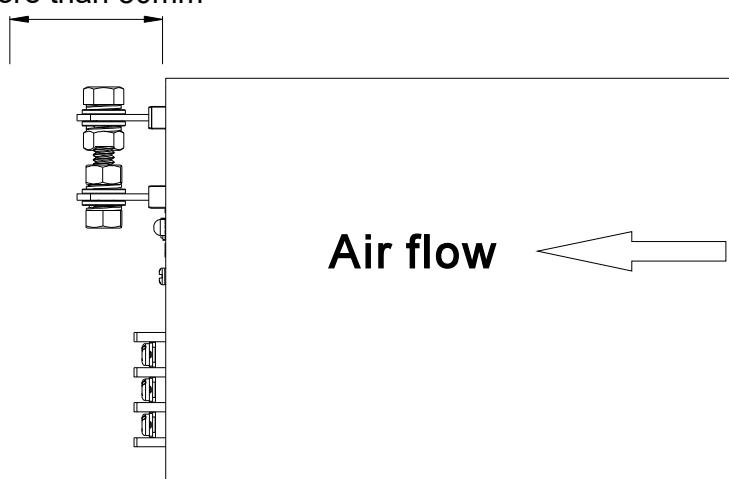

More than 50mm

